

CONNECTED  
TO YOUR HOME



### SMART CONTROL



**Remote Control**

Control your laundry pair anytime, anywhere with MSmartHome.



**Real-time Reservation**

Set your laundry schedule easily and arrange your time wisely.



**Cloud Program**

Access more programs and options with MSmartHome.

### MESSAGE PUSH



**Filter Clean Reminder**

Remind you to clean the filter regularly for better drying performance.



**Error Status Alerts**

Alert error status in real time and provide simple troubleshooting.



**Program Completion Push**

Get notification on your phone when program is finished.

### LAUNDRY CARE



**Laundry Expert**

Have no idea of program selection? MSmartHome gives you professional laundry expert.



**Program DIY**

Customize up to 5 programs and save for later use conveniently.



**Auto Link**

Proper drying program will be automatically set to match with washing program.

\* The schedule for each feature's availability may vary by country or region.

# QUICK START GUIDE

1

## Download the MSmartHome App

Scan QR code or find us on your app store



2

## Register and log in

Log in for existing users or sign up for new users



3

## Connect your devices to MSmartHome

**A.** Connect to wireless network and enable Bluetooth

**B.** Open MSmartHome app. Power on selected device

**C.** Add your device using one of the following methods:



## Quick Tips

- Make sure your devices are powered on.
- Keep your mobile phone close enough to your device when you are connecting your device to the network.
- Connect your mobile phone to the wireless network at home, and make sure you know the password of the wireless network.
- Check if your wireless router supports 2.4 GHz band and turn it on. If you are not sure whether the router supports 2.4 GHz band, please contact the router manufacturer.
- The device cannot connect to the wireless network that requires authentication, and it usually appears in public areas such as hotels, restaurants, etc. Please connect to a wireless network that does not require authentication.
- Turn off the WLAN+ (Android) or WLAN Assistant (iOS) function of your mobile phone when connecting your device to the network.
- In the case that your device connected to a wireless network before but it needs to reconnect, please click "+" on the app Home page, and add your device again by the device category and model according to the instructions on app.