



**7** D×2:

Back Front

Dryer

D Rear Front

If the dryer base is metal:

1. Unscrew the front two adjustment feet of the dryer downwards
2. Insert two fixing parts D
3. Tighten the two adjustment feet upwards

**8**

Back Front

Dryer

Washer

Place the dryer at the back of the top of the washer, and then push the dryer forward until the hole matches the hole

**9** G×4:

Dryer

Washer

G G

G G

If the dryer base is not metal, tighten the front and rear four screws G.

**10** A×2:

Dryer

Washer

A

If the dryer base is metal, only tighten the front two screws A.

**11** EX2: FX2:

Dryer

Washer

F F

E E