

 
CONGA

ROCKSTAR

CONGA ROCKSTAR 3000 MATTRESS

Aspirador de colchones con luz UV y cepillo motorizado/

Mattress vacuum cleaner with UV light and motorised brush.

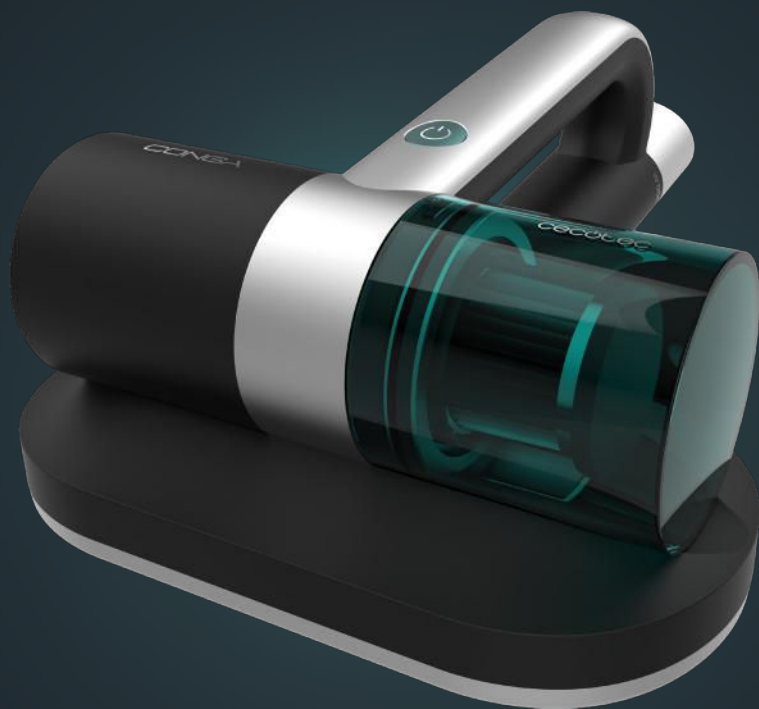

cecotec

Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití

INDEX

1. Parts and components	34
2. Before use	34
3. Operation	34
4. Cleaning and maintenance	35
5. Troubleshooting	36
6. Technical specifications	37
7. Disposal of old electrical and electronic appliances	37
8. Technical support and warranty	37
9. Copyright	38

SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the product. Keep this instruction manual for future reference or new users.

- All safety instructions must be closely followed when using the appliance.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance should not be carried out by unsupervised children.

- Supervise children to prevent them from playing with the appliance. Close supervision is necessary when the appliance is being used by or near children.
- Check the power cord regularly for visible damage. If the cord is damaged, it must be repaired by the official Technical Support Service of Cecotec to avoid any type of danger.
- This appliance contains a UV-C emitter.
- Improper use of the appliance or damage to the housing may cause UV-C radiation to be emitted. UV-C radiation can damage the eyes and skin, even in small doses.
- Do not use the appliance if it is visibly damaged.
- Do not try to repair the UV-C emitter by yourself. Contact the official Technical Support Service of Cecotec. The appliance must be unplugged before replacing the UV-C emitter.
- Switch off and unplug the product from the power outlet when not in use and before cleaning or maintenance. Unplug it when it is not going to be used for a while. Pull from the plug, not the cord, to disconnect it from the outlet.
- The appliance must be powered at a low safety voltage as stated on the product marking.
- WARNING: the appliance has rotating parts which may pose a risk of entrapment. Exercise extreme caution.
- Make sure that the mains voltage matches the voltage stated on the product marking and that the wall outlet is grounded.
- Do not immerse the cord, plug, or any non-removable part of the product in water or any other liquid. Do not expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- Do not use the device to vacuum hot objects such as charcoal or cigarette butts, sharp objects such as broken glass, corrosive liquids, or flammable or explosive materials such as gasoline or alcohol.

- Do not use the product to vacuum up water or wet dirt and avoid using it near water or in damp places such as bathrooms, toilets, or laundry rooms.
- Do not look at the UV-C lamp at the bottom of the device, as it may be harmful to the eyes and skin.
- Do not expose plants or people to UV-C rays, as it may cause damage. Do not use ultraviolet rays on the same spot continuously to avoid damaging the object to be cleaned.
- Do not disassemble the UV-C lamp.
- Do not remove the rotary brush cover or force it off to avoid damaging the product.
- Use this product only to clean and remove dust mites from textiles such as mattresses, duvets, pillows, and sofas.
- Avoid exposing the device to direct sunlight and keep it far from heat sources.
- Do not move the product or pull from its power cord. Do not use the power cord as handle. Do not push the cord against corners or sharp edges. Do not pass the product over the power cord. Keep the cord away from hot surfaces.
- Do not use the appliance if its cord, plug, or housing are damaged, nor after it malfunctions or has been dropped or damaged in any way.
- This device is not intended to be operated by means of an external timer or separate remote-control system.

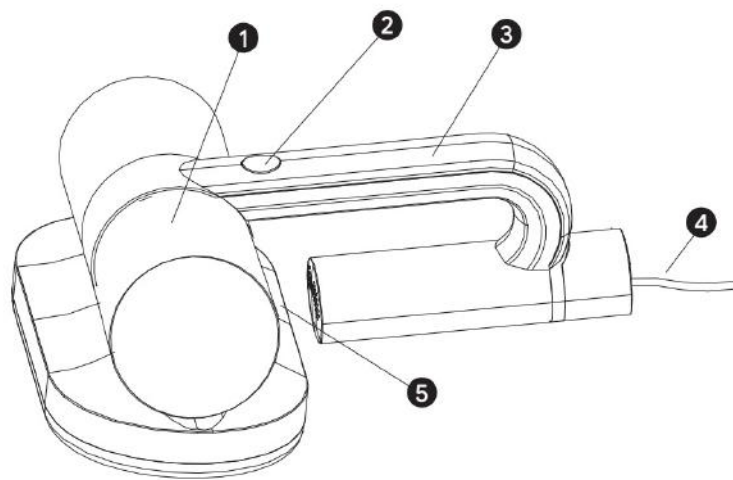 


Fig./Img./Abb./Rys./Obr. 1

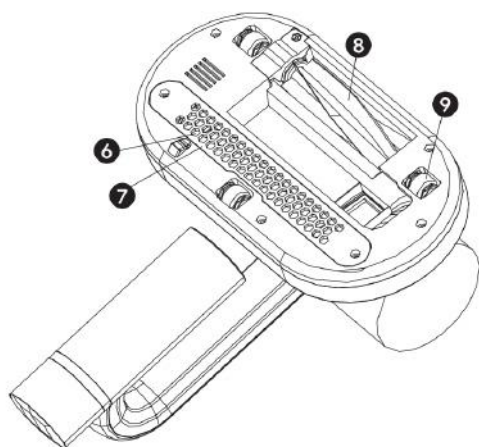 


Fig./Img./Abb./Rys./Obr. 2

1. PARTS AND COMPONENTS

Fig. 1

1. Dirt tank
2. On/Off button
3. Handle
4. Power cord
5. UV-light indicator

Fig. 2

6. UV light
7. UV-light protection
8. Rotary brush
9. UV-light push switches

NOTE:

The graphics in this manual are schematic representations and may not exactly match the product.

2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent product damage when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If any of them are missing or not in good condition, please contact Cecotec's official Technical Support Service immediately.

3. OPERATION

Full-cleaning mode: suction, brush rotation, and dust-mite removal

- Turn the device on. The device will operate in full-cleaning mode by default, i.e., suction, brush rotation, and dust-mite removal (UV-C light).
- Once the device is switched on, place it on a surface to activate the UV-light push switches

and allow the lamp to turn on. The corresponding light indicator will light up.

- Press the On/Off button to turn off the device.

WARNING

To avoid accidental damage, place the UV-C lamp on the object to be irradiated and avoid tilting it more than 10°. Exceeding this tilt degree will make the UV-C lamp automatically switch off.

4. CLEANING AND MAINTENANCE

- It is recommended to clean the dirt tank after each use; when the dirt filter becomes blocked by excessive dirt, clean or replace it if necessary.
- If the dirt tank fills up during operation, clean it immediately.
- When the device reaches 30 to 50 hours of operation (depending on usage), it is recommended to change the filter to ensure proper operation.
- UV penetration is weak. Any paper, glass, or plastic can significantly reduce the intensity of UV radiation. For this reason, any dirt or stain on the lamp tube will directly affect the penetration of UV rays. UV lamps should be cleaned regularly to avoid impairing the transmission and intensity of UV rays.
- Do not touch the UV lamp with your fingers, as finger smudges may affect UV-light penetration.
- If the device is not to be used for a long period of time, store it in a cool and dry place. Do not store it under direct sunlight or in damp places.

Cleaning the dirt tank

1. Turn off and unplug the device.
2. Place the appliance in an upright position.
3. Turn the dirt tank clockwise and remove the dirt-tank lid.
4. Remove the filter from the dirt tank.
5. Clean the dirt tank.

5. TROUBLESHOOTING

Problem	Possible causes	Possible solutions
The appliance does not work.	The plug is not properly inserted into the socket.	Make sure the plug is properly inserted into the socket.
	The socket has no power.	Check the condition of the socket.
	The On/Off button was not pressed.	Press the On/Off button.
Suction power decreased.	The suction inlet is too dirty.	Clean the suction inlet.
	There are too many foreign objects in the filter and in the dirt tank.	Clean the dirt tank and the filter.
	Too many foreign objects blocking the cyclone's secondary air flow.	Remove foreign objects from the cyclone's secondary air flow.
The UV light doesn't work.	The UV light does not reflect well on the surface of the object to be cleaned or is too far away from it.	Under normal conditions, the UV light will start automatically when the UV-light push switches are pressed.
	The appliance stops.	Move the appliance back and forth on the quilt.
	The appliance is placed upright.	The inclination of the appliance must not exceed 10°.
	The transparent film of the infrared detector on the underside of the appliance is covered with dust or dirt.	Wipe the transparent film of the detector with a half-damp cotton cloth.
	The UV tube is damaged.	Please contact the Technical Support Service of Cecotec to replace the UV tube.

The appliance suddenly stops working.	The dirt tank is full.	To prevent the motor from overheating, the appliance is equipped with a protection mechanism. If the appliance overheats, switch it off and unplug it from the mains, clear the blockage, and wait 2 hours before use.
	The suction inlet is blocked.	
	The filter is blocked by foreign objects.	

6. TECHNICAL SPECIFICATIONS

Product: Conga RockStar 3000 Mattress

Product reference: 05569

Nominal voltage: 220 - 240 V~

Rated frequency: 50 - 60 Hz

Rated power: 300 W

Technical specifications may change without prior notification to improve product quality.

Made in China | Designed in Spain

7. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or cells must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

8. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec's official Technical Support Service at +34 963 210 728.

9. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

www.cecotec.es

Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

EA01221108