



PRODUCT USAGE AND INSTRUCTIONS

+ **Classic™**

INSTRUCTIONS FOR USE:

- ALL PARTS ARE TOP-RACK DISHWASHER SAFE.
- RINSE WITH WARM WATER IMMEDIATELY AFTER EACH USE.
- DO NOT MICROWAVE, FREEZE, OR BOIL.
- NOT FOR USE WITH HOT LIQUIDS.

WARNINGS:

- HOT OR CARBONATED CONTENTS MAY BUILD PRESSURE WITHIN THE BOTTLE AND CAUSE THE FLIP TOP TO OPEN UNEXPECTEDLY AND SPRAY CONTENTS.
- OTHER CONTENTS (SUCH AS PANCAKE BATTER OR SPOILED BEVERAGES) MAY BUILD PRESSURE AND LEAK OR SPRAY OUT UPON OPENING.
- ALWAYS OPEN WITH CAUTION.