




## AIR SKI MACHINE

### TROUBLESHOOTING: INTERMITTENT READING ISSUE ON MONITOR

Thank you for purchasing our SMAI Air Ski Machine. If your monitor appears to be fading out, then you may be experiencing an intermittent reading issue on your monitor between the monitor and the generator. To troubleshoot this issue, please follow the below steps.

1. Remove the right outer cover on the main frame.

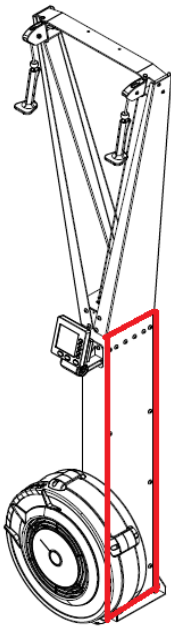


TIP: Whilst you have the outer cover open, you can also do a simple maintenance check of your cords.



2. Check and clean the connection behind the monitor to ensure it is free from dust and debris.
3. Within the cavity you should be able to identify a black cable that connects the monitor to the battery. Unplug this cable and reconnect, and check if your monitor is working properly. If it does not, continue with the following steps. If it does work, skip Step 4 and 5, and proceed to Step 6.

SALES@SMAI.COM.AU

4. On the male component, you should be able to identify 3 pins. The pins just need to be bent very slightly to better contact the internal of the female plug. This will help to strengthen the contact between the plugs and bring back the correct connection from the generator to your monitor.

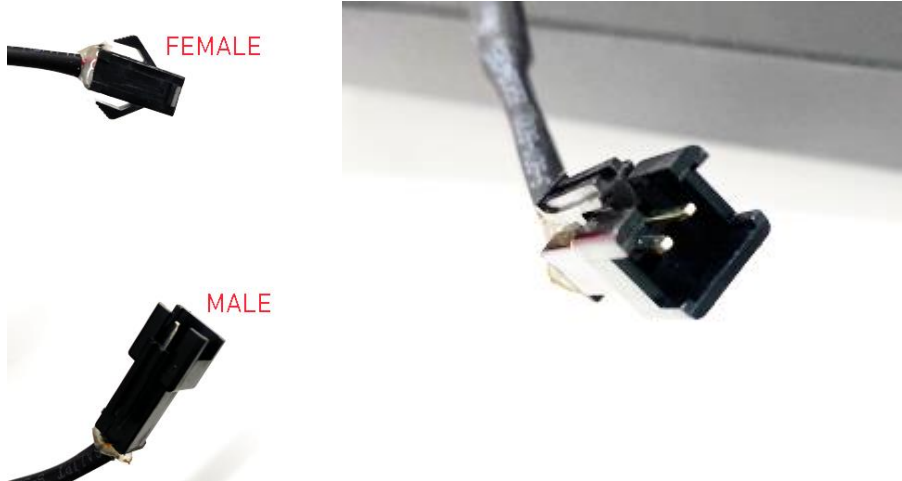

5. You can also check to make sure there is enough slack on your cable internally as well. If too much cable has been pulled out at the back of the monitor, then they may also cause the internal plug to dislodge. Once you do this, check your monitor again to test the connection is working successfully.
6. Once this is complete, you can screw the cover back on.