


ALWAYS INSTALL GOPRO


BEFORE POWERING ON MOTORS!


FAILURE TO DO SO CAN DAMAGE THE UNIT!

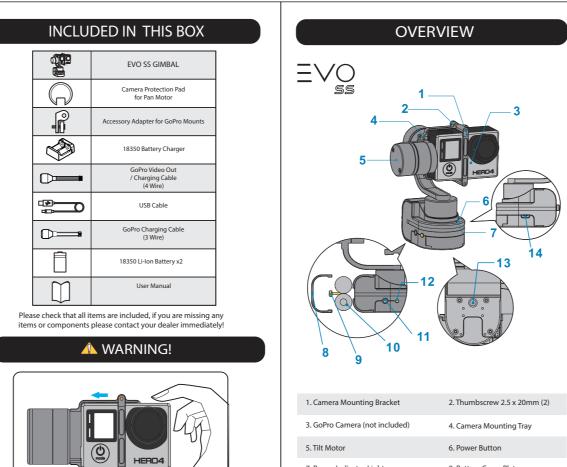

11. Video Output Port (3.5mm) 12. Mode Button

13. 1/4-20 Screw Thread 14. Micro USB Port

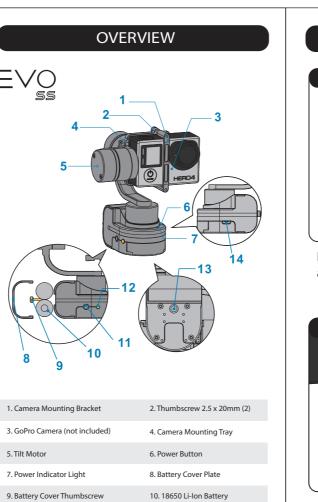

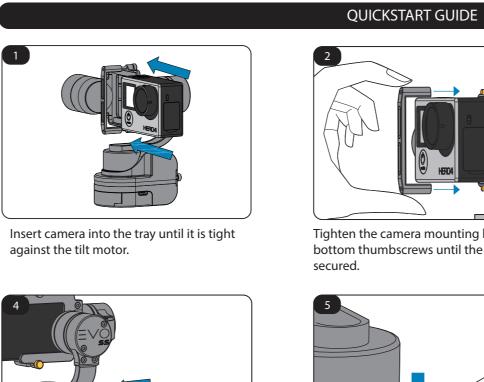


Carefully install both charged batteries noting

the correct direction, then slide the battery

cover plate in place and tighten the battery

cover thumbscrew.

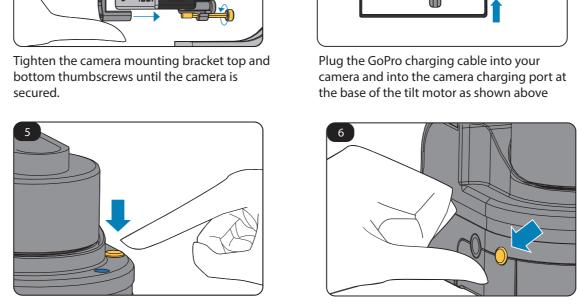


To power on the motors press and hold the

Mode Button for 2 seconds. Modes can be

twice (see operating modes for more details)

switched by pressing the mode button once or

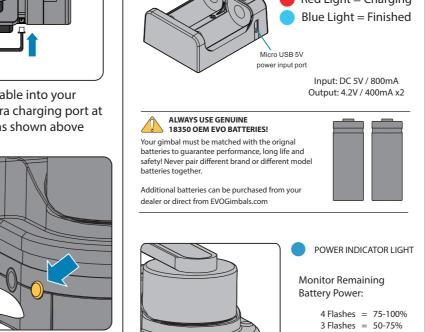

higher mA rating AC/DC adapter.

CHARGING BATTERIES


Connect charger to any standard USB outlet or phone charger using


the included Micro USB cable. Batteries take approximately 2 to 3


hours to fully charge. Shorter charge times can be achieved using


2 Flashes = 25-50% Flashes Quickly = 0-25%

Downloads.

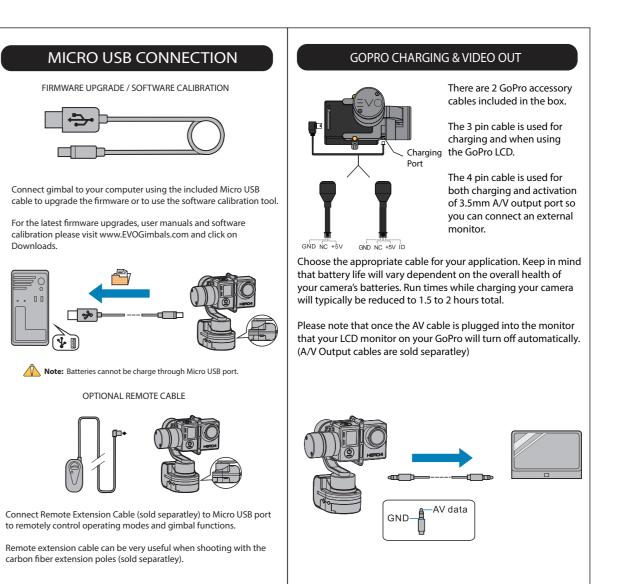

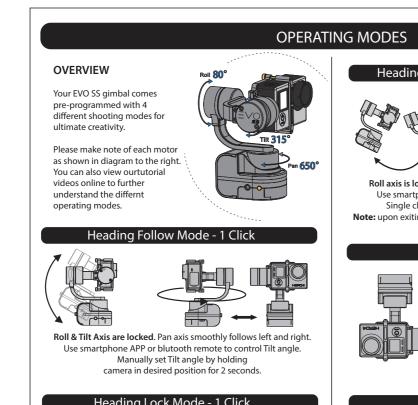


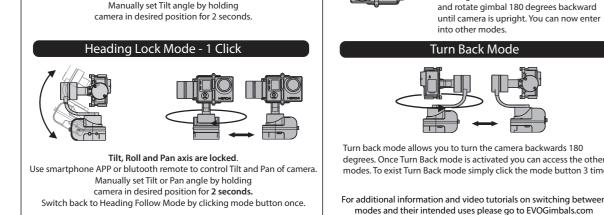


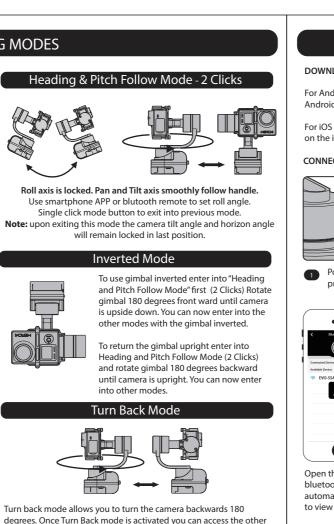

Suite 200 Bend, Oregon 97701

FECE 🌣 🗵

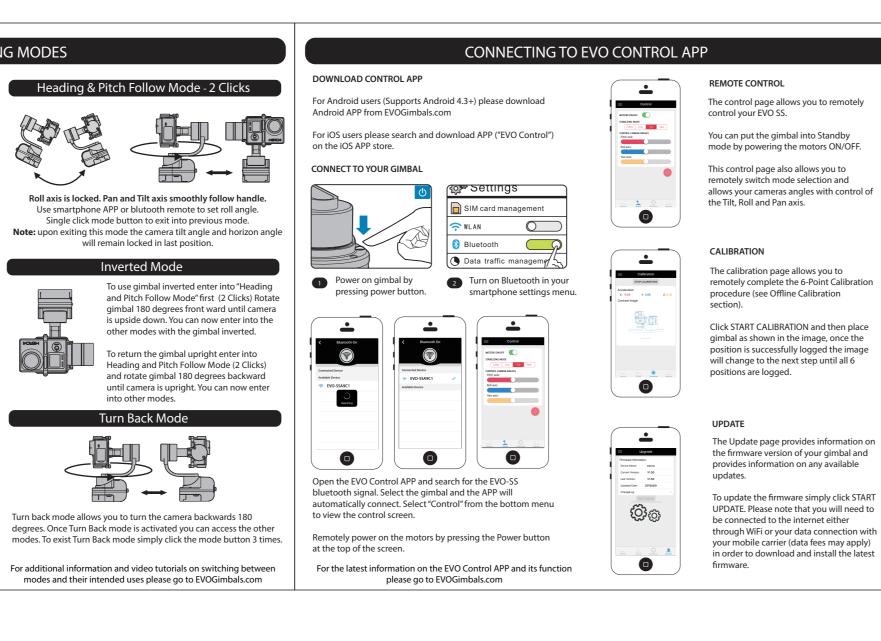

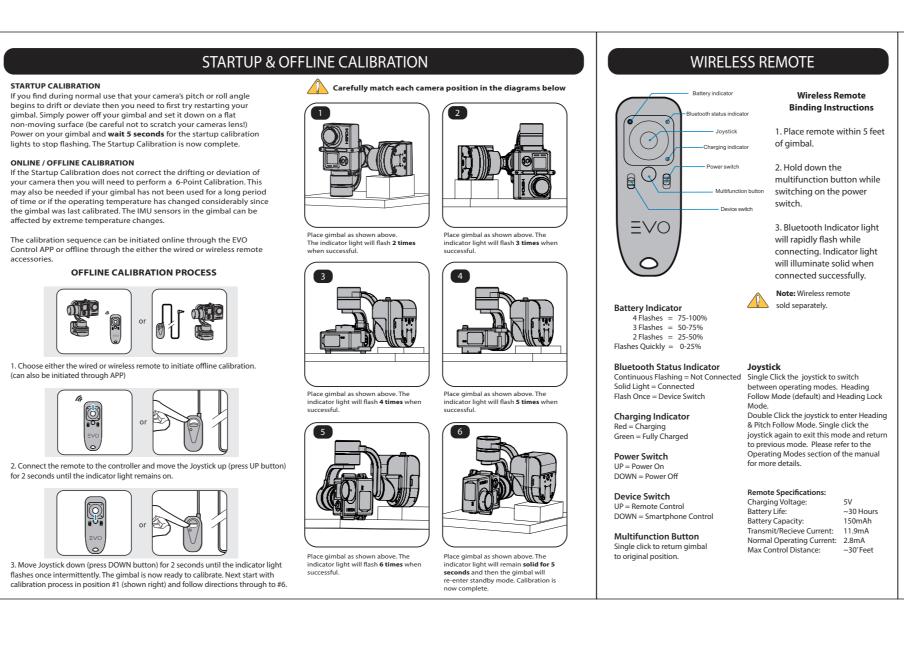

With the gimbal on a flat non-moving surface

press the power button once and wait 4-5

seconds for the gimbal to initialize.

