

Portable DVD Player

USER MANUAL



DARTWOOD

a WASSERSTEIN brand

Overview

The Dartwood 10.1" Portable DVD Player is a convenient and versatile device that lets you watch DVDs and digital media on the go. Its compact and lightweight design makes it perfect for travel, road trips, or just enjoying your favorite movies anywhere.

 
In the Box



1 x 10.1" portable
DVD player




1 x remote control



1 x 110-240 V
AC adapter




 1 x car adapter




1 x AV cable

 Introduction to Parts

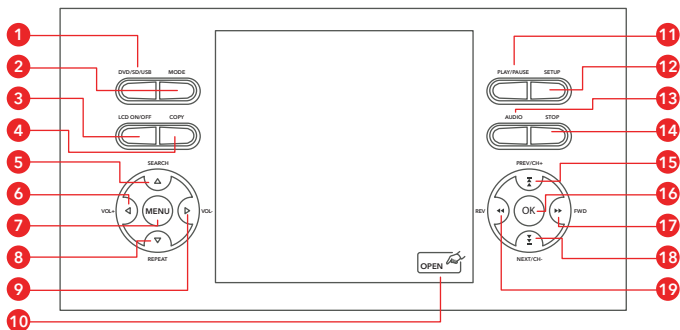

- | | |
|---------------|----------------|
| 1. DVD/SD/USB | 11. PLAY/PAUSE |
| 2. MODE | 12. SETUP |
| 3. LCD ON/OFF | 13. AUDIO |
| 4. COPY | 14. STOP |
| 5. SEARCH | 15. PREV/CH+ |
| 6. VOL+ | 16. OK |
| 7. MENU | 17. FWD |
| 8. REPEAT | 18. NEXT/CH- |
| 9. VOL- | 19. REV |
| 10. OPEN | |

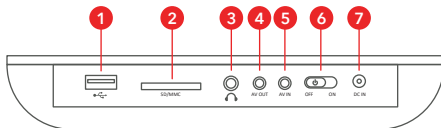 

- | | |
|-------------------|-----------|
| 1. USB | 5. AV IN |
| 2. SD/MMC | 6. ON/OFF |
| 3. Headphone jack | 7. DC IN |
| 4. AV OUT | |

Panel Keys

MENU: Press to return to the root menu of the DVD.

STOP: Press to stop the current video.

PLAY/PAUSE: Press once to pause, and press again to resume.

SETUP: Press to enter the setup menu, then use the direction key on the right side and press OK to set the system menu. Press the SETUP button again to exit.

DVD/SD/USB: Press repeatedly to switch the input source: DVD/SD card/USB mode.

DIRECTION KEYS: Use direction keys for Previous / Next / Fast forward / Rewind.

OK: Press to enter the selected item or choice.

OPEN: Press to open the disc cover.

AUDIO: Press to select the available languages provided on the DVD.

VOL+ / VOL-: Press VOL+ to turn up the volume and VOL- to turn down the volume.

LCD ON/OFF: Press to switch OFF and ON the LCD screen.

COPY: Press to copy music to a USB memory stick or SD card.

MODE: Press to select AV, TV, or FM.

SEARCH: Press to search the channel when in use with analog TV or FM. It needs to work with a TV antenna (not included).

REPEAT: Press to choose to repeat Chapter, Title, or All.

Remote Control



Note:

1. Insert 2x AAA batteries (not included) in the remote control before use.
2. Do not mix old and new batteries, alkaline and carbon-zinc batteries.
3. Do not disassemble the remote.
4. If you are not going to use the remote for an extended period, take out the batteries to prevent leakages.

Usage Notes

1. To ensure maximum playback time, make sure you fully charge the battery.
2. Always use the included AC or car adapter to power the DVD player. Using other power sources may damage the device.
3. To avoid damage, keep the DVD player away from extreme temperatures, humidity, and direct sunlight.
4. Use a soft, dry cloth to clean the DVD player. Do not use abrasive or chemical cleaning agents, as they may damage the device.
5. Avoid shaking or dropping the DVD player, as this may damage the internal components.
6. Please DO NOT touch the Laser head or other parts with your hands.
7. Please DO NOT pull or use force to open the disc cover directly with your hands.
8. There will be some humming or other noise when the player is reading the disc. This won't affect the playback or viewing.
9. If using headphones, adjust the volume to a safe level to avoid hearing damage.
10. If traveling with the DVD player, ensure that it is securely packed and protected to prevent damage during transit.
11. Use the screen rotation function to adjust the screen to a comfortable viewing angle.
12. If experiencing playback issues, ensure that the disc or digital media file is properly formatted and supported by the DVD player. If the problem persists, refer to the user manual or contact the manufacturer for assistance.

Operation Guide

Charging the battery

Use the included AC adapter to charge the battery before using the DVD player. A full charge takes approximately 6 hours and provides up to 3 to 4 hours of playback time.

Inserting a DVD

To watch a DVD, insert it into the disc slot on the side of the DVD player. The DVD player will automatically start playing the disc.

Using the remote control

The remote control lets you control the DVD player from a short distance. Use it to adjust the volume, skip chapters, pause or play, and perform other functions.

Connecting to a TV:

Use the included AV cable to connect the DVD player to a TV for larger-screen viewing. Simply connect the yellow, red, and white plugs to the corresponding TV and DVD player AV OUT. The player has AV IN for connecting external audio and video inputs as well.

Using headphones:

The DVD player has a headphone jack that lets you listen to audio privately. Simply plug in your headphones (not included) to enjoy audio without disturbing others.

Functions & Features

Playback options

The DVD player supports various playback options, including DVD, CD, VCD, AVI, RMVB, FLV, MP3, WMA, JPEG, and MPEG4 formats (Blu-ray discs are not supported).

Loading and playing a disc

- After connecting power to the unit, set the power switch to the "**ON**" position.
- Push "**OPEN**" to open the disc tray. Place a disc in it with the label side facing up.
- Close the disc tray. The unit will load the disc and start playing.

Disc playback

- After the unit loads a disc, a menu showing the contents of the disc will display on the screen.
- Use the navigation keys on the right side to make your selections and press "**OK**" to confirm.

Screen display

The DVD player has a 10.1-inch TFT LCD screen with a 1024x600 resolution for clear and bright viewing. Press "**SETUP**" and select "**TV Type**" to do the screen display setting.

- **4:3 PANSKAN** - If the player is connected to a conventional TV set, a wide-screen image will be displayed on the screen in its native aspect ratio, with some parts on the left and right cut off.
- **4:3 LETTERBOX** - If the player is connected to a conventional TV set, a wide-screen image will be displayed in its native aspect ratio with black borders on the top and on the bottom.

- **16:9 WIDE** - Select this option if the player is connected to a wide-screen TV set. A wide-screen image will be displayed in its native aspect ratio, while a 4:3 image will be stretched out horizontally to fit the screen.
- **OSD (on-screen display) language** - Sets the on-screen display language.
- **LAST MEMORY** - When this is turned "**ON**", the unit will remember the point at which the disc was stopped. Next time you turn on the player and play the same disc, it will play from that point. Turn it "**OFF**" to disable the last memory function.

Built-in speakers

The DVD player has built-in stereo speakers for audio playback without headphones. Press "**SETUP**" and select "**DIGITAL SETUP**". Stereo, Mono L/R and Mix Mono can be selected.

Video/panel quality

Press "**SETUP**" and select "**VIDEO SETUP**". Sharpness, Brightness, Contrast, Hue, and Saturation can be adjusted according to your preference.

System Setup

Press "**SETUP**" to go to the menu of "**SYSTEM SETUP**" which you can set your preference setting on Last memory, TV Type, Password and Rating and Default (restore to factory default settings).

USB and SD card support (up to 32GB)

The DVD player has a USB port and an SD card slot that allows you to play digital media files from external storage devices.

1. Insert a USB drive or a card reader into the USB port.
2. Press "**DVD/SD/USB**" to select "**USB Mode**" to play the readable files from the source.
3. Insert an SD/MMC card into the SD/MMC card port.
4. Press "**DVD/SD/USB**" to select "**SD Card Mode**" to play the readable

Screen rotation

The screen can be rotated up to 270 degrees for variable viewing angles.

Power options

The DVD player can be powered by the included AC or car adapter, or by the built-in rechargeable battery.

Troubleshooting

If you encounter any issues while using the Dartwood Portable DVD Player, refer to the following troubleshooting tips:

1. **Power issues** - If the DVD player does not turn on or has intermittent power, check the power source and ensure it is properly connected. If the battery is low, recharge it before using the DVD player.
2. **DVD playback issues** - If the DVD player does not recognize or play DVDs, ensure the disc is clean and free of scratches. You may also want to try using a different DVD to see if the issue is with the disc or the DVD player.
3. **Audio or video issues** - If you experience audio or video playback issues, ensure the volume is not muted and the settings are properly configured. You may also want to try adjusting the brightness or contrast settings for optimal viewing.
4. **Remote control issues** - If the remote control does not work, ensure the batteries are properly installed and move closer to the DVD player, and the remote is pointed at the DVD player.
5. **USB/SD card playback issues** - If you experience issues playing digital media files from a USB drive or SD card, ensure that the files are properly formatted and supported by the DVD player. You may also want to try a different USB drive or SD card to see if the device or the file has an issue.

6. **TV connection issues** - If you experience issues connecting the DVD player to a TV, ensure the AV cable is properly connected, and the TV is set to the correct input channel.
7. **Screen issues** - If you experience issues with the screen, ensure the screen rotation function is properly configured, and the screen is not damaged or obstructed.
8. **Headphone issues** - If you experience issues with headphone audio, ensure the headphones are properly connected, and the volume is not too low or too high.
9. **Contact the manufacturer** - If you encounter any persistent issues with the DVD player or if the troubleshooting tips do not resolve the issue, send an email to **contact@wasserstein-home.com** for additional support and assistance.

Specifications

Compatible disks:	CD-R, CD-RW, VCD, SVCD, CVD, DVD-R, DVD+R, DVD-RW, DVD+RW
Audio format:	MP3/WMA/OGG/AAC
Video format:	(Bit rates: 32-192 kbps) AVI/MPG/MP4/VOB/FLV/RMVB (video format resolution is 1024 x 600)
Picture format:	JPEG
E-book format:	Txt
Frequency response:	20 Hz to 20 kHz
Video output:	1 V _{p-p} 75 Ohm unbalanced
Audio output:	1.4 V Rms/10 K Ohm
Dynamic range:	> 85 dB
Laser:	Semi-conductor laser, wavelength 650
Power source:	DC 9 V - 12 V
Operating temperature:	41° F to 104° F
Battery type:	Li-polymer

Get More Support

Scan the QR code below or email us at contact@wasserstein-home.com



CONTACT US

DW **DARTWOOD**
a WASSERSTEIN brand

www.wasserstein-home.com

Made in China