Sleep Headphones Headband

USER MANUAL





In the Box

- 1 x washable headband
- 1 x wireless headphones
- 1 x charging cable


Precautions


Read this manual carefully and keep it for future reference.

- Avoid exposing the device to liquids or moisture.
- Do not attempt to tamper with the device by dropping, disassembling, opening, or otherwise modifying it.
- Avoid storing the device near acidic or alkaline materials.
- Remove the headphones before washing the cloth headband.
- Keep the device away from open flames or fire.

Note: To protect your headphones's internal batteries, charge the device at least once every six months.


Introduction to Parts

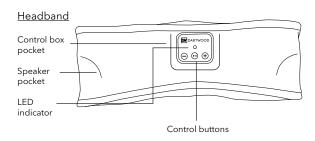

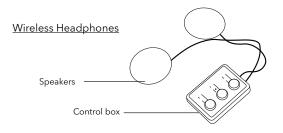

Before Use

- To ensure safe operation, fully charge the device before using it. Avoid using it while it is being charged.
- Connect the charging cable to the control box via the small fabric opening at the read of the control box.
 To charge, connect it to a DC5V 1A power source.

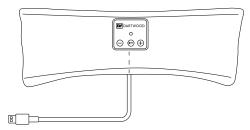

 During the charging process, the control box indicator will be red, indicating that the device is charging.
Once the device is fully charged, the indicator will turn blue, indicating that charging is complete.



How to Use





(Short Press) Next Song (Long Press) Volume Up



Pairing

- Press and hold the play button for a few seconds to turn on the headphones. The indicator will flash red and blue, indicating that the headphones are in pairing mode and ready to establish a connection with a compatible device.
- On your mobile device, locate and connect to "DW-SH01" to establish a Bluetooth connection with the headphones.
- 3. Unpair the headphones from your device if you want to pair them with another mobile device.

Power ON/OFF

• To turn the power on or off, press and hold the Play/Pause button for 4 seconds.

Answering a call

- To answer an incoming call, press the Play/Pause button once.
- To end the call, press the Play/Pause button once again.
- To redial the previous number, press the Play/Pause button twice.


Cleaning and Maintenance

CAUTION!


The headphones are not washable. Be sure to remove them from the headband before washing to avoid damage or potential malfunction.

Follow these steps for washing and reassembling the headphones:


1. Carefully remove the control box from its pocket.

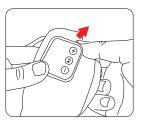


2. Carefully guide the headphones out of each headphone pocket. Do not pull on the connected wire.

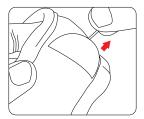

3. Remove the headphones and control box from the opening at the back. They should come out easily from the same side. If you encounter resistance, do not pull too hard to avoid damaging the headphones. To remove the headphones, try again until you release them from the headband.

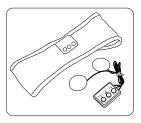

4. Hand wash the headband and let it dry completely.

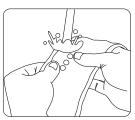

Put all the components back into the headband and adjust the position of the headphones as desired.

FAQ

Why can I not pair the headphones to my device?

Turn the headphones On and make sure the indicator on the control box is flashing red and blue. If you are not sure which device you are paired with, try going to a different room which has no Bluetooth devices in the area.

Get More Support

Scan the QR code to contact us or send us an email at contact@wasserstein-home.com



