Sonic Facial Cleansing Brush

USER MANUAL





a WASSERSTEIN brand

Product Overview

The Sonic Facial Cleansing Brush provides a gentle and effective facial cleansing experience, with the added benefit of heated strips for opening pores and improving circulation.

The device has a soft brush head that gently vibrates to remove dirt, oil, and makeup, and leaves your skin feeling refreshed and rejuvenated.

The Sonic Facial Cleansing Brush is easy to use and comes with a rechargeable battery, making it convenient for use at home or on the go. With regular use, you can expect noticeable improvement in the texture, tone, and overall health of your skin.

The Sonic Facial Cleansing Brush has a heated and non-heated mode, each with six different intensities (e.g. up to 10,000 pulses per minute) to suit every skin type.


It also has an IPX7 rating to ensure it is safe to use, even in wet conditions.


Storage & Care

 After each use, thoroughly rinse the brush head with water and shake off any excess water. Do not use any harsh chemicals or abrasive materials to clean the brush head, as this can damage the bristles.

- 2. The device is water-resistant, but not waterproof.
- 3. Do not submerge the device in water, as this can damage the internal components.
- Allow the brush head to completely air dry. Do not use a towel or cloth to dry the brush, as this can damage the bristles.
- Store the Sonic Facial Cleansing Brush in a cool and dry place. Avoid exposing the device to direct sunlight or high temperatures, as this can damage the battery and other internal components.
- If you will not be using the device for an extended period of time, make sure to fully charge it before storing it. This will help maintain battery health and ensure that it is ready to use when you need it.

Introduction to Parts

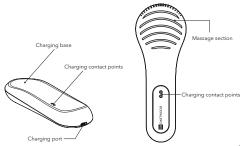

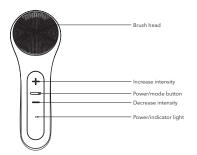

Precautions

- Do not use the Sonic Facial Cleansing Brush for more than the recommended time, as overuse can cause skin irritation or damage.
- 2. Avoid using the brush head on sensitive areas of your skin, such as around your eyes or on open wounds.
- Do not use the device if you have any skin conditions or allergies that may be aggravated by the use of the brush head or heated contacts. Consult with your doctor if you have any concerns.
- 4. Keep the device away from children and pets, as the brush head and heating parts can be a choking hazard.
- Do not use the device if it is damaged or malfunctioning. In such an event, please contact Customer Support for assistance.

page 3

- If you experience any discomfort or skin irritation while using the Sonic Facial Cleansing Brush, stop using it immediately and consult with your doctor.
- Do not immerse the device in water, as this can damage the internal components.
- Do not use the device with any harsh chemicals or abrasive materials, as this can damage the brush head and the device.
- Use caution when using the heating mode, as the temperature can become hot. Do not let the device contact your skin for extended periods of time.
- 10. Store the Sonic Facial Cleansing Brush in a dry and cool place, away from direct sunlight and high temperatures.

In the Box







Product Features

- High-Frequency Vibration: The Sonic Facial Cleansing Brush uses high-frequency vibration to help loosen dirt, oil, and makeup from skin.
- Soft Bristles: The brush head has soft bristles that are gentle on the skin and help provide a thorough cleansing experience.
- Multiple Speed Settings and 2 Modes: The Sonic Facial Cleansing Brush offers heated and non-heated cleansing modes with 6 intensity settings, letting you customize the cleansing routine to your skin's needs.
- 4. Water-Resistant Design: The device has an IPX7 rating.
- 5. Rechargeable Battery: The device comes with a built-in battery for convenient and hassle-free use.
- Smart Technology: This Sonic Facial Cleansing Brush uses smart technology that automatically chooses your previously used mode and intensity.
- Lightweight and Compact: The Sonic Facial Cleansing Brush is ideal for travel or use while on-the-go.

Charging the Device

- The Power/indicator light will flash green when the battery is running low.
- 2. Locate the charging port at the bottom of the charging base.
- Connect the cable to the charging port. Make sure the charging cable is securely connected.
- 4. Plug the other end of the charging cable into a USB port or a wall adapter (not included).
- Allow the Sonic Facial Cleansing Brush to charge for about 3 hours.
- The Power/indicator light remains green while charging, and turns off once charging is finished.

How to Use


Rinse the Sonic Facial Cleansing Brush with clean water.



Before using the brush, wet your face with warm water. This helps open up your pores and prepare your skin for cleansing.



3. Apply your favorite facial cleanser to the brush head or directly to your face.

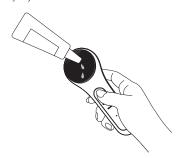

4. Turn on the brush by pressing and holding the Power/Mode button. Press the same button to select the appropriate mode. The working indicator will flash different colors, depending on your chosen modes:

Soft Red: Heating-vibrating mode Blue: Vibrating mode

Remarks:

- The Soft Red color when in Heating-Vibration mode may not be noticeable under bright light conditions.
- In the Heating-vibrating mode, it will take 2-3 minutes for the brush head to warm up.



 Press the "+" and "-" buttons to adjust the intensity. The light indicator will blink with each press and will turn solid when the intensity is selected.



Gently move the brush head in circular motions around your face, avoiding your eye area. Let the brush do the work, applying only light pressure.


Note: The recommended cleansing time is 2 to 5 minutes, depending on your needs.



 After cleansing your face, press and hold the Power/Mode button to turn the device off. The device has Smart Memory and will automatically choose your previously-selected mode and intensity on your next use.



Cleaning the brush: Rinse the brush head thoroughly with warm water after each use. Allow it to air dry completely before storing.

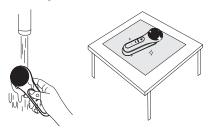

Specifications

Material: ABS + PC + Silicone

Battery capacity: 800mAh Input: 5V/1A

Output: 3.5W

Product size: 5.75 H x 2.12 L x 1.18 W in, 5.24 H x 1.61 L x 0.83 W in

Product weight: 3.8 oz (main Cleansing Brush)

1.3 oz (charging base)

Temperature of

heating-vibrating mode: 113 °F

Get More Support

Scan the QR code below or email us at contact@wasserstein-home.com





www.wasserstein-home.com