# KIDS' CAMCORDER CAMERA User Manual

 




# In the Box

- 1x DV Camera
- 1x Handle Strap 1x USB Cable
- 1x Lanvard
- 1x Manual 1x 32GB SD card

# Introduction to Parts



- 1. Shutter Button
- 2. Power Button
- 3. Menu Button 4. Up
- 5. Right
- 6. Down

- 7. Left
- 8. Display 9. TF Card Slot
- 10 Reset Button
- 11. MicroUSB Port

### Page 2

# **Operation Instructions**

#### Main menu



#### Power On/Off

Long press the Power button to turn on. Long press the Power button to turn off.

Video Mode
Select the from the main menu to switch to

Press the shutter button to start recording a video. Press again to stop recording.

Photo Mode

Select the from the main menu to switch to photo mode.

Press the shutter button to take a picture. A light will flash once indicating that the photo is complete.

Page 3

#### Recordina Mode

Select the from the main menu to switch to recording mode.

Press the shutter button to start recording. A flashing red dot will be flashing on the screen indicating the recording is working. Press the shutter button to stop recording.

#### Playback Mode

Select the to switch to playback mode. The playback icon will be displayed in the upper right corner of the screen

Press the up or down button to navigate. Press the shutter button to view or play the selected file.

#### Game Mode

Select the 🔊 to switch to game mode. If you are done selecting a game, you can navigate with the directional buttons (up, down, left, right) and your action button is going to be the shutter button.

### Settings Menu

Select the to switch to setting menu. Press the up and down button to navigate. Select the settings you need to change by pressing the shutter button. Press the shutter button to confirm the changes.

To exit, press the Menu button.

# USB Mode



Connect the camera in to your PC to access the files on the camera

## Battery







Half Battery

Low Battery

Empty Battery

To charge the camera, use the USB cable supplied and connect to a power source, the blue charging indicator will flash while charging.

# **Specifications**

GC0308 Image Sensor: Display: 2.0inch color display

Camera Lens: Fixed lens, 100 degrees Storage: Mini SD card, 32G maximum

Camera Format: .JPEG 720P: 1280x720 Resolution:

2.0 inch screen (720x320) TFT Display:

Photo Resolution: 12m, 8m, 5m, 3m, 2m, 1,3m, VGA Charge Voltage: DC-5V

50HZ, 60HZ Frequency:

# Get More Support

Scan the QR code below or, email us at: contact@wasserstein-home.com







For more information, please visit:

Page 4

Page 5