

 


LABIRINTO IMPERO

Rigorosa. Razionale. Un percorso logico di linee evoca l'immagine di un labirinto e crea una cornice grafica che distingue la Collezione Labirinto. Perfetta sintesi tra antica cultura e design moderno di cui Gio Ponti fu uno dei massimi esponenti, la Collezione si ispira al decoro ideato dal maestro nel 1926. La forma Impero con le sue sagome cilindriche richiama gli analoghi modelli del tardo settecento, improntati alle linee dell'eleganza neoclassica, ed esalta lo stile e il rigore della Collezione Labirinto. La collezione prevede un completo assortimento tavola, tè e caffè.

Sleek and rational: a logical path of lines evokes the image of a maze and creates a graphic frame that distinguishes the Labirinto Collection. The perfect convergence between ancient culture and the modern design of which Gio Ponti was one of the leading representatives, the collection was inspired by the pattern created by the master in 1926. The Impero shape, with its cylindrical outlines, evokes similar models from the late eighteenth century, imprinted by the lines of Neoclassical elegance, and it enhances the style and simplicity of the Labirinto Collection. The collection features a complete array of tableware as well as tea and coffee sets.

Nero G00125100 - Scarlatto G00125300 - Smeraldo G00125400 - Zaffiro G00125200

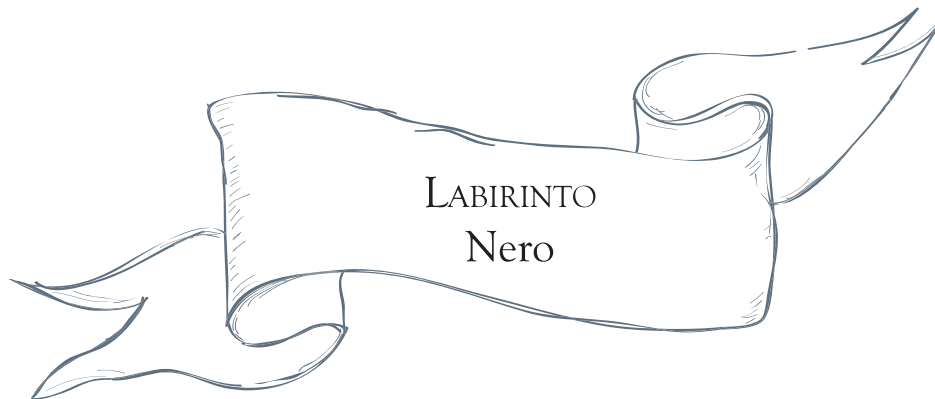

Piatto pane | *Bread plate*
004RG00 FPT110 0160 G00125100
cm 16 | in. 6 1/2



Piatto dessert | *Dessert plate*
004RG00 FPT110 0220 G00125100
cm 22 | in. 7 3/4



Piatto piano | *Dinner plate*
004RG00 FPT110 0280 G00125100
cm 28 | in. 11



Piatto fondo | *Soup plate*
04RG00 FPT210 0245 G00125100
cm 24,5 | in. 9 1/2



Segnaposto | *Charger plate*
044RG00 FPT100 0310 G00125100
cm 31 | in. 12 1/4



Vassoio rotondo | *Round platter*
004RG00 FPT110 0305 G00125100
cm 30,5 | in. 12



Vassoio ovale | *Oval platter*
004RG00 FVS130 0340 G00125100
cm 34 | in. 13 1/4



Vassoio ovale | *Oval platter*
004RG00 FVS130 0400 G00125100
cm 40 | in. 15 1/2



Zuppiera con coperchio | *Tureen with cover*
004RG00 FZP030 0400 G00125100
lt 4 | oz. 141



Insalatiera | *Salad bowl*
004RG00 FIN000 0265 G00125100
cm 26,5 | in. 10 1/2



Raviera | *Pickle dish*
004RG00 FRV000 0235 G00125100
cm 23,5 | in. 9 1/4



Salsiera | *Gravy boat*
004RG00 FSA010 0300 G00125100
cc 300 | oz. 11



Cucchiaio per salsiera | *Gravy boat spoon*
004RG00 FSA003 GEN G00128600



Tazza caffè | *Coffee cup*
004RG00 FTZ301 0800 G00125100
cc 80 | oz. 2 3/4



Piatto caffè | *Coffee saucer*
004RG00 FPT301 0110 G00125100
cm 11 | in. 2 3/4



Tazza tè | *Tea cup*
004RG00 FTZ401 0220 G00125100
cc 220 | oz. 7 3/4



Piatto tè | *Tea saucer*
004RG00 FPT401 0135 G00125100
cm 13,5 | in. 5 1/4



Coppetta | *Fruit bowl*
004RG00 FCP000 0140 G00125100
cm 14 | in. 5 1/2



Mug | *Mug*
004RG00 FTZ701 0400 G00125100
cc 400 | oz. 13 1/2



Mug con coperchio | *Mug with cover*
004RG00 FTZ700 0400 G00125100
cc 400 | oz. 13 1/2



Caffettiera con coperchio per 6
Coffeepot with cover for 6
 004RG00 FCF300 0510 G00125100
 lt 0,51 | oz. 18



Caffettiera con coperchio per 12
Coffeepot with cover for 12
 004RG00 FCF300 0810 G00125100
 lt 0,81 | oz. 28 1/2



Teiera con coperchio per 6
Teapot with cover for 6
 004RG00 FTE400 0900 G00125100
 lt 0,90 | oz. 30 1/2



Teiera con coperchio per 12
Teapot with cover for 12
 004RG00 FTE400 1620 G00125100
 lt 1,62 | oz. 57 1/4



Lattiera | *Milk jug*
 004RG00 FLT000 0245 G00125100
 cc 245 | oz. 8 3/4



Zuccheriera con coperchio | *Sugar bowl with cover*
 004RG00 FZU000 0300 G00125100
 cc 300 | oz. 10 1/2



Lattiera per 2 | *Milk jug for 2*
 004RG00 FLT000 0135 G00125100
 cc 135 | oz. 4 1/2



Zuccheriera per 2 con coperchio
Sugar bowl for 2 with cover
 004RG00 FZU000 0150 G00125100
 cc 150 | oz. 5



Set caffè per 2 con coperchio
Coffee set for 2 with cover
 004RG00 FX9176 G00125100



Vassoio con manici | *Tray with handles*
017RG02 FG5284 0315 G00125100
cm 31,5 x 22,5 | in. 12 1/2 x 8 3/4



Alzata per torte | *Cake stand*
017RG02 FG5305 G00125100
cm 10 x 26 | in. 4 x 10 1/4



Piatto torta | *Cake plate*
017RG02 FPT900 0315 G00125100
cm 31,5 | in. 12 1/2



Svuotatasche quadrato | *Vide poche plate*
017RG02 FG6837 0180 G00125100
cm 18 | in. 7



Svuotatasche quadrato | *Vide poche plate*
017RG02 FG6836 0245 G00125100
cm 24,5 | in. 9 1/2



Svuotatasche rettangolare
Rectangular vide poche
017RG02 FG6838 0150 G00125100
cm 15 x 19 | in. 6 x 7 1/2



Coppa Gio Ponti | *Gio Ponti bowl*
020RG00 FG6499 G00125100
h cm 11 | in. 4 1/4



Vaso rettangolare basso con coperchio
Rectangular small vase with cover
017RG00 FG6842 0080 G00125100
cm 22 | in. 8 ³/₄



Vaso rettangolare alto con coperchio
Rectangular large vase with cover
017RG00 FG6839 0080 G00125100
cm 30 | in. 11 ³/₄



Vaso Impero con coperchio
Impero vase with cover
020RG00 FA6679 G00125100
cm 48 | in. 19



Vaso cachepot Ponti | *Ponti cachepot vase*
020RG00 FA6467 G00125100
h cm 19 | in. 7 ¹/₂



Vaso Ming | *Ming vase*
016RG02 FG6132 0250 G00125100
h cm 25 | in. 9



Vaso Ming | *Ming vase*
016RG02 FG6132 0300 G00125100
h cm 30 | in. 12



Piatto centrotavola | *Centrepiece plate*

140RG00 FPT110 0310 G00125100

cm 31 | in. 12 1/4



Coppa | *Bowl*

140RG00 FIN000 0270 G00125100

cm 27 | in. 16 1/2



Coppa | *Bowl*

140RG00 FPT210 0200 G00125100

cm 20 | in. 12



Piatto svuotatasche | *Vide poche plate*

172RG01 FVS121 30X G00125100

cm 30 | in. 18 1/4



Coppa quadrata | *Squared bowl*

172RG01 FCP220 13X G00125100

cm 13,5 | in. 8



Scatola rotonda con coperchio

Round box with cover

017RG02 FX5080 G00125100

cm 13 | in. 5



Candela | *Candle*

020RG00 FC4178 0300 G00125100

cc 300 | oz. 10



Piatto pane | *Bread plate*
004RG00 FPT110 0160 G00125300
cm 16 | in. 6 1/2



Piatto dessert | *Dessert plate*
004RG00 FPT110 0220 G00125300
cm 22 | in. 7 3/4



Piatto piano | *Dinner plate*
004RG00 FPT110 0280 G00125300
cm 28 | in. 11



Piatto fondo | *Soup plate*
04RG00 FPT210 0245 G00125300
cm 24,5 | in. 9 1/2



Segnaposto | *Charger plate*
044RG00 FPT100 0310 G00125300
cm 31 | in. 12 1/4



Vassoio rotondo | *Round platter*
004RG00 FPT110 0305 G00125300
cm 30,5 | in. 12



Vassoio ovale | *Oval platter*
004RG00 FVS130 0340 G00125300
cm 34 | in. 13 1/4



Vassoio ovale | *Oval platter*
004RG00 FVS130 0400 G00125300
cm 40 | in. 15 1/2



Zuppiera con coperchio | *Tureen with cover*
004RG00 FZP030 0400 G00125300
lt 4 | oz. 141



Insalatiera | *Salad bowl*
004RG00 FIN000 0265 G00125300
cm 26,5 | in. 10 1/2



Raviera | *Pickle dish*
004RG00 FRV000 0235 G00125300
cm 23,5 | in. 9 1/4



Salsiera | *Gravy boat*
004RG00 FSA010 0300 G00125300
cc 300 | oz. 11



Cucchiaio per salsiera | *Gravy boat spoon*
004RG00 FSA003 GEN G00128600



Tazza caffè | *Coffee cup*
004RG00 FTZ301 0800 G00125300
cc 80 | oz. 2 3/4



Piatto caffè | *Coffee saucer*
004RG00 FPT301 0110 G00125300
cm 11 | in. 2 3/4



Tazza tè | *Tea cup*
004RG00 FTZ401 0220 G00125300
cc 220 | oz. 7 3/4



Piatto tè | *Tea saucer*
004RG00 FPT401 0135 G00125300
cm 13,5 | in. 5 1/4



Coppetta | *Fruit bowl*
004RG00 FCP000 0140 G00125300
cm 14 | in. 5 1/2



Mug | *Mug*
004RG00 FTZ701 0400 G00125300
cc 400 | oz. 13 1/2



Mug con coperchio | *Mug with cover*
004RG00 FTZ700 0400 G001251300
cc 400 | oz. 13 1/2



Caffettiera con coperchio per 6
Coffeepot with cover for 6
 004RG00 FCF300 0510 G00125300
 lt 0,51 | oz. 18



Caffettiera con coperchio per 12
Coffeepot with cover for 12
 004RG00 FCF300 0810 G00125300
 lt 0,81 | oz. 28 1/2



Teiera con coperchio per 6
Teapot with cover for 6
 004RG00 FTE400 0900 G00125300
 lt 0,90 | oz. 30 1/2



Teiera con coperchio per 12
Teapot with cover for 12
 004RG00 FTE400 1620 G00125300
 lt 1,62 | oz. 57 1/4



Lattiera | *Milk jug*
 004RG00 FLT000 0245 G00125300
 cc 245 | oz. 8 3/4



Zuccheriera con coperchio | *Sugar bowl with cover*
 004RG00 FZU000 0300 G00125300
 cc 300 | oz. 10 1/2



Lattiera per 2 | *Milk jug for 2*
 004RG00 FLT000 0135 G00125300
 cc 135 | oz. 4 1/2



Zuccheriera per 2 con coperchio
Sugar bowl for 2 with cover
 004RG00 FZU000 0150 G00125300
 cc 150 | oz. 5



Set caffè per 2 con coperchio
Coffee set for 2 with cover
 004RG00 FX9176 G00125300



Vassoio con manici | *Tray with handles*
017RG02 FG5284 0315 G00125300
cm 31,5 x 22,5 | in. 12 1/2 x 8 3/4



Alzata per torte | *Cake stand*
017RG02 FG5305 G00125300
cm 10 x 26 | in. 4 x 10 1/4



Piatto torta | *Cake plate*
017RG02 FPT900 0315 G00125300
cm 31,5 | in. 12 1/2



Svuotatasche quadrato | *Vide poche plate*
017RG02 FG6837 0180 G00125300
cm 18 | in. 7



Svuotatasche quadrato | *Vide poche plate*
017RG02 FG6836 0245 G00125300
cm 24,5 | in. 9 1/2



Svuotatasche rettangolare
Rectangular vide poche
017RG02 FG6838 0150 G00125300
cm 15 x 19 | in. 6 x 7 1/2



Coppa Gio Ponti | *Gio Ponti bowl*
020RG00 FG6499 G00125300
h cm 11 | in. 4 1/4



Vaso rettangolare basso con coperchio
Rectangular small vase with cover
017RG00 FG6842 0080 G00125300
cm 22 | in. 8 ³/₄



Vaso rettangolare alto con coperchio
Rectangular large vase with cover
017RG00 FG6839 0080 G00125300
cm 30 | in. 11 ³/₄



Vaso Impero con coperchio
Impero vase with cover
020RG00 FA6679 G00125300
cm 48 | in. 19



Vaso cachepot Ponti | *Ponti cachepot vase*
020RG00 FA6467 G00125300
h cm 19 | in. 7 ¹/₂



Vaso Ming | *Ming vase*
016RG02 FG6132 0250 G00125300
h cm 25 | in. 9



Vaso Ming | *Ming vase*
016RG02 FG6132 0300 G00125300
h cm 30 | in. 12



Piatto centrotavola | *Centrepiece plate*
140RG00 FPT110 0310 G00125300
cm 31 | in. 12 1/4



Coppa | *Bowl*
140RG00 FIN000 0270 G00125300
cm 27 | in. 16 1/2



Coppa | *Bowl*
140RG00 FPT210 0200 G00125300
cm 20 | in. 12



Piatto svuotatasche | *Vide poche plate*
172RG01 FVS121 30X G00125300
cm 30 | in. 18 1/4




Coppa quadrata | *Squared bowl*
172RG01 FCP220 13X G00125300
cm 13,5 | in. 8



Scatola rotonda con coperchio
Round box with cover
017RG02 FX5080 G00125300
cm 13 | in. 5



Candela | *Candle*
020RG00 FC4178 0300 G00125300
cc 300 | oz. 10

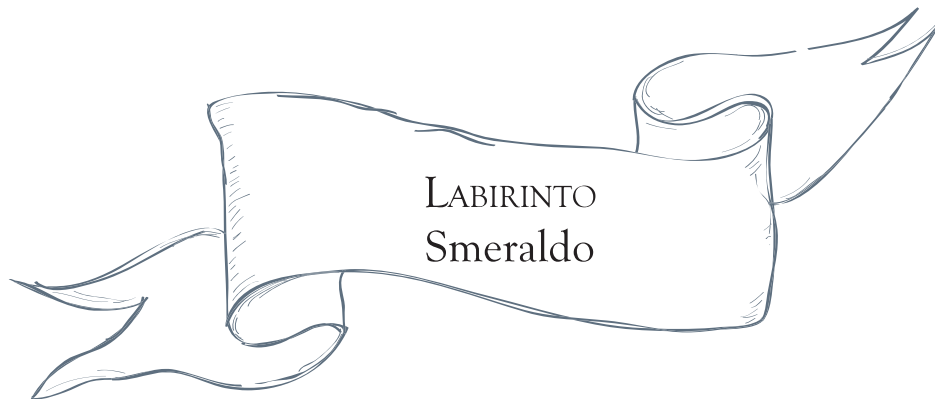 

LABIRINTO
Smeraldo



Piatto pane | *Bread plate*
004RG00 FPT110 0160 G00125400
cm 16 | in. 6 1/2



Piatto dessert | *Dessert plate*
004RG00 FPT110 0220 G00125400
cm 22 | in. 7 3/4



Piatto piano | *Dinner plate*
004RG00 FPT110 0280 G00125400
cm 28 | in. 11



Piatto fondo | *Soup plate*
04RG00 FPT210 0245 G00125400
cm 24,5 | in. 9 1/2



Segnaposto | *Charger plate*
044RG00 FPT100 0310 G00125400
cm 31 | in. 12 1/4



Vassoio rotondo | *Round platter*
004RG00 FPT110 0305 G00125400
cm 30,5 | in. 12



Vassoio ovale | *Oval platter*
004RG00 FVS130 0340 G00125400
cm 34 | in. 13 1/4



Vassoio ovale | *Oval platter*
004RG00 FVS130 0400 G00125400
cm 40 | in. 15 1/2



Zuppiera con coperchio | *Tureen with cover*
004RG00 FZP030 0400 G00125400
lt 4 | oz. 141



Insalatiera | *Salad bowl*
004RG00 FIN000 0265 G00125400
cm 26,5 | in. 10 1/2



Raviera | *Pickle dish*
004RG00 FRV000 0235 G00125400
cm 23,5 | in. 9 1/4



Salsiera | *Gravy boat*
004RG00 FSA010 0300 G00125400
cc 300 | oz. 11



Cucchiaio per salsiera | *Gravy boat spoon*
004RG00 FSA003 GEN G00128600



Tazza caffè | *Coffee cup*
004RG00 FTZ301 0800 G00125400
cc 80 | oz. 2 3/4



Piatto caffè | *Coffee saucer*
004RG00 FPT301 0110 G00125400
cm 11 | in. 2 3/4



Tazza tè | *Tea cup*
004RG00 FTZ401 0220 G00125400
cc 220 | oz. 7 3/4



Piatto tè | *Tea saucer*
004RG00 FPT401 0135 G00125400
cm 13,5 | in. 5 1/4



Coppetta | *Fruit bowl*
004RG00 FCP000 0140 G00125400
cm 14 | in. 5 1/2



Mug | *Mug*
004RG00 FTZ701 0400 G00125400
cc 400 | oz. 13 1/2



Mug con coperchio | *Mug with cover*
004RG00 FTZ700 0400 G001251400
cc 400 | oz. 13 1/2



Caffettiera con coperchio per 6
Coffeepot with cover for 6
 004RG00 FCF300 0510 G00125400
 lt 0,51 | oz. 18



Caffettiera con coperchio per 12
Coffeepot with cover for 12
 004RG00 FCF300 0810 G00125400
 lt 0,81 | oz. 28 1/2



Teiera con coperchio per 6
Teapot with cover for 6
 004RG00 FTE400 0900 G00125400
 lt 0,90 | oz. 30 1/2



Teiera con coperchio per 12
Teapot with cover for 12
 004RG00 FTE400 1620 G00125400
 lt 1,62 | oz. 57 1/4



Lattiera | *Milk jug*
 004RG00 FLT000 0245 G00125400
 cc 245 | oz. 8 3/4



Zuccheriera con coperchio | *Sugar bowl with cover*
 004RG00 FZU000 0300 G00125400
 cc 300 | oz. 10 1/2



Lattiera per 2 | *Milk jug for 2*
 004RG00 FLT000 0135 G00125400
 cc 135 | oz. 4 1/2



Zuccheriera per 2 con coperchio
Sugar bowl for 2 with cover
 004RG00 FZU000 0150 G00125400
 cc 150 | oz. 5



Set caffè per 2 con coperchio
Coffee set for 2 with cover
 004RG00 FX9176 G00125400



Vassoio con manici | *Tray with handles*
017RG02 FG5284 0315 G00125400
cm 31,5 x 22,5 | in. 12 1/2 x 8 3/4



Alzata per torte | *Cake stand*
017RG02 FG5305 G00125400
cm 10 x 26 | in. 4 x 10 1/4



Piatto torta | *Cake plate*
017RG02 FPT900 0315 G00125400
cm 31,5 | in. 12 1/2



Svuotatasche quadrato | *Vide poche plate*
017RG02 FG6837 0180 G00125400
cm 18 | in. 7



Svuotatasche quadrato | *Vide poche plate*
017RG02 FG6836 0245 G00125400
cm 24,5 | in. 9 1/2



Svuotatasche rettangolare
Rectangular vide poche
017RG02 FG6838 0150 G00125400
cm 15 x 19 | in. 6 x 7 1/2



Coppa Gio Ponti | *Gio Ponti bowl*
020RG00 FG6499 G00125400
h cm 11 | in. 4 1/4



Vaso rettangolare basso con coperchio
Rectangular small vase with cover
017RG00 FG6842 0080 G00125400
cm 22 | in. 8 ³/₄



Vaso rettangolare alto con coperchio
Rectangular large vase with cover
017RG00 FG6839 0080 G00125400
cm 30 | in. 11 ³/₄



Vaso Impero con coperchio
Impero vase with cover
020RG00 FA6679 G00125400
cm 48 | in. 19



Vaso cachepot Ponti | *Ponti cachepot vase*
020RG00 FA6467 G00125400
h cm 19 | in. 7 ¹/₂



Vaso Ming | *Ming vase*
016RG02 FG6132 0250 G00125400
h cm 25 | in. 9



Vaso Ming | *Ming vase*
016RG02 FG6132 0300 G00125400
h cm 30 | in. 12



Piatto centrotavola | *Centrepiece plate*

140RG00 FPT110 0310 G00125400

cm 31 | in. 12 1/4



Coppa | *Bowl*

140RG00 FIN000 0270 G00125400

cm 27 | in. 16 1/2



Coppa | *Bowl*

140RG00 FPT210 0200 G00125400

cm 20 | in. 12



Piatto svuotatasche | *Vide poche plate*

172RG01 FVS121 30X G00125400

cm 30 | in. 18 1/4



Coppa quadrata | *Squared bowl*

172RG01 FCP220 13X G00125400

cm 13,5 | in. 8



Scatola rotonda con coperchio

Round box with cover

017RG02 FX5080 G00125400

cm 13 | in. 5



Candela | *Candle*

020RG00 FC4178 0300 G00125400

cc 300 | oz. 10

LABIRINTO
Zaffiro



Piatto pane | *Bread plate*
004RG00 FPT110 0160 G00125200
cm 16 | in. 6 1/2



Piatto dessert | *Dessert plate*
004RG00 FPT110 0220 G00125200
cm 22 | in. 7 3/4



Piatto piano | *Dinner plate*
004RG00 FPT110 0280 G00125200
cm 28 | in. 11



Piatto fondo | *Soup plate*
04RG00 FPT210 0245 G00125200
cm 24,5 | in. 9 1/2



Segnaposto | *Charger plate*
044RG00 FPT100 0310 G00125200
cm 31 | in. 12 1/4



Vassoio rotondo | *Round platter*
004RG00 FPT110 0305 G00125200
cm 30,5 | in. 12



Vassoio ovale | *Oval platter*
004RG00 FVS130 0340 G00125200
cm 34 | in. 13 1/4



Vassoio ovale | *Oval platter*
004RG00 FVS130 0400 G00125200
cm 40 | in. 15 1/2



Zuppiera con coperchio | *Tureen with cover*
004RG00 FZP030 0400 G00125200
lt 4 | oz. 141



Insalatiera | *Salad bowl*
004RG00 FIN000 0265 G00125200
cm 26,5 | in. 10 1/2



Raviera | *Pickle dish*
004RG00 FRV000 0235 G00125200
cm 23,5 | in. 9 1/4



Salsiera | *Gravy boat*
004RG00 FSA010 0300 G00125200
cc 300 | oz. 11



Cucchiaio per salsiera | *Gravy boat spoon*
004RG00 FSA003 GEN G00128600



Tazza caffè | *Coffee cup*
004RG00 FTZ301 0800 G00125200
cc 80 | oz. 2 3/4



Piatto caffè | *Coffee saucer*
004RG00 FPT301 0110 G00125200
cm 11 | in. 2 3/4



Tazza tè | *Tea cup*
004RG00 FTZ401 0220 G00125200
cc 220 | oz. 7 3/4



Piatto tè | *Tea saucer*
004RG00 FPT401 0135 G00125200
cm 13,5 | in. 5 1/4



Coppetta | *Fruit bowl*
004RG00 FCP000 0140 G00125200
cm 14 | in. 5 1/2



Mug | *Mug*
004RG00 FTZ701 0400 G00125200
cc 400 | oz. 13 1/2



Mug con coperchio | *Mug with cover*
004RG00 FTZ700 0400 G001251200
cc 400 | oz. 13 1/2



Caffettiera con coperchio per 6
Coffeepot with cover for 6
 004RG00 FCF300 0510 G00125200
 lt 0,51 | oz. 18



Caffettiera con coperchio per 12
Coffeepot with cover for 12
 004RG00 FCF300 0810 G00125200
 lt 0,81 | oz. 28 1/2



Teiera con coperchio per 6
Teapot with cover for 6
 004RG00 FTE400 0900 G00125200
 lt 0,90 | oz. 30 1/2



Teiera con coperchio per 12
Teapot with cover for 12
 004RG00 FTE400 1620 G00125200
 lt 1,62 | oz. 57 1/4



Lattiera | *Milk jug*
 004RG00 FLT000 0245 G00125200
 cc 245 | oz. 8 3/4



Zuccheriera con coperchio | *Sugar bowl with cover*
 004RG00 FZU000 0300 G00125200
 cc 300 | oz. 10 1/2



Lattiera per 2 | *Milk jug for 2*
 004RG00 FLT000 0135 G00125200
 cc 135 | oz. 4 1/2



Zuccheriera per 2 con coperchio
Sugar bowl for 2 with cover
 004RG00 FZU000 0150 G00125200
 cc 150 | oz. 5



Set caffè per 2 con coperchio
Coffee set for 2 with cover
 004RG00 FX9176 G00125200



Vassoio con manici | *Tray with handles*
017RG02 FG5284 0315 G00125200
cm 31,5 x 22,5 | in. 12 1/2 x 8 3/4



Alzata per torte | *Cake stand*
017RG02 FG5305 G00125200
cm 10 x 26 | in. 4 x 10 1/4



Piatto torta | *Cake plate*
017RG02 FPT900 0315 G00125200
cm 31,5 | in. 12 1/2



Svuotatasche quadrato | *Vide poche plate*
017RG02 FG6837 0180 G00125200
cm 18 | in. 7



Svuotatasche quadrato | *Vide poche plate*
017RG02 FG6836 0245 G00125200
cm 24,5 | in. 9 1/2



Svuotatasche rettangolare
Rectangular vide poche
017RG02 FG6838 0150 G00125200
cm 15 x 19 | in. 6 x 7 1/2



Coppa Gio Ponti | *Gio Ponti bowl*
020RG00 FG6499 G00125200
h cm 11 | in. 4 1/4



Vaso rettangolare basso con coperchio
Rectangular small vase with cover
017RG00 FG6842 0080 G00125200
cm 22 | in. 8 ³/₄



Vaso rettangolare alto con coperchio
Rectangular large vase with cover
017RG00 FG6839 0080 G00125200
cm 30 | in. 11 ³/₄



Vaso Impero con coperchio
Impero vase with cover
020RG00 FA6679 G00125200
cm 48 | in. 19



Vaso cachepot Ponti | *Ponti cachepot vase*
020RG00 FA6467 G00125200
h cm 19 | in. 7 ¹/₂



Vaso Ming | *Ming vase*
016RG02 FG6132 0250 G00125200
h cm 25 | in. 9



Vaso Ming | *Ming vase*
016RG02 FG6132 0300 G00125200
h cm 30 | in. 12



Piatto centrotavola | *Centrepiece plate*
140RG00 FPT110 0310 G00125200
cm 31 | in. 12 1/4



Coppa | *Bowl*
140RG00 FIN000 0270 G00125200
cm 27 | in. 16 1/2



Coppa | *Bowl*
140RG00 FPT210 0200 G00125200
cm 20 | in. 12



Piatto svuotatasche | *Vide poche plate*
172RG01 FVS121 30X G00125200
cm 30 | in. 18 1/4



Coppa quadrata | *Squared bowl*
172RG01 FCP220 13X G00125200
cm 13,5 | in. 8



Scatola rotonda con coperchio
Round box with cover
017RG02 FX5080 G00125200
cm 13 | in. 5



Candela | *Candle*
020RG00 FC4178 0300 G00125200
cc 300 | oz. 10

