


Gammill®

Threading & Oiling Guide


OILING

22, 26, 30 and 36-inch machine heads

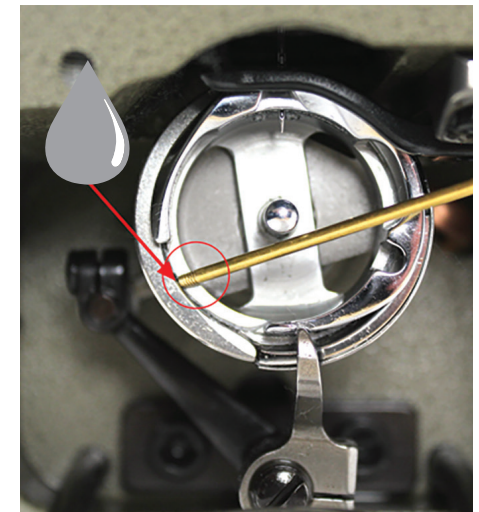

OILING

18-inch machine head

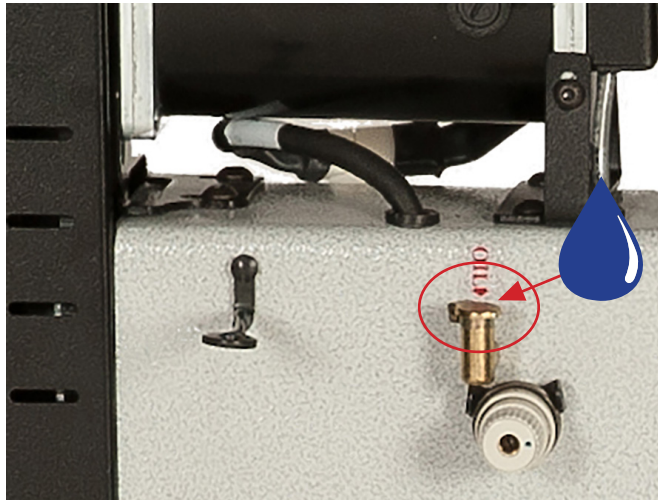

2-4
drops
every
6 to 8
hours of
quilting




1 location

1-2
drops
every
6 to 8
hours of
quilting


5 locations

1 drop
after
every
bobbin
change


1 location

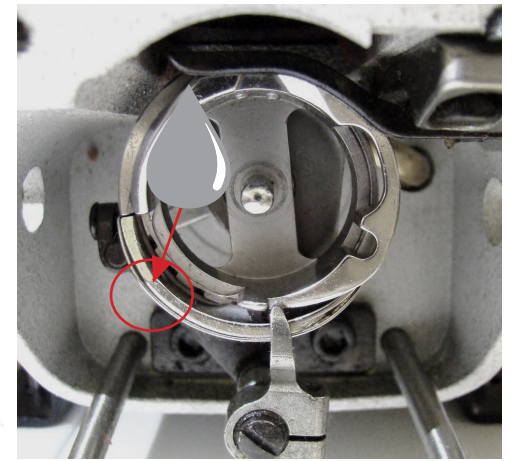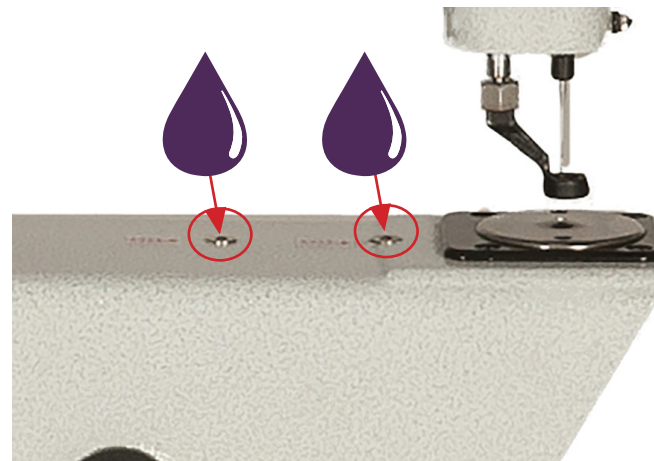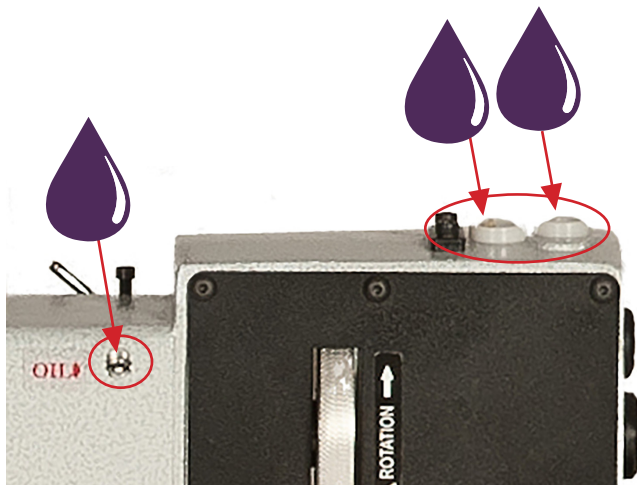

THREADING GUIDE

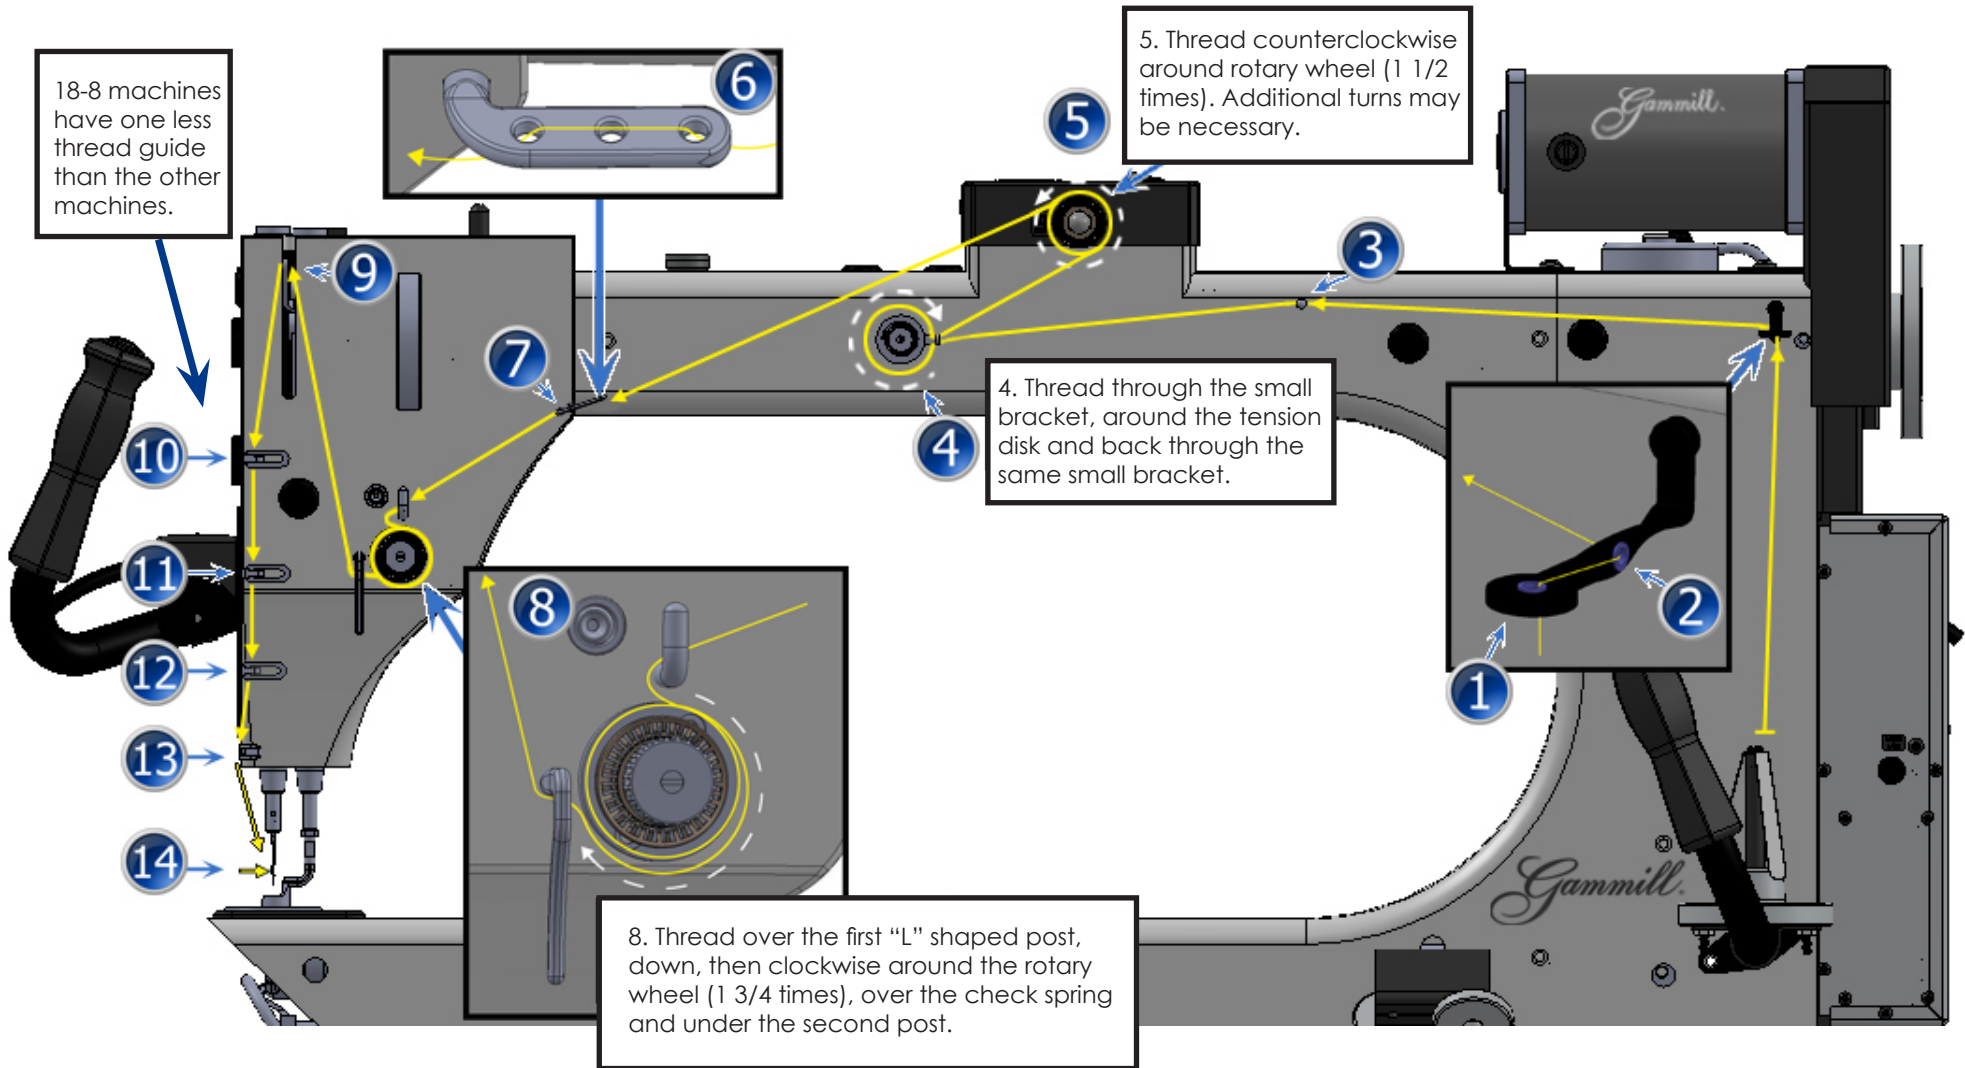

THREADING GUIDE

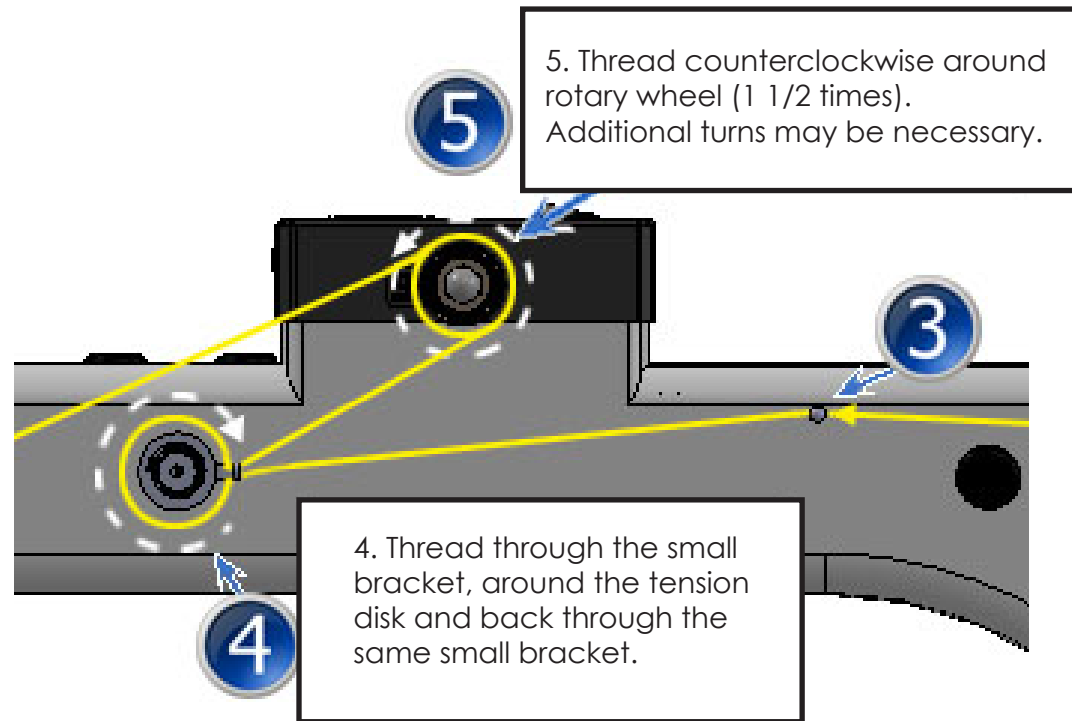

VIDEO TUTORIALS

*Click the icons for oiling and threading video tutorials.
Find more video tutorials at Gammill.com/Videos*



Oiling the Machine: 18-8



Oiling the Machine: 22, 26, 30 and 36-inch machines



Threading the Machine