


# Removing Your Machine for Transport

## Remove the Pick-Up Bar

1) Using a #4 Allen wrench, remove the collar on the Pick-Up Bar at the non-handle end of the table.



2) Using a #13 wrench, loosen the nut under the latch-side holding the Pick-Up Bar in place. Leave the assembly together and slide the latch to the side. Keeping the assembly together will help to avoid losing parts.

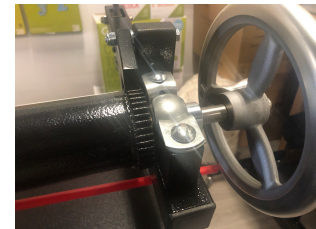

3) Remove the Pick-Up Bar and lay it to side or out of the way. The head of the machine should now be free.



4) Unplug the machine from the wall, leaving the plug attached to the machine head. Unplug the cords from the cross track and controller (if any). Remove the belt (if applicable).



5) Lastly, before moving the machine head, move the spring holding the encoder in the down position under the encoder bracket with the intent of holding the encoder in an up position.



6) Use 2 people to move the machine head. Tie down in vehicle so the machine head will not move but do not over tighten.