

Last Modified: 5-2-2016	6.6 A	Doc ID: RM0000046OG007X
Model Year Start: 2015	Model: 4Runner	Prod Date Range: [08/2014 - ]
Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL; 2015 MY 4Runner [08/2014 - ]		

## REMOVAL

### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

**NOTICE:**

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

### 2. REMOVE REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)


INFO

### 3. REMOVE DOOR SCUFF PLATE ASSEMBLY LH

- (a) Put protective tape around the door scuff plate assembly LH.

**Text in Illustration**

*1	Protective Tape
----	-----------------

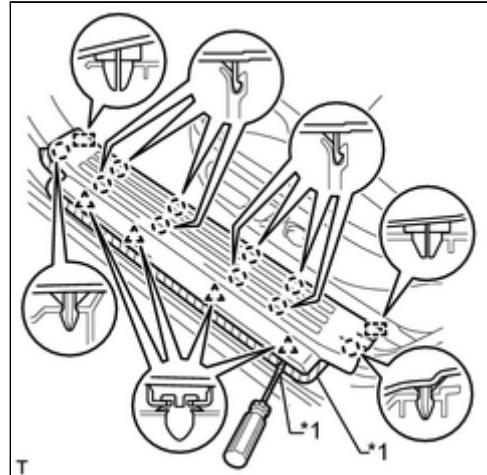

- (b) Using a screwdriver, detach the 4 clips, 10 claws and 2 guides to remove the door scuff plate assembly LH.

**HINT:**

Tape the screwdriver tip before use.


### 4. REMOVE DOOR SCUFF PLATE ASSEMBLY RH

**HINT:**

Use the same procedure as for the LH side.

### 5. REMOVE COWL SIDE TRIM BOARD LH

- (a) Remove the clip.

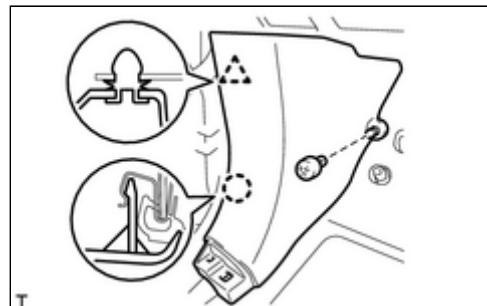

- (b) Detach the clip and claw to remove the cowl side trim board LH.


## 6. REMOVE COWL SIDE TRIM BOARD RH

### HINT:

Use the same procedure as for the LH side.

## 7. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

- (a) Remove the front door opening trim weatherstrip LH.

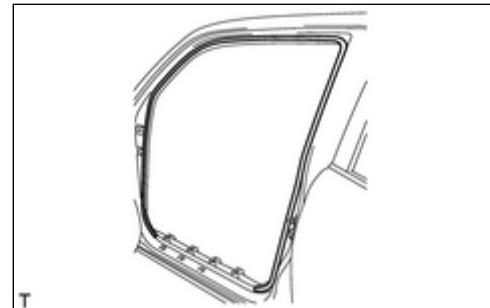

## 8. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

### HINT:

Use the same procedure as for the LH side.


## 9. REMOVE ASSIST GRIP PLUG

- (a) Using a screwdriver, detach the 2 claws to remove the assist grip plug.

### Text in Illustration

\*1

Protective Tape

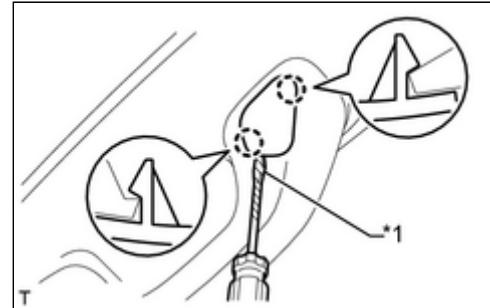


### HINT:

- Tape the screwdriver tip before use.
- Use the same procedure for the other assist grip plug.

## 10. REMOVE NO. 1 ASSIST GRIP


- (a) Remove the 2 bolts.

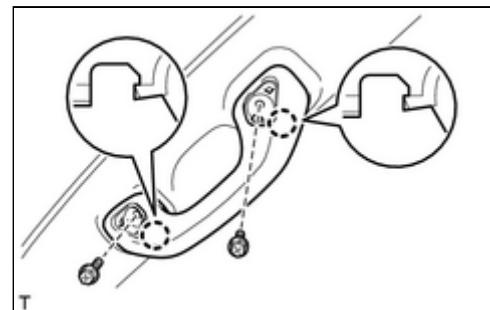

- (b) Detach the 2 claws to remove the No. 1 assist grip.

## 11. REMOVE FRONT PILLAR GARNISH RH

(a) Detach the clip and 3 guides to remove the front pillar garnish RH.

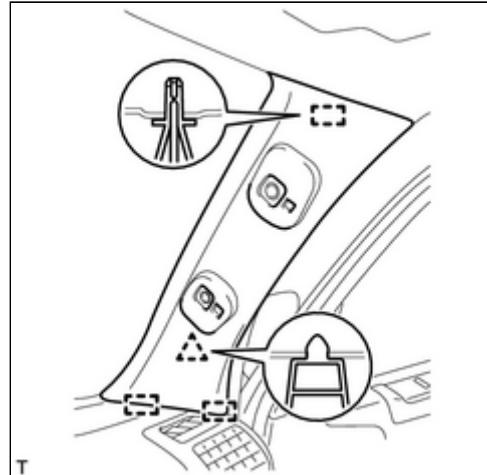


(b) Protect the curtain shield airbag assembly.

- (1) Completely cover the curtain shield airbag assembly with a protective cover and secure the ends of the cover with adhesive tape as shown in the illustration.

#### Text in Illustration

*1	Curtain Shield Airbag Assembly
*2	Adhesive Tape
*3	Protective Cover

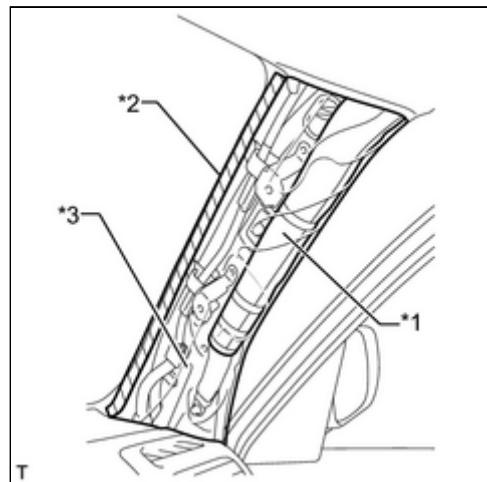

#### NOTICE:

Cover the curtain shield airbag assembly with a protective cover as soon as the front pillar garnish RH is removed.

## 12. REMOVE FRONT PILLAR GARNISH LH


- (a) Using a screwdriver, detach the 2 claws to remove the No. 1 front pillar garnish cover LH.

#### Text in Illustration


*1	Protective Tape
----	-----------------

#### HINT:


Tape the screwdriver tip before use.

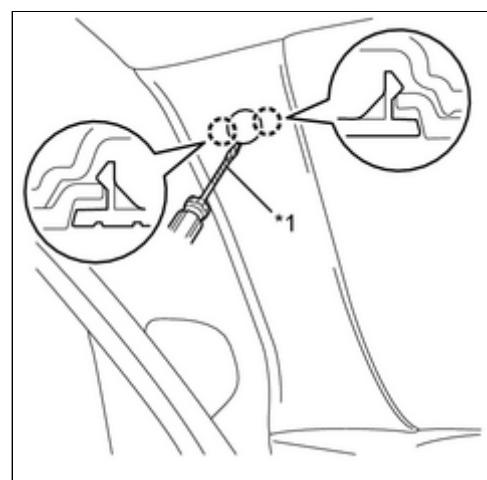


(b) Remove the bolt.

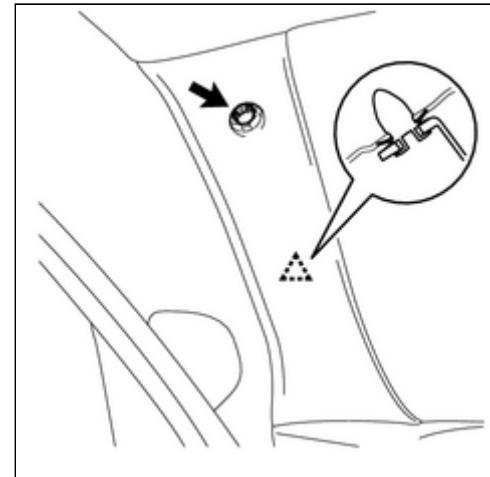

(c) Detach the clip.

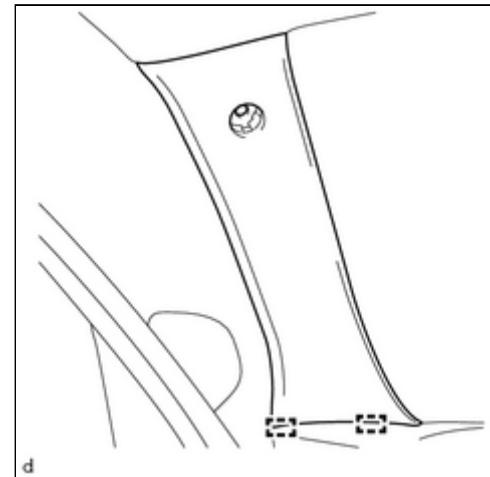

(d) Detach the 2 guides to remove the front pillar garnish LH.

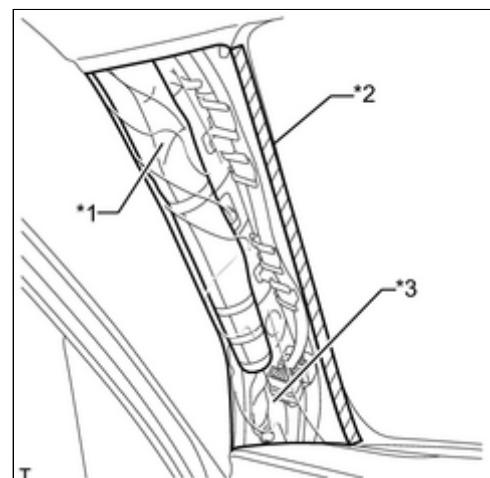

(e) Protect the curtain shield airbag assembly.

- (1) Completely cover the curtain shield airbag assembly with a protective cover and secure the ends of the cover with adhesive tape as shown in the illustration.

#### Text in Illustration

*1	Curtain Shield Airbag Assembly
*2	Adhesive Tape
*3	Protective Cover

#### NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish LH is removed.

### 13. REMOVE REAR NO. 1 FLOOR STEP COVER (w/ Rear No. 2 Seat)


- (a) Using a screwdriver, detach the 2 claws to remove the rear No. 1 floor step cover.

## Text in Illustration

*1	Protective Tape
----	-----------------


### HINT:

- Tape the screwdriver tip before use.
- Use the same procedure for all the rear No. 1 floor step covers.

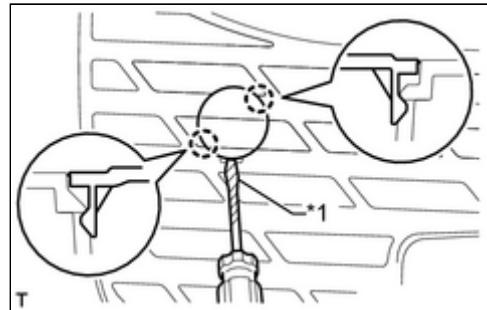

## 14. REMOVE QUARTER SCUFF PLATE LH (w/ Rear No. 2 Seat)

- (a) Remove the 2 bolts and quarter scuff plate LH.

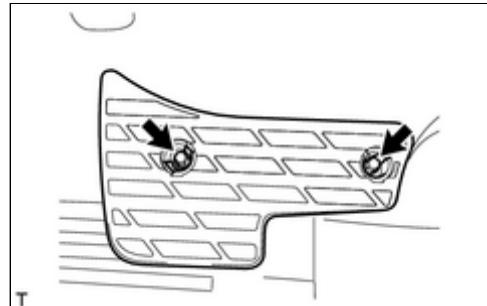

## 15. REMOVE QUARTER SCUFF PLATE RH (w/ Rear No. 2 Seat)

### HINT:

Use the same procedure as for the LH side.

## 16. REMOVE REAR DOOR SCUFF PLATE LH

- (a) Put protective tape around the rear door scuff plate LH.


- (b) Using a screwdriver, detach the 3 clips, 6 claws and 2 guides to remove the rear door scuff plate LH.

## Text in Illustration

*1	Protective Tape
----	-----------------

### HINT:

Tape the screwdriver tip before use.

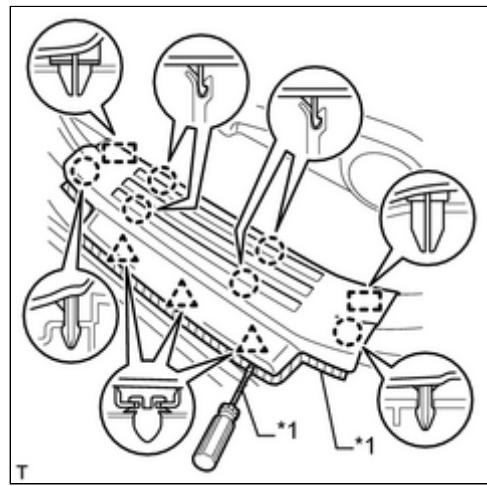


## 17. REMOVE REAR DOOR SCUFF PLATE RH

### HINT:

Use the same procedure as for the LH side.

## 18. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

(a) Remove the rear door opening trim weatherstrip LH.

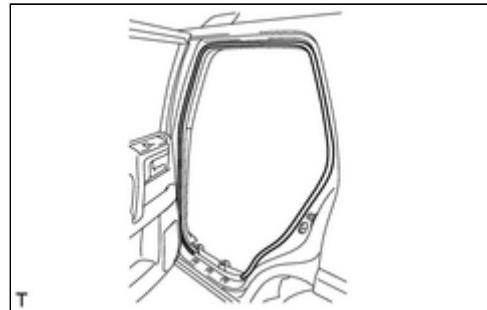

## 19. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

### HINT:


Use the same procedure as for the LH side.

## 20. REMOVE OUTER LAP BELT ANCHOR COVER

(a) Detach the 3 claws to remove the outer lap belt anchor cover.


### HINT:

Use the same procedure for the other outer lap belt anchor cover.

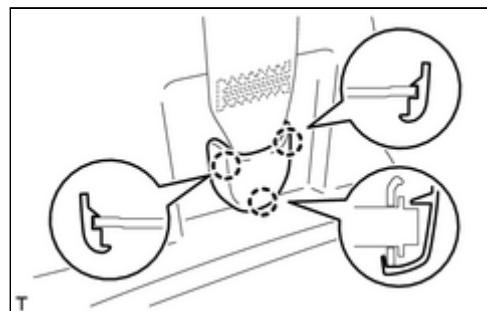


## 21. REMOVE LOWER CENTER PILLAR GARNISH LH

(a) Remove the bolt to disconnect the front seat outer belt floor anchor.

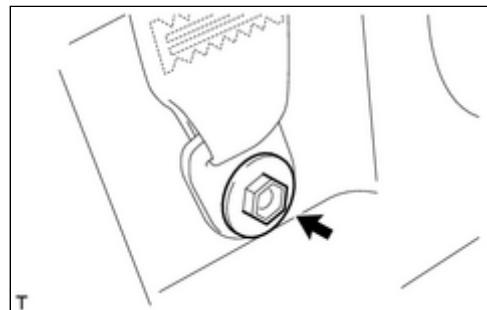

(b) Detach the 4 claws and 2 clips to remove the lower center pillar garnish LH.

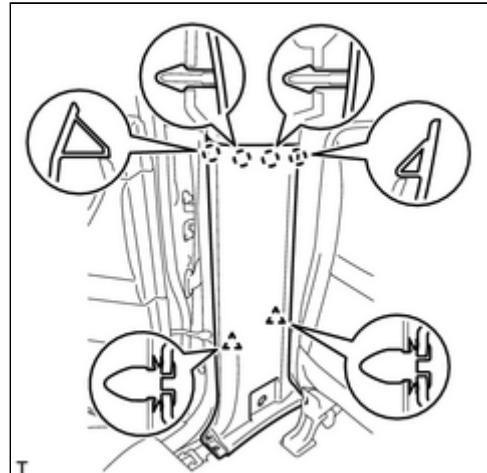


## 22. REMOVE LOWER CENTER PILLAR GARNISH RH

### HINT:

Use the same procedure as for the LH side.

## 23. REMOVE CENTER PILLAR GARNISH LH

- (a) Move the front shoulder belt anchor adjuster to the lowest position.

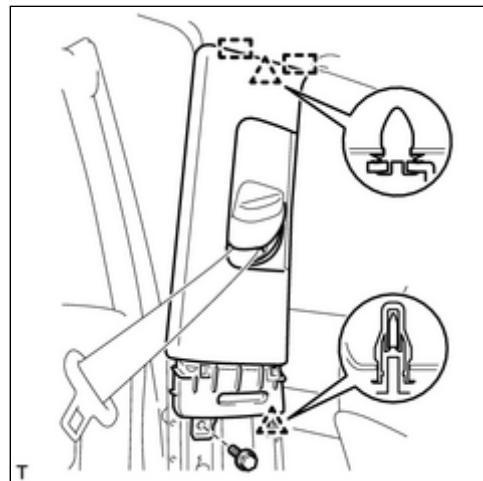

- (b) Remove the bolt.

- (c) Detach the 2 clips and 2 guides.

- (d) Pass the front seat outer belt floor anchor through the center pillar garnish LH to remove the center pillar garnish LH.


## 24. REMOVE CENTER PILLAR GARNISH RH

### HINT:

Use the same procedure as for the LH side.

## 25. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM COVER (w/o Deck Board)


- (a) Detach the 4 claws to open the cover.

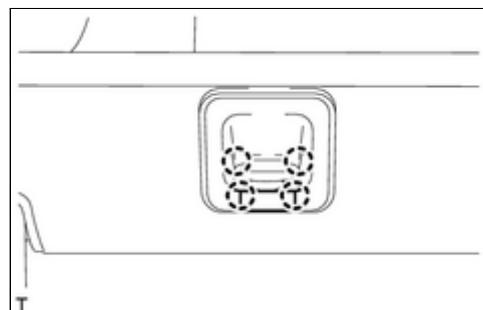

- (b) Remove the bolt, luggage hold belt striker and No. 1 luggage compartment trim cover.

### Text in Illustration

*1	Luggage Hold Belt Striker
----	---------------------------

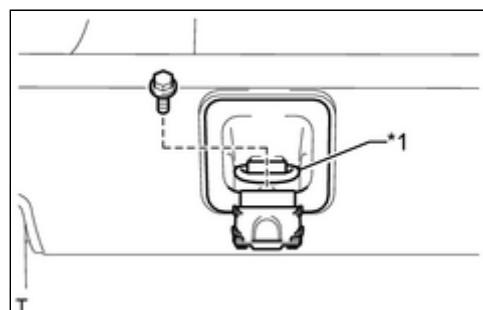


### HINT:

Use the same procedure for the other No. 1 luggage compartment trim cover.

## **26. REMOVE NO. 1 DECK BOARD SUB-ASSEMBLY (w/o Deck Board)**

- (a) Detach the clip to remove the No. 1 deck board sub-assembly.

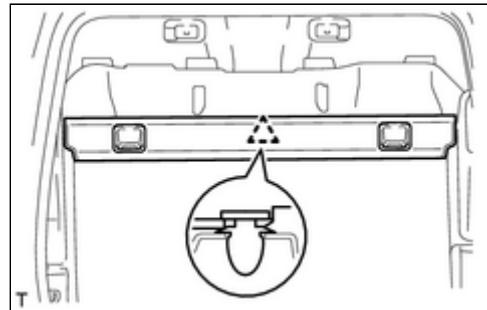

## **27. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSEMBLY LH (w/ Deck Board)**


- (a) Using a screwdriver, detach the 4 clips and 2 guides to remove the luggage compartment side cover sub-assembly LH.

**Text in Illustration**

*1	Protective Tape
----	-----------------

**HINT:**

Tape the screwdriver tip before use.

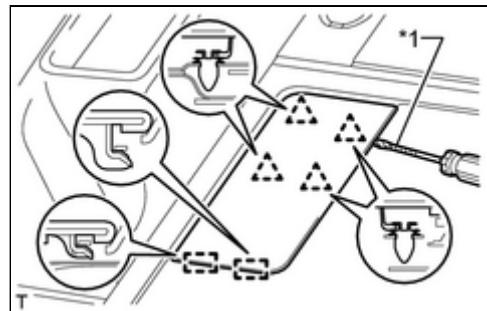


## **28. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSEMBLY RH (w/ Deck Board)**

**HINT:**

Use the same procedure as for the LH side.

## **29. REMOVE DECK BOARD ASSEMBLY (w/ Deck Board)**


- (a) Remove the 6 bolts.

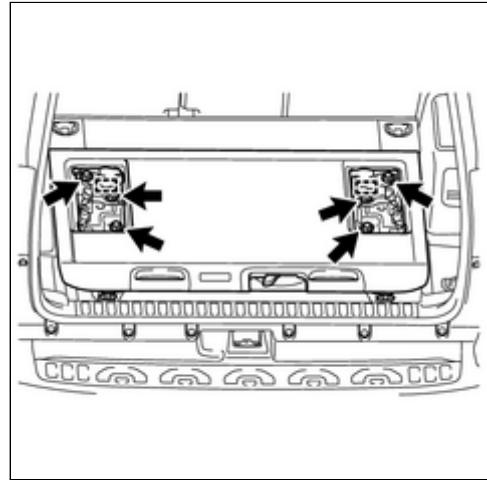

- (b) Detach the 2 guides to remove the deck board assembly.

## **30. REMOVE NO. 2 LUGGAGE COMPARTMENT TRIM COVER (w/ Deck Board)**

(a) Detach the 2 claws to open the cover.

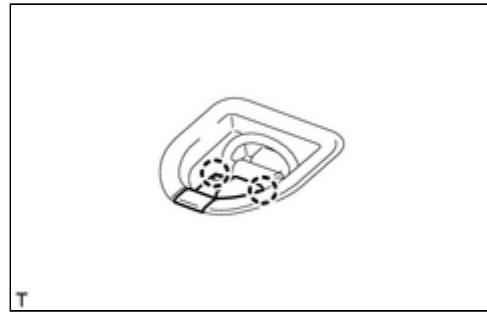


(b) Remove the bolt, luggage hold belt striker and No. 2 luggage compartment trim cover.

**Text in Illustration**

*1	Luggage Hold Belt Striker
----	---------------------------


**HINT:**

Use the same procedure for the other No. 2 luggage compartment trim cover.

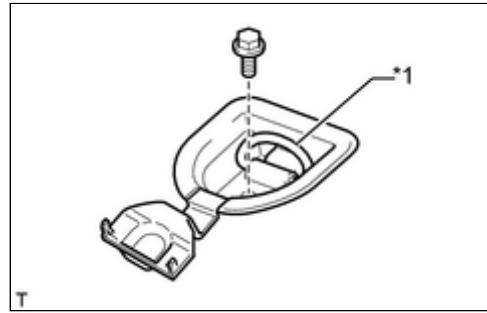


**31. REMOVE NO. 2 DECK BOARD SUB-ASSEMBLY (w/ Deck Board)**

(a) Detach the 2 clips and 2 guides to remove the No. 2 deck board sub-assembly.

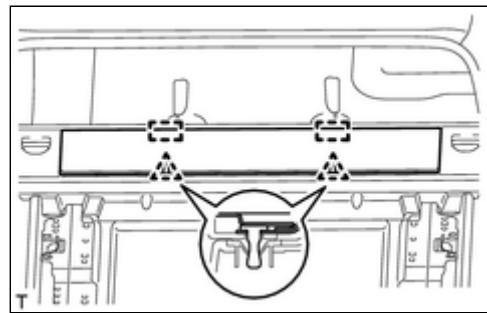


**32. REMOVE REAR NO. 2 FLOOR BOARD ASSEMBLY (w/ Deck Board)**

(a) Detach the 3 clips to remove the rear No. 2 floor board assembly.

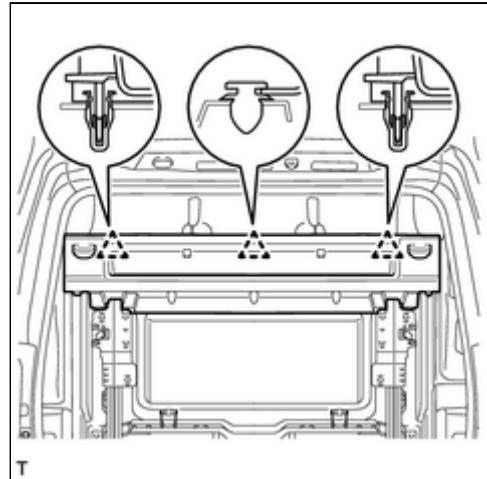


**33. REMOVE INNER FLOOR SIDE RAIL SUB-ASSEMBLY (w/ Deck Board)**

(a) Remove the 4 bolts and inner floor side rail sub-assembly.

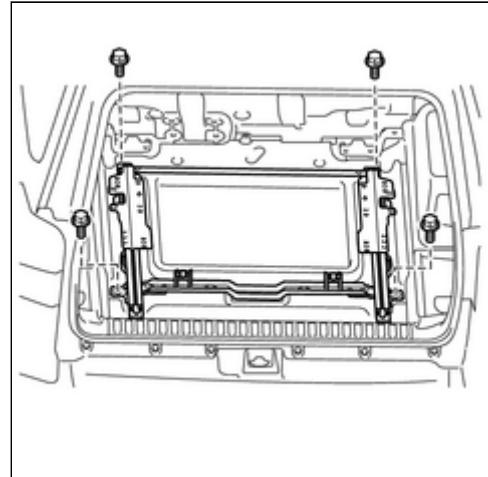


#### **34. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE**

(a) Detach the 5 clips to remove the rear floor mat rear support plate.

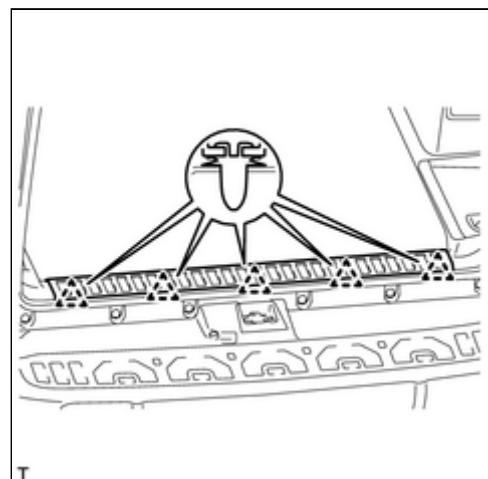

#### **35. REMOVE REAR FLOOR CARPET ASSEMBLY (w/o Deck Board)**

(a) Detach the 4 claws to remove the rear floor carpet assembly.

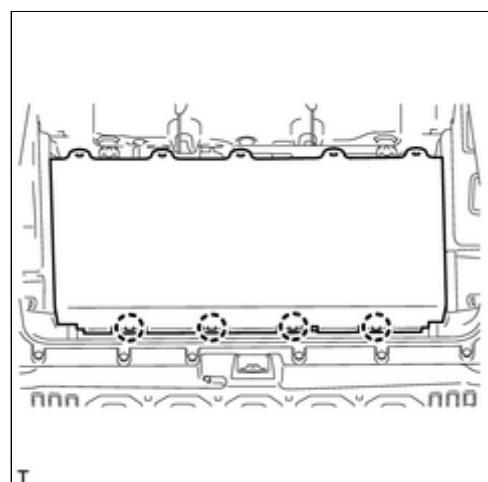


#### **36. REMOVE REAR NO. 1 SEAT OUTER LAP BELT ANCHOR COVER**

- (a) Detach the 3 claws to remove the rear No. 1 seat outer lap belt anchor cover.

**HINT:**

Use the same procedure for the other rear No. 1 seat outer lap belt anchor cover.

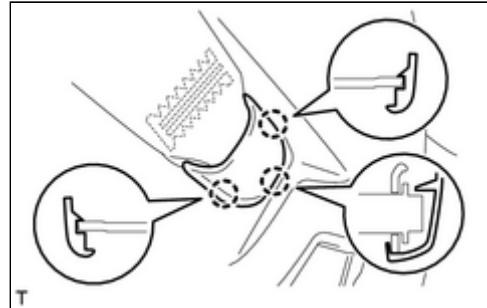


### 37. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK

- (a) Remove the No. 1 luggage compartment trim hook by turning it clockwise.

**HINT:**

Use the same procedure for the other No. 1 luggage compartment trim hook.

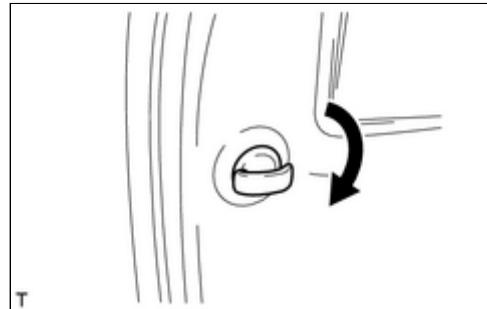

### 38. REMOVE FRONT DECK SIDE TRIM COVER LH


- (a) Using a screwdriver, detach the 2 claws to remove the front deck side trim cover LH.

**Text in Illustration**

*1	Protective Tape
----	-----------------

**HINT:**

Tape the screwdriver tip before use.

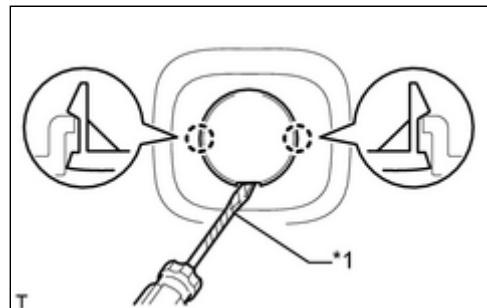


### 39. REMOVE FRONT DECK SIDE TRIM COVER RH

**HINT:**

Use the same procedure as for the LH side.

### 40. REMOVE NO. 2 LUGGAGE COMPARTMENT TRIM COVER (w/o Rear No. 2 Seat)

- (a) Detach the 2 claws to open the cover.

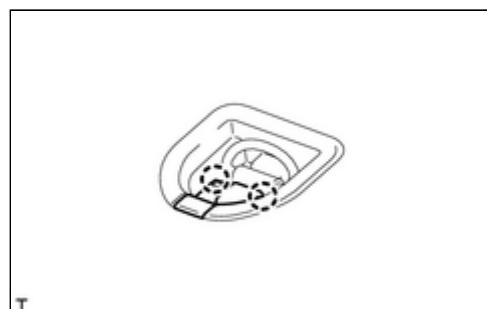


- (b) Remove the bolt, luggage hold belt striker and No. 2 luggage compartment trim cover.

## Text in Illustration

\*1

Luggage Hold Belt Striker

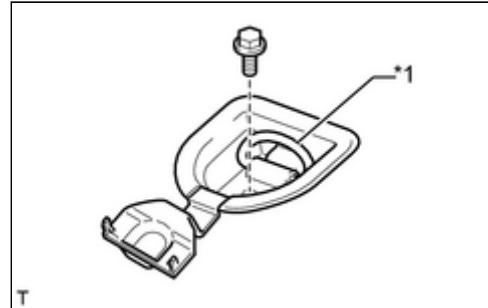


### HINT:

Use the same procedure for the other No. 2 luggage compartment trim cover.


## 41. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH

(a) w/o Rear No. 2 Seat:


- (1) Remove the bolt to disconnect the rear No. 1 seat outer belt floor anchor.

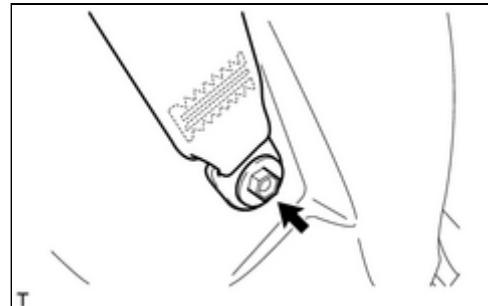

- (2) Remove the 3 bolts and 2 screws.
- (3) Detach the 7 clips, 5 claws and 2 guides.

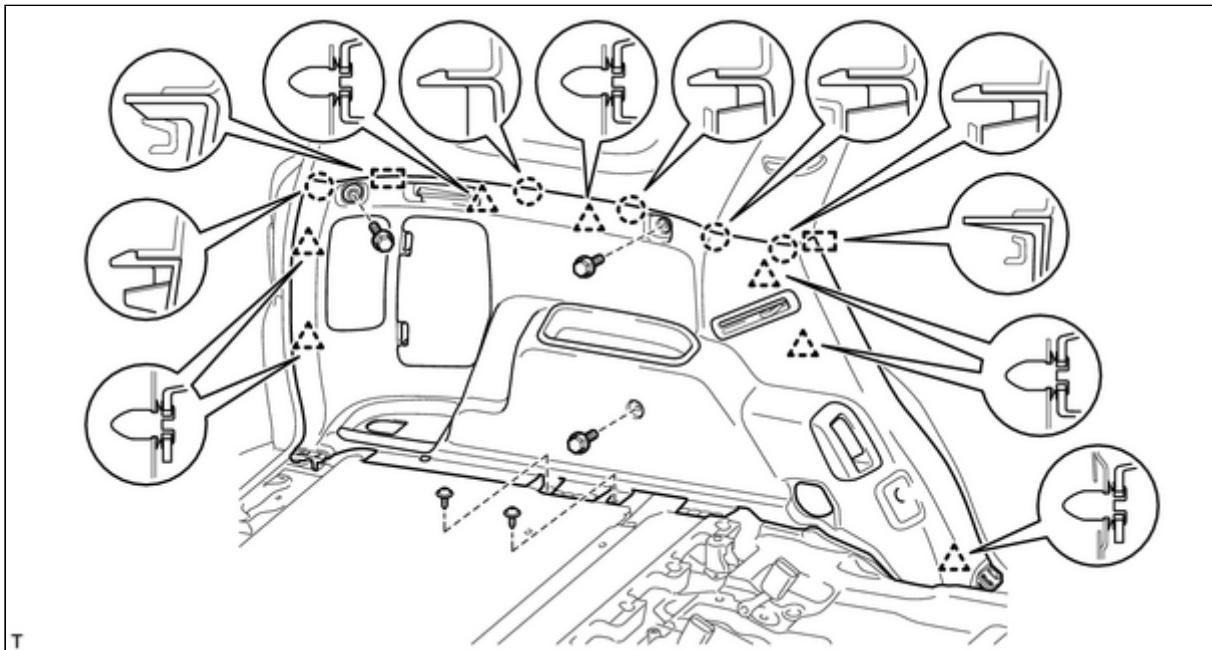


- (4) Detach the 6 claws and 2 guides and pass the rear seatback lock control lever base through the deck trim side panel assembly LH to remove the deck trim side panel assembly LH.

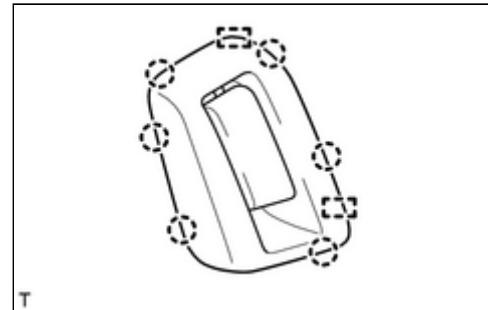


(b) w/ Rear No. 2 Seat:

- (1) Remove the bolt and disconnect the rear No. 1 seat outer belt floor anchor.

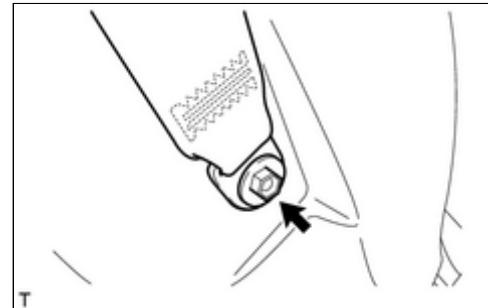


- (2) Remove the bolt to disconnect the rear No. 2 seat outer belt floor anchor.

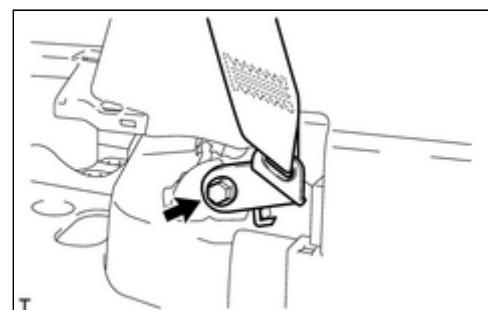

(3) Remove the 3 bolts and 2 screws.


(4) Detach the 7 clips, 5 claws and 2 guides to remove the deck trim side panel assembly LH.

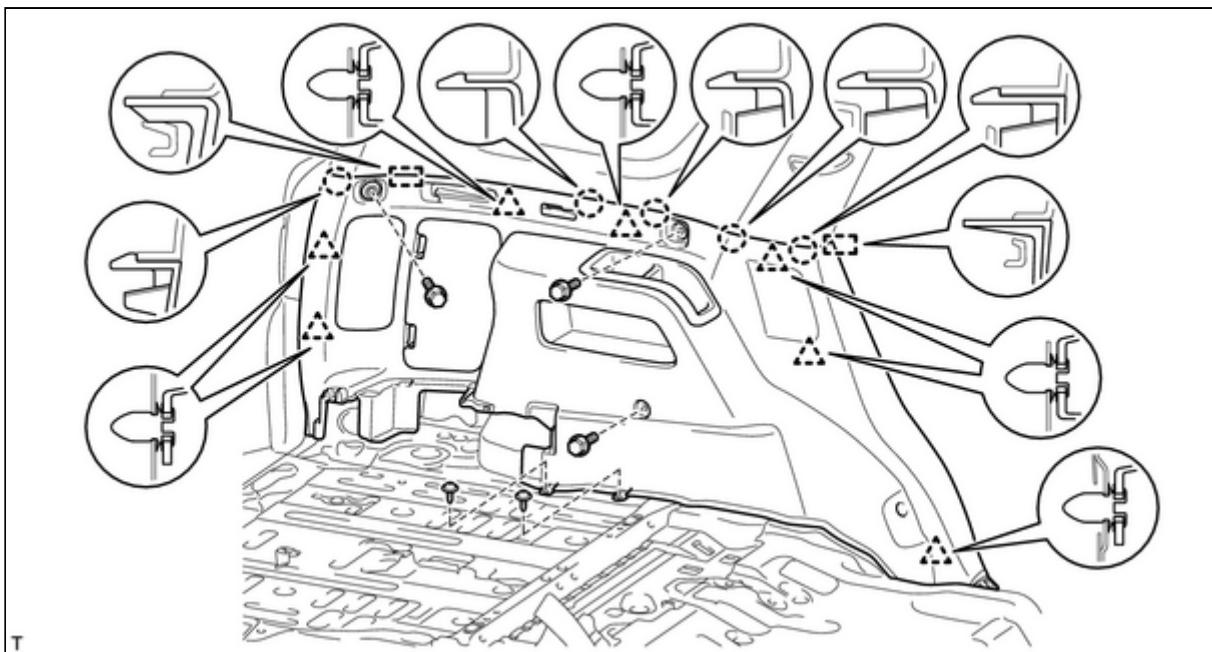


## 42. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH

(a) w/o Rear No. 2 Seat:

- (1) Remove the bolt to disconnect the rear No. 1 seat outer belt floor anchor.

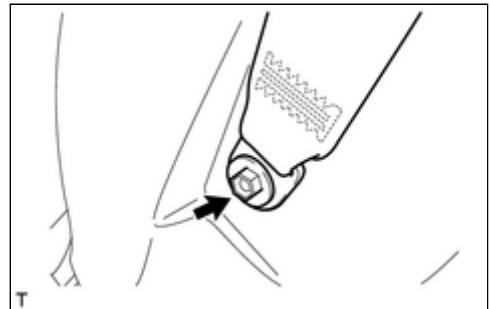


- (2) Remove the 3 bolts and screw.
- (3) Detach the 7 clips, 5 claws and 2 guides.

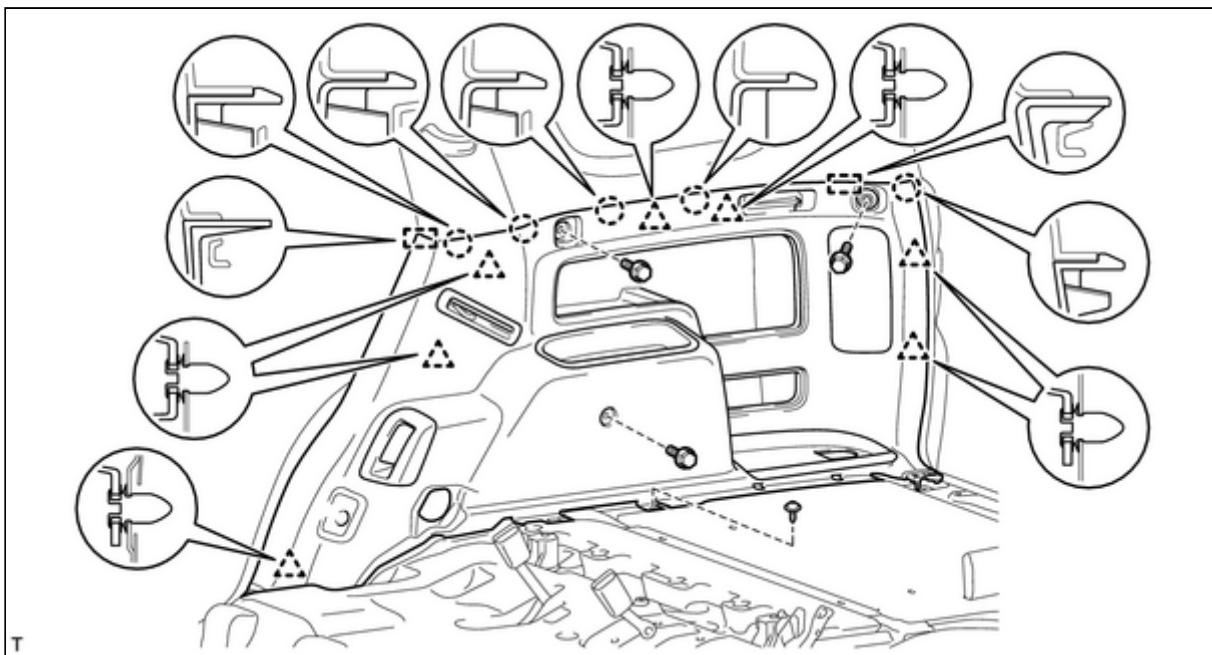


- (4) Disconnect each connector.

- (5) Detach the 6 claws and 2 guides and pass the rear seatback lock control lever base through the deck trim side panel assembly RH to remove the deck trim side panel assembly RH.

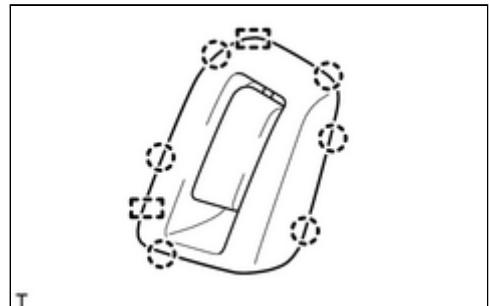


(b) w/ Rear No. 2 Seat:

- (1) Remove the bolt and disconnect the rear No. 1 seat outer belt floor anchor.

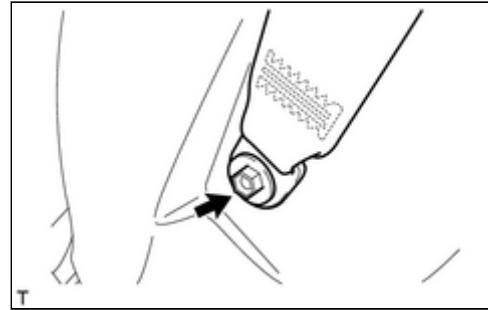


(2) Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor.

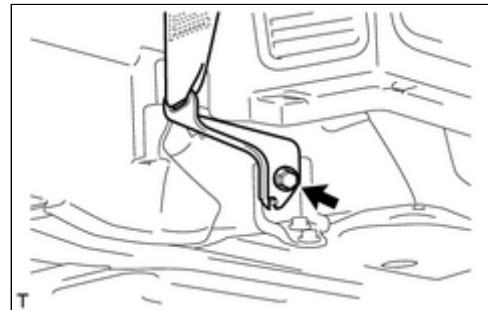

(3) Remove the 3 bolts and screw.

(4) Detach the 7 clips, 5 claws and 2 guides.


(5) Disconnect each connector and remove the deck trim side panel assembly RH.

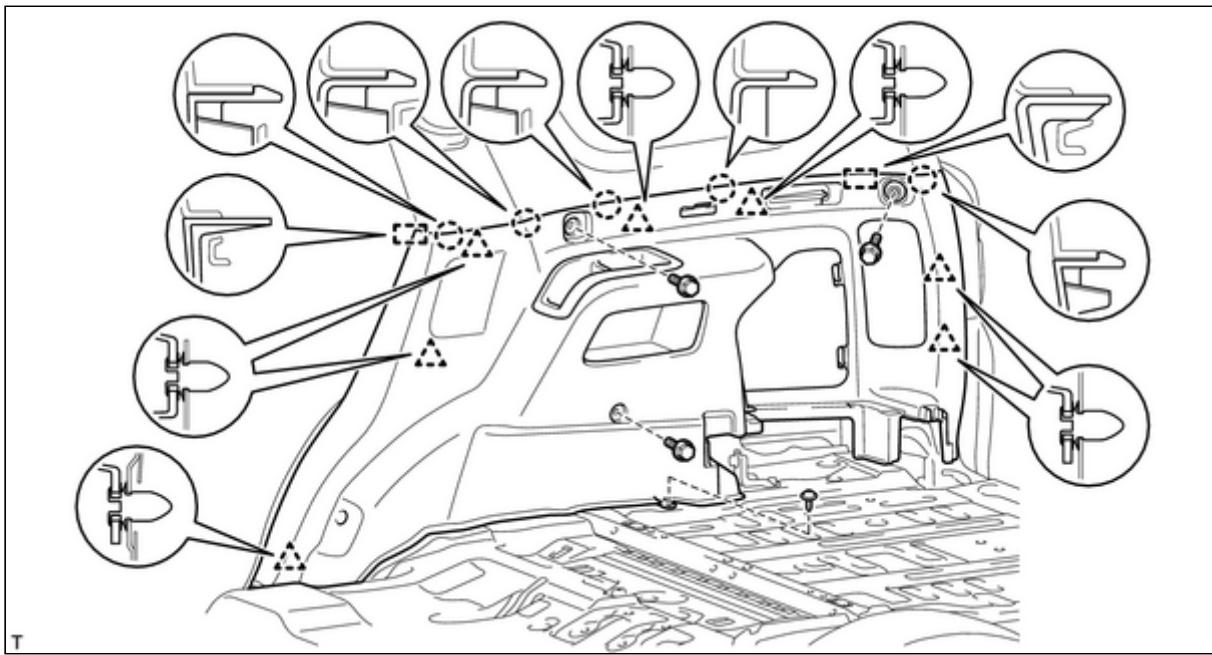


#### 43. REMOVE REAR NO. 2 WINDOW SIDE GARNISH ASSEMBLY LH

(a) w/o Rear No. 2 Seat:

- (1) Detach the 6 clips and guide to remove the rear No. 2 window side garnish assembly LH.

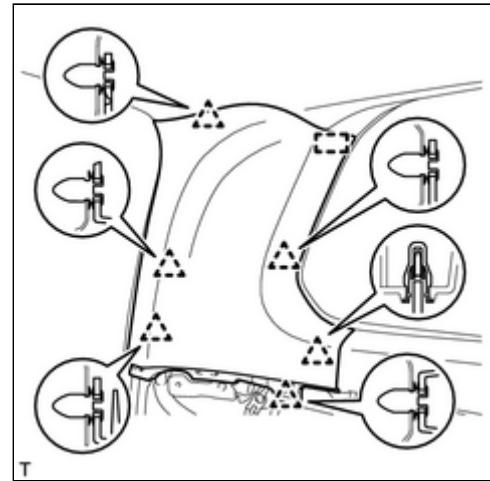


(b) w/ Rear No. 2 Seat:

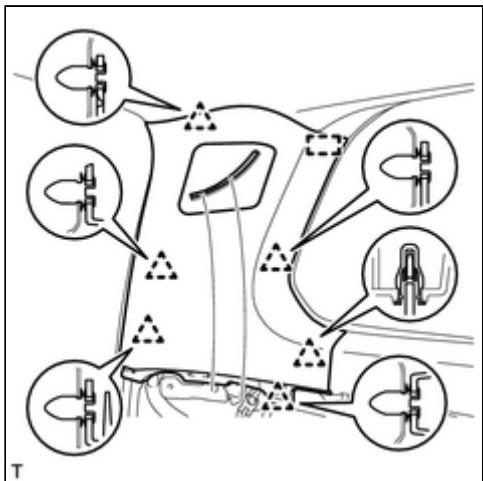

- (1) Detach the 6 clips and guide.

- (2) Detach the 7 claws and guide and pass the rear No. 2 seat outer belt floor anchor through the rear No. 2 window side garnish assembly LH to remove the rear No. 2 window side garnish assembly LH.

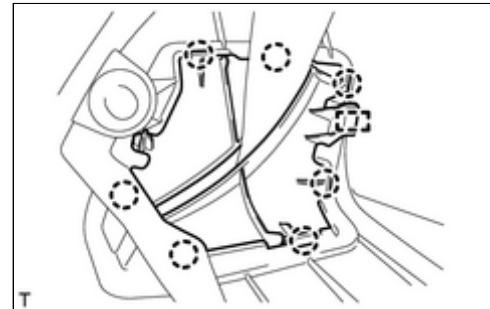


#### 44. REMOVE REAR NO. 2 WINDOW SIDE GARNISH ASSEMBLY RH

##### HINT:


Use the same procedure as for the LH side.

#### 45. REMOVE REAR WINDOW SIDE GARNISH ASSEMBLY LH

(a) Detach the 7 clips and 4 guides.

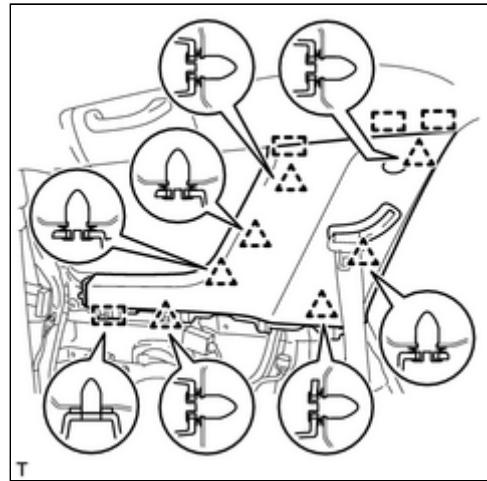

(b) Detach the 4 claws and 2 guides and pass the rear No. 1 seat outer belt floor anchor through the rear window side garnish assembly LH to remove the rear window side garnish assembly LH.

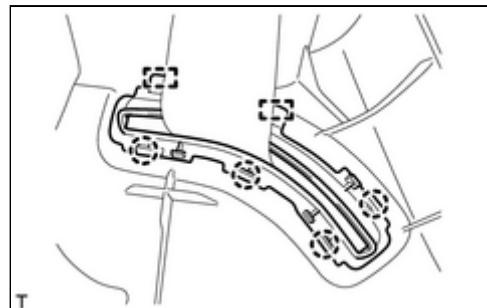

## 46. REMOVE REAR WINDOW SIDE GARNISH ASSEMBLY RH

### HINT:

Use the same procedure as for the LH side.

## 47. REMOVE ASSIST GRIP SUB-ASSEMBLY

(a) Using a clip remover, detach the 4 claws.

### Text in Illustration

\*1


Protective Tape

### NOTICE:

Do not forcibly pry the assist grip plugs to prevent them from being deformed.


### HINT:

- Gently pry the assist grip plugs as shown in the illustration to detach the claws.
- Tape the clip remover tip before use.
- Use the same procedure for the other assist grip sub-assembly.

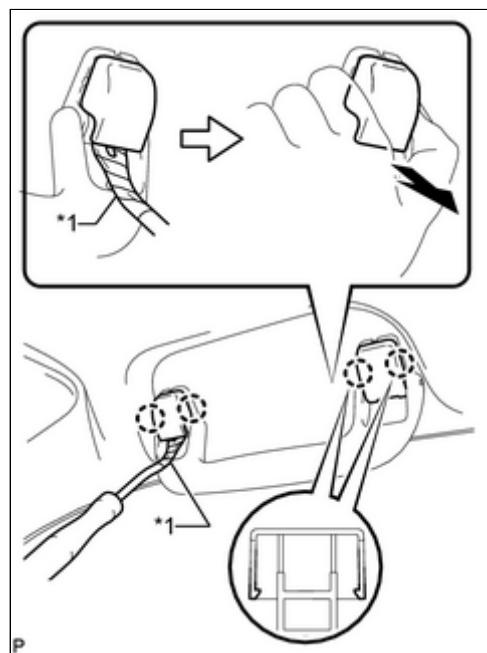

(b) Pull off the 2 assist grip plugs by hand.

(c) Detach the 2 clips to remove the assist grip sub-assembly.

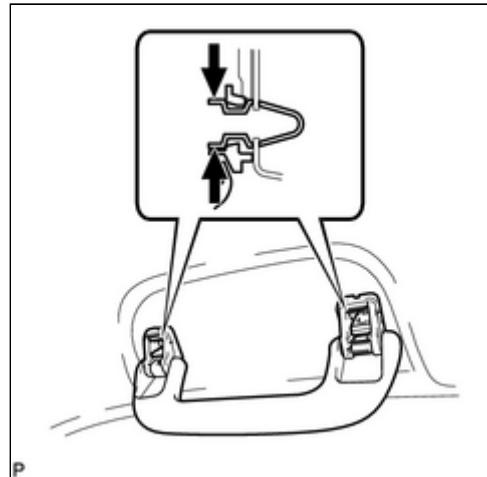

(d) Remove the 2 clips from the vehicle body.


## 48. REMOVE REAR ASSIST GRIP ASSEMBLY

(a) Using a clip remover, detach the 4 claws.

### Text in Illustration

\*1

Protective Tape

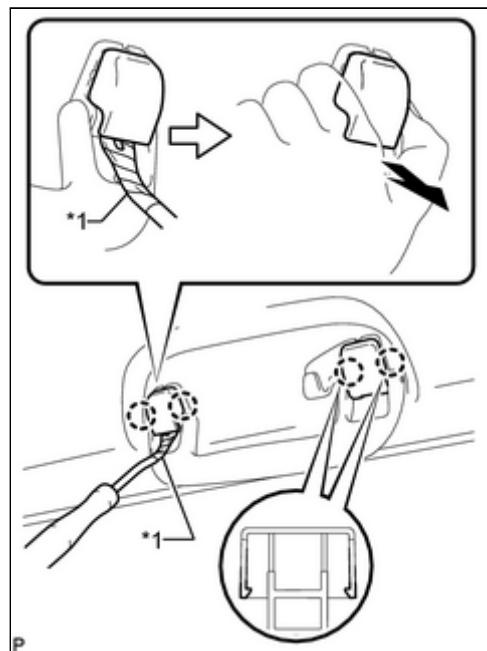


### NOTICE:

Do not forcibly pry the assist grip plugs to prevent them from being deformed.

### HINT:

- Gently pry the rear assist grip plugs as shown in the illustration to detach the claws.
- Tape the clip remover tip before use.
- Use the same procedure for the other rear assist grip assembly.

(b) Pull off the 2 assist grip plugs by hand.

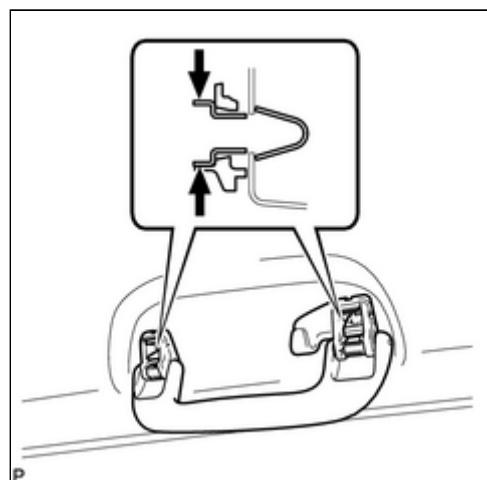

(c) Detach the 2 clips to remove the rear assist grip assembly.


(d) Remove the 2 clips from the vehicle body.

#### 49. REMOVE COAT HOOK

(a) Using a screwdriver, detach the claw to open the cover.

##### Text in Illustration


*1	Protective Tape
----	-----------------

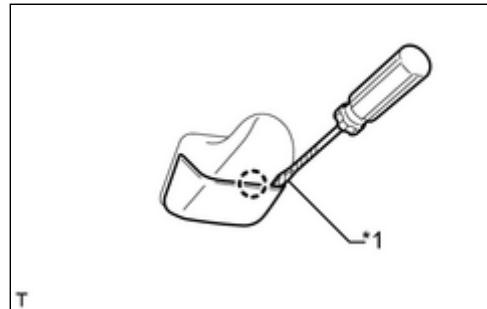

(b) Remove the screw and coat hook.


##### HINT:

Use the same procedure for the other coat hook.

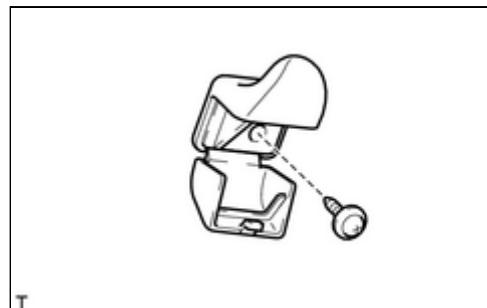

#### 50. REMOVE VISOR BRACKET COVER LH

(a) Detach the 4 claws to remove the visor bracket cover LH.

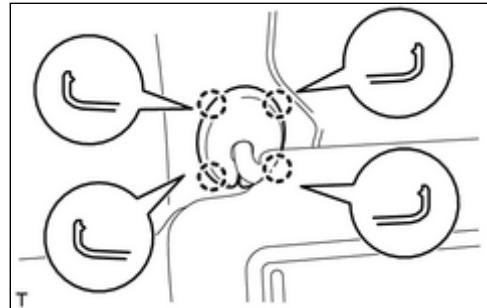


#### 51. REMOVE VISOR BRACKET COVER RH

##### HINT:

Use the same procedure as for the LH side.

#### 52. REMOVE VISOR ASSEMBLY LH

(a) Remove the 2 screws and visor assembly LH.

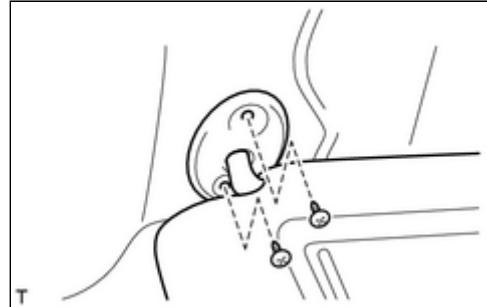


### 53. REMOVE VISOR ASSEMBLY RH

#### HINT:

Use the same procedure as for the LH side.

### 54. REMOVE VISOR HOLDER

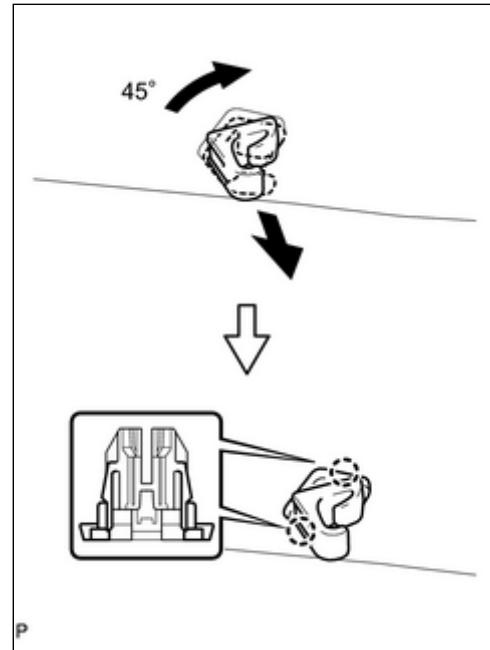

- (a) Turn the visor holder approximately 45° to pull it out as shown in the illustration.

- (b) Detach the 2 claws to remove the visor holder.

#### HINT:

Use the same procedure for the other visor holder.

### 55. REMOVE DRIVE MONITOR SWITCH (w/ Drive Monitor Switch)

INFO

### 56. REMOVE MAP LIGHT ASSEMBLY

INFO

### 57. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

INFO


### 58. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

INFO

### 59. REMOVE ROOF HEADLINING ASSEMBLY


#### HINT:

Before removing the roof headlining assembly, move the front seats and rear No. 1 seat to the positions shown in the illustration.

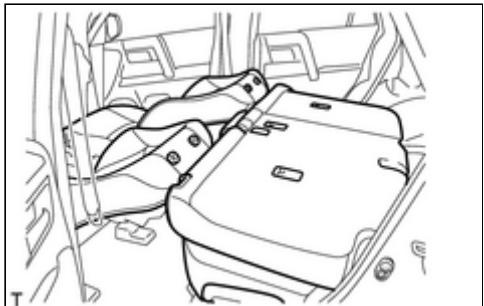


(a) w/ EC Mirror:

Disconnect the inner rear view mirror assembly connector.

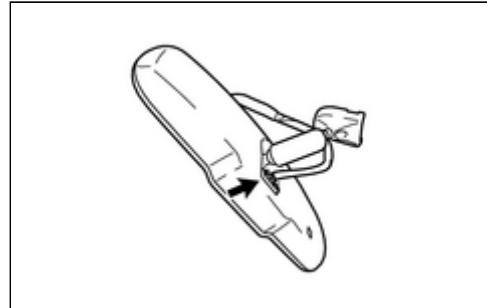


(b) w/ Sliding Roof:


Disconnect the sliding roof drive gear connector.

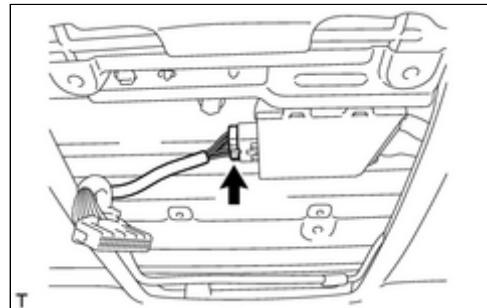


(c) Disconnect each connector and detach the 4 clamps from the front pillar LH.

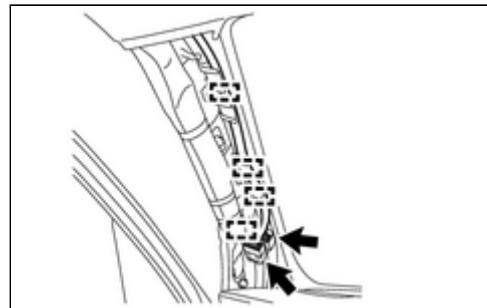

(d) Disconnect the connector and detach the 2 clamps from the front pillar RH.

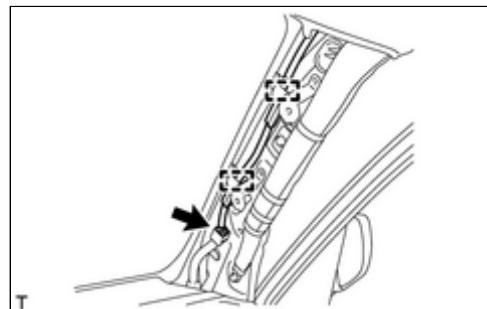


(e) Disconnect the connector and detach the clamp from the rear pillar RH.

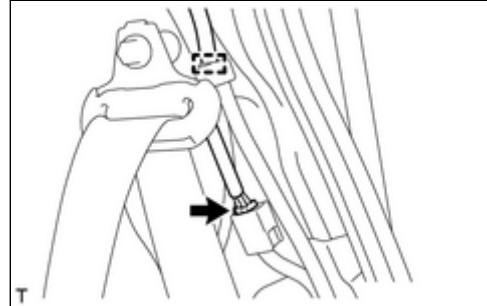

(f) w/o Sliding Roof:

- (1) Remove the 5 clips.

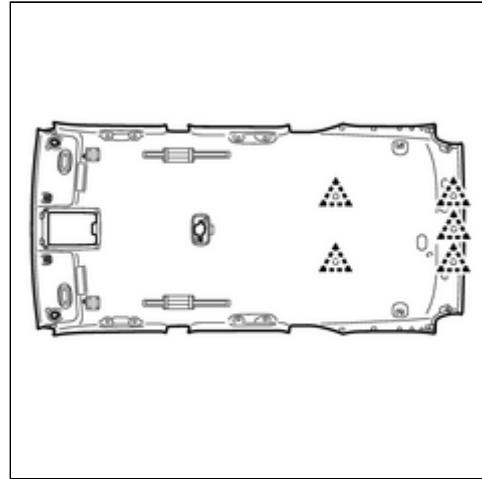


(g) w/ Sliding Roof:

- (1) Remove the 5 clips.
- (2) Detach the 2 guides and 8 fasteners.

**Text in Illustration**


*1	Guide
*2	Fastener

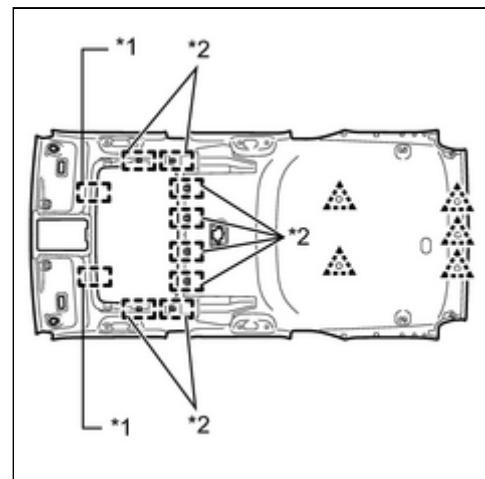

(h) Remove the roof headlining assembly from the back door as shown in the illustration.


**NOTICE:**

Be careful not to damage the roof headlining assembly when remove it.

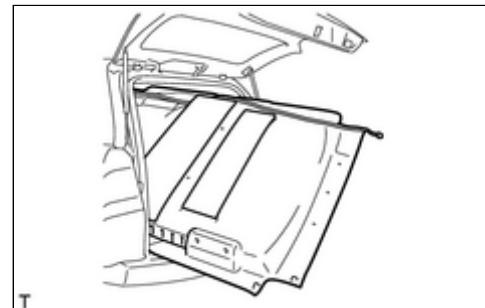

## 60. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

(a) Detach the 4 claws of the front shoulder belt anchor plate sub-assembly LH to slide the front shoulder belt anchor plate sub-assembly LH to remove it.

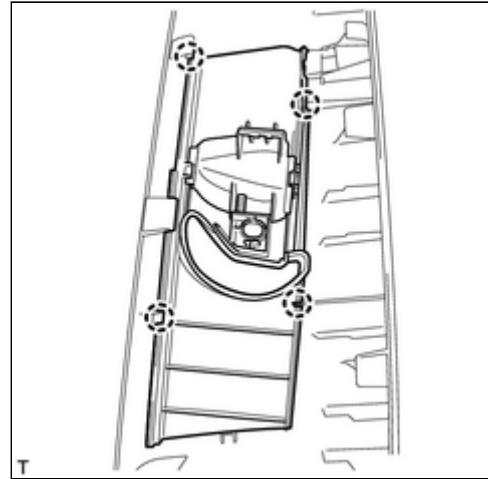


## 61. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

### HINT:

Use the same procedure as for the LH side.

## 62. REMOVE ROOF SIDE RAIL GARNISH ASSEMBLY LH

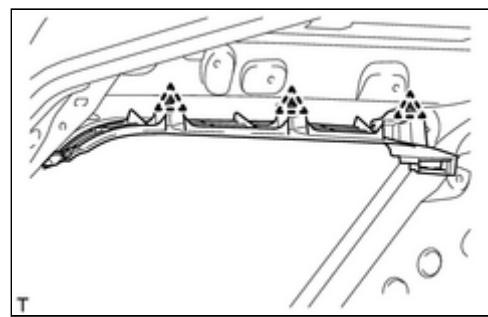

## 63. REMOVE ROOF SIDE RAIL GARNISH ASSEMBLY RH

### HINT:

Use the same procedure as for the LH side.

## 64. REMOVE REAR NO. 3 SIDE RAIL SPACER LH



## 65. REMOVE REAR NO. 3 SIDE RAIL SPACER RH

### HINT:


Use the same procedure as for the LH side.

## 66. REMOVE QUARTER TRIM COVER

(a) Detach the 2 claws to remove the quarter trim cover.


**HINT:**

Use the same procedure for the other quarter trim cover.

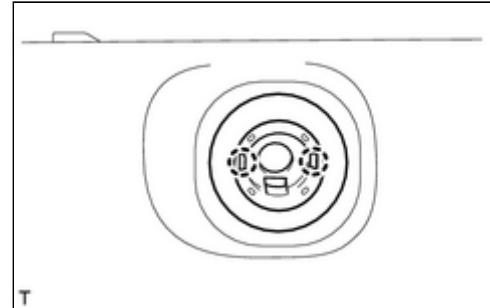


## 67. REMOVE QUARTER TRIM JACK COVER SUB-ASSEMBLY

(a) Detach the 3 claws and 2 guides to remove the quarter trim jack cover sub-assembly.

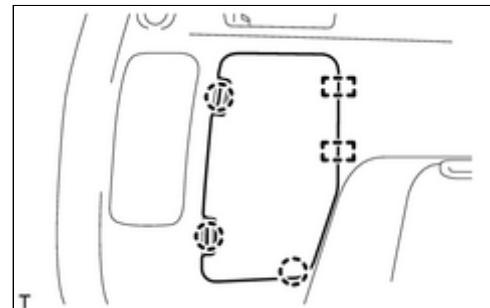

## 68. REMOVE REAR COMBINATION LIGHT SERVICE COVER LH

(a) Detach the 2 claws and 2 guides to remove the rear combination light service cover LH.

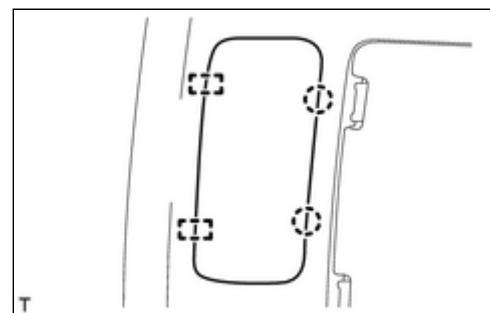


## 69. REMOVE REAR COMBINATION LIGHT SERVICE COVER RH

**HINT:**

Use the same procedure as for the LH side.

## 70. REMOVE SIDE TRIM BOX LH (w/o Rear No. 2 Seat)

(a) Remove the 2 screws.

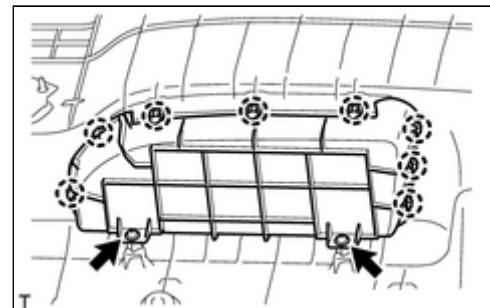

(b) Detach the 8 claws to remove the side trim box LH.


## 71. REMOVE SIDE TRIM BOX RH (w/o Rear No. 2 Seat)

**HINT:**

Use the same procedure as for the LH side.

**72. REMOVE REAR FLOOR FINISH SIDE PLATE LH (w/o Rear No. 2 Seat)**

- (a) Remove the 2 screws.

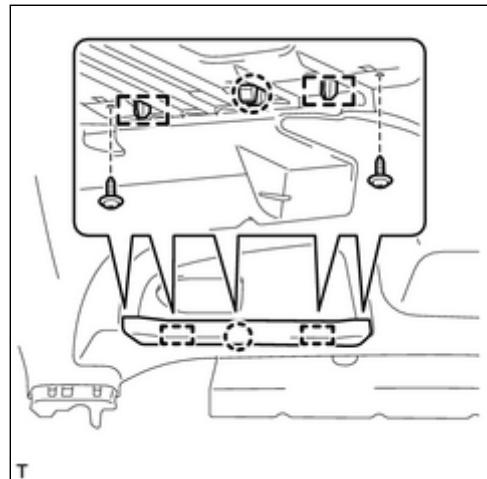


- (b) Detach the claw and 2 guides to remove the rear floor finish side plate LH.

**73. REMOVE REAR FLOOR FINISH SIDE PLATE RH (w/o Rear No. 2 Seat)****HINT:**

Use the same procedure as for the LH side.

**74. REMOVE REAR SEAT SHOULDER BELT HANGER LH (w/  
Rear No. 2 Seat)**


- (a) Detach the claw and guide to remove the rear seat shoulder belt hanger LH.

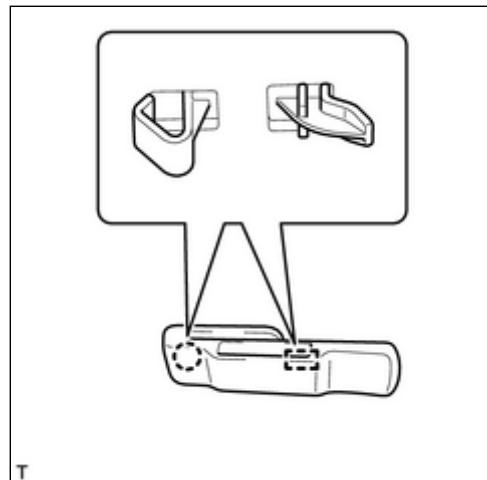**75. REMOVE REAR SEAT SHOULDER BELT HANGER RH (w/ Rear No. 2 Seat)****HINT:**

Use the same procedure as for the LH side.


**76. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH (w/  
Rear No. 2 Seat)**

- (a) Detach the 4 claws and 2 guides to remove the quarter trim lid sub-assembly RH.

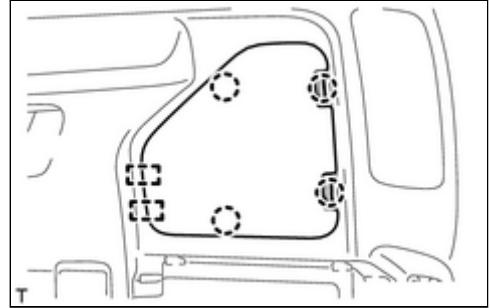

## 77. REMOVE DECK SIDE TRIM CUP HOLDER LH (w/ Rear No. 2 Seat)

(a) Remove the 4 screws.

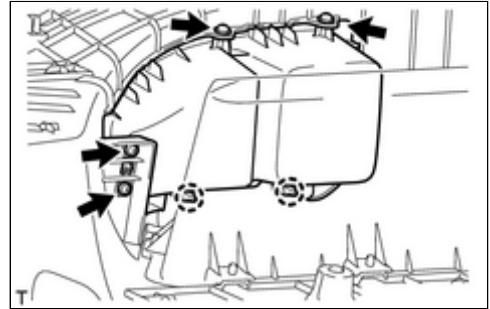

(b) Detach the 2 claws to remove the deck side trim cup holder LH.

## 78. REMOVE DECK SIDE TRIM CUP HOLDER RH (w/ Rear No. 2 Seat)

### HINT:

Use the same procedure as for the LH side.

