

Using Your AirTurn Bite Switch

How to Use Your Bite Switch



You can plug your AirTurn Bite Switch into the AirTurn DIGIT 200 for wireless remote control, or interface with any device that can take a 3.5mm (1/8") plug and requires momentary switching. The 36" cable provides plenty of room to maneuver and <u>extension cables</u> are available if needed.

Instructions for Use

Place switch in mouth and use the front teeth to clamp down with gentle pressure to actuate it. A soft click indicates the switch has been pressed and again when it is released. Do not use the sharp canine teeth. The switch should be held and actuated with only the front teeth, and only hard enough to collapse the snap button underneath the cover.



How to use as a Hand Control



The AirTurn Bite Switch may also be used as a press switch. It can be held in the hand or attached to other devices for remote control. Plastic wire ties or hook/loop tape may be used to attach the switch to a mic stand or wheelchair. As a hand switch, it is easily held between the thumb and finger.

The switch can then be used as a counter or actuator for many different apps

Care of your Bite Switch

To clean your Bite Switch, only use warm water and soap and rinse thoroughly. Do not use bleach, hydrogen peroxide or alcohol as it will degrade the silicone. Only submerse the blue part of the cable when cleaning or sanitizing.

Important Features

The actual depression of the switch mechanism is only about 1/16"(1.6mm), so very little jaw movement is required, and head motion is minimal.

The switch is protected by a food-grade silicone covering, made from FDA- compliant materials.

Support: 888-247-1223

support@airturn.com