



TechAssist

User Instructions



Congratulations on your purchase of the AirTurn TechAssist – your stay at home, work at home, learn at home assistant! We hope you enjoy the many uses that this tool will provide.

Your TechAssist consists of two parts. The goSTAND and the MANOS. The MANOS holds your tablet and goSTAND holds the MANOS.

They connect together with a standard 5/8-27 thread that is used in the pro audio industry for mic stands and microphone holders.



Attaching the MANOS to the goSTAND

First set up the goSTAND. If you plan to use it at full height, extend the feet to provide more stability. To attach the MANOS extend the goSTAND first to waist height. *Note: Be careful not to over tighten the thumb screws on the goSTAND.*

Loosen the two arm knobs and open the MANOS so the two arms click to hold it flat. *Note: Do not completely remove the arm knobs from the MANOS.*

Loosen the pivotknob and move the pivot perpendicular to the arms. Retighten the pivot knob. Now you can easily screw the MANOS onto the goSTAND.



Mounting Your Tablet/Phone to the MANOS

Release the two arms from the clips. Squeeze open one of the “hands” and place one edge of the tablet or phone into the hand. Then squeeze open the other hand and adjust the arm to engage the other side of the tablet.

Adjust the arms inward until there is a firm fit against your tablet and then firmly tighten the arm knobs. Loosen the pivot knob and position to the desired tilt and tighten firmly. Rotate the tablet or phone to the desired portrait or landscape mode.

Note: If you plan to use a tablet in portrait mode, make sure to place tablet off center, so more than half of the tablet will be above the midpoint of the hands. By placing the center of gravity higher the tablet will not droop down.



Helpful Tips

When using the TechAssist with a phone or small tablet place the device off-center so you don't cover the "home button".

For smaller devices place the edge into the corner of the hand for a tighter fit.

On larger devices, such as the iPad pro or a device with a case, both edges of the inside of the hand will touch the back of the tablet.



Add-On Accessories

Get even more accessibility and versatility when you add a Side Mount Clamp or Boom Extension.

Use a Side Mount to display your device when using a microphone or adding accessories to your performance rig.

Use a Boom to bring your device closer for better access when sitting in a recliner, lounging on the couch, or working on projects.

Check with your dealer or order from our website.

App Control Made Easy

Check out our Bluetooth controllers that offer easy hands-free or handheld control for page turning, teleprompters, video streaming, MIDI, and more!



Warranty

Your AirTurn TechAssist will last for many years. For extra protection, register today for a 2-year repair or exchange warranty. Register at warranty.airturn.com



We'll hold your tablet or phone so you can work, learn, watch, or play!

AirTurn, Inc. 1668 Valtec Lane Ste G Boulder, CO 80301

888-247-1223 support@airturn.com

www.airturn.com