


QUICK START GUIDE


L U M I

TOUCH PANEL	3-4
KIT CONTENTS	5-6
ASSEMBLY	7-12
OPERATION	13-16
CARE INSTRUCTION	17
WARRANTY	18


TOUCH PANEL: FRONT

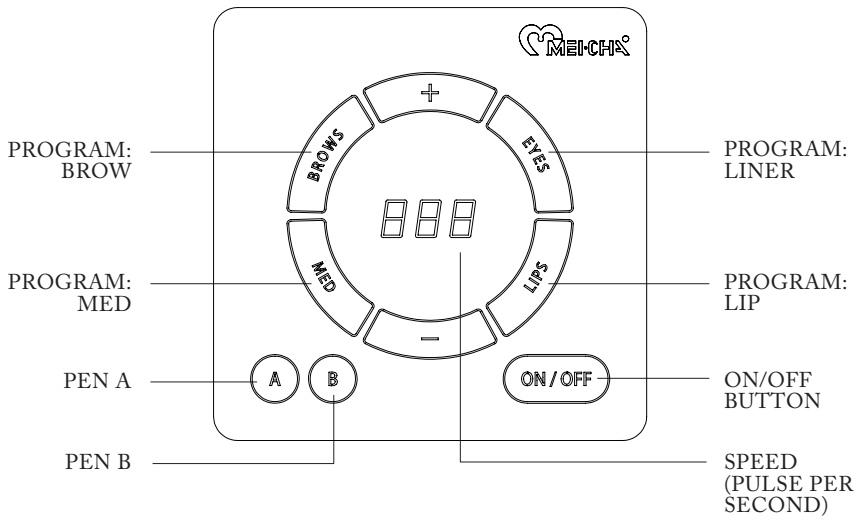


TOUCH PANEL: BACK

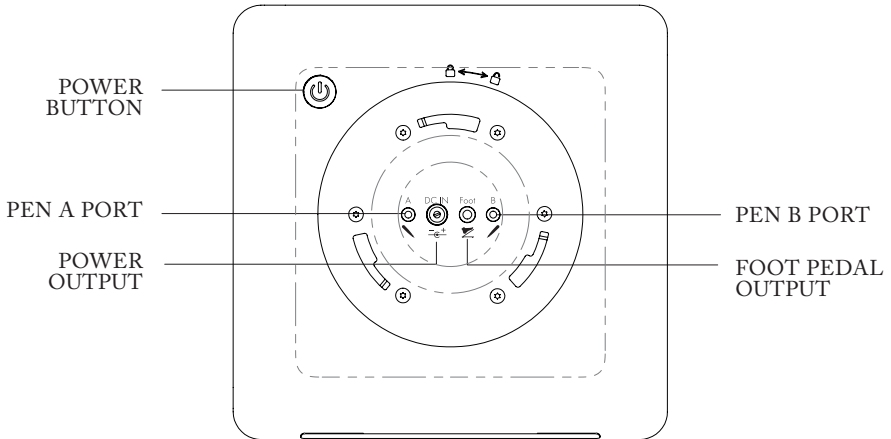


KIT CONTENTS

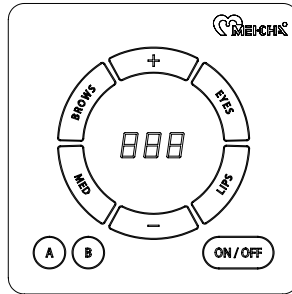


LUMI PAD

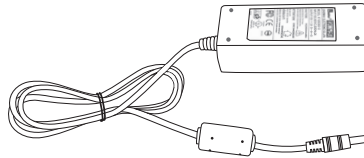


POWER SUPPLY

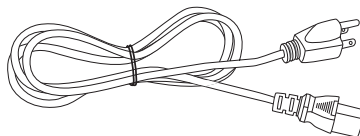


DEVICE POWER CORD

 


LUMI PEN

 

LUMI PEN POWER CORD

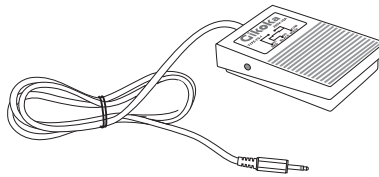



FOOT PEDAL

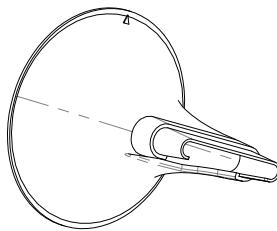




STAND

ASSEMBLY



1. CONNECT LUMI PEN POWER CORD TO END OF LUMI PEN.
LUMI SYSTEM CAN ACCOMMODATE UP TO TWO PENS FOR DIFFERENT PROCEDURE USAGES.
2. FEED LUMI PEN POWER CORD, POWER CORD AND FOOT PEDAL (OPTIONAL) THROUGH THE STAND.

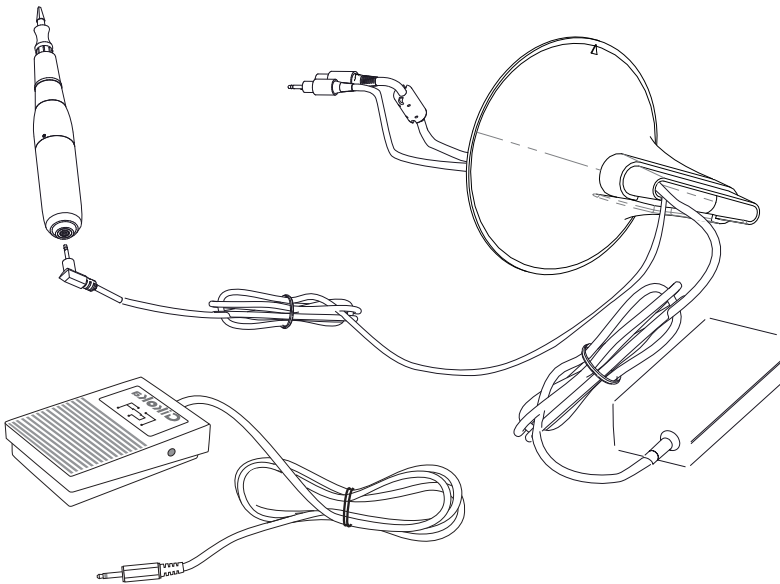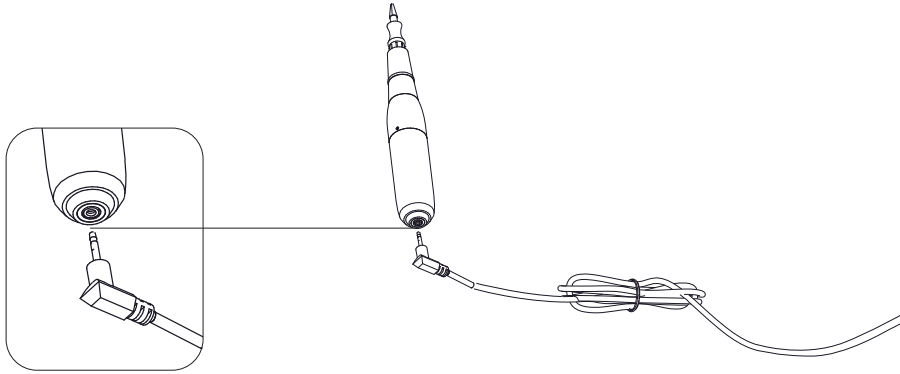


3. ATTACH CORDS TO THE BACK OF DEVICE.

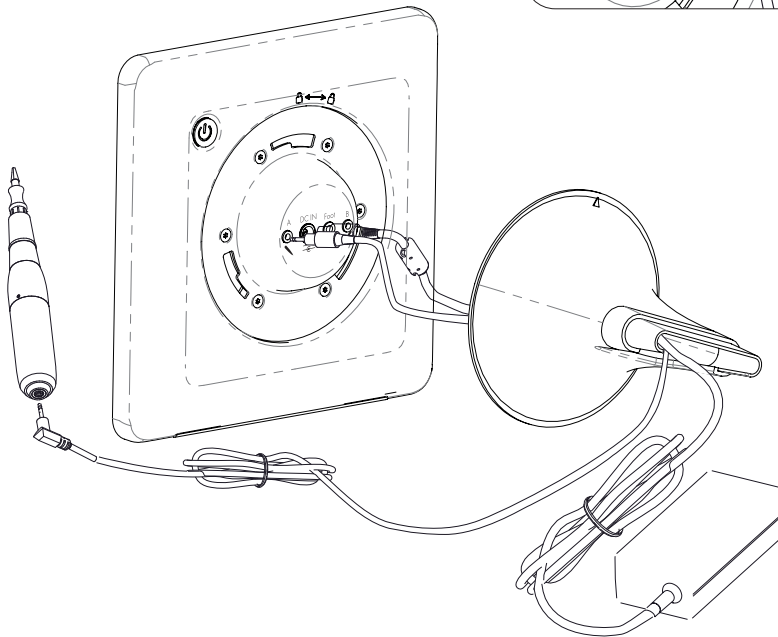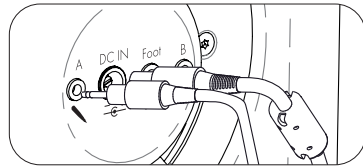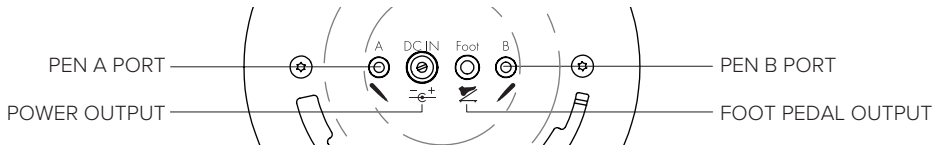



4. TWIST AND LOCK STAND INTO THE BACK OF LUMI PAD.
MATCH INDICATION MARK WITH THE LOCK SYMBOL
AND TURN STAND COUNTER CLOCKWISE.

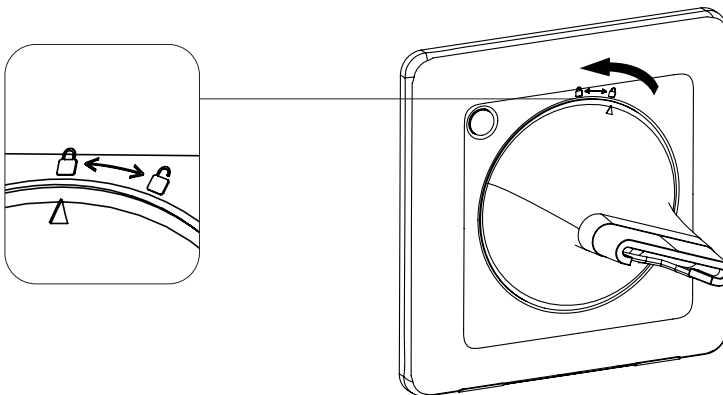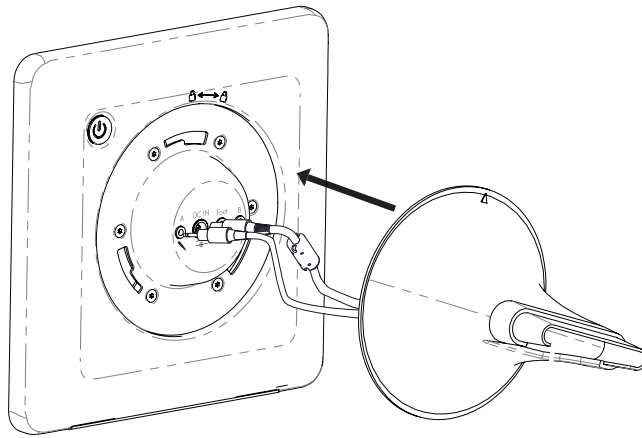

5. CONNECT POWER SUPPLY UNIT TO THE DEVICE POWER CORD.
PLUG INTO WALL ADAPTOR.


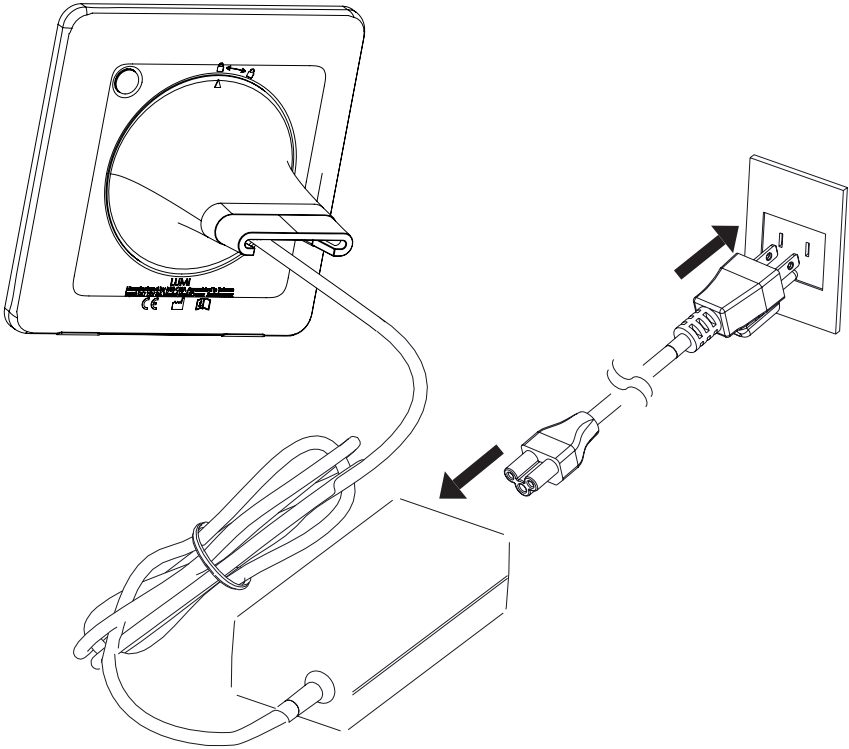


6. PUSH 1:POWER BUTTON ON THE BACK OF DEVICE TO POWER ON.
LUMI PANEL IN 2:STANDBY MODE.

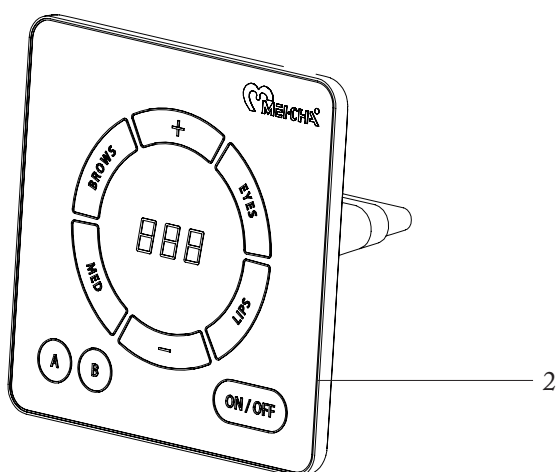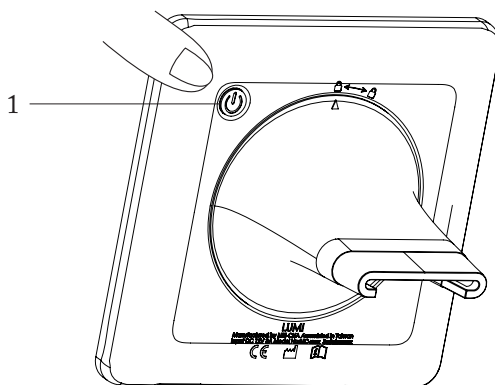


7. ATTACH ULTRA PRECISION NEEDLE TO LUMI PEN.


8. LUMI DIGITAL DEVICE IS NOW READY TO USE!

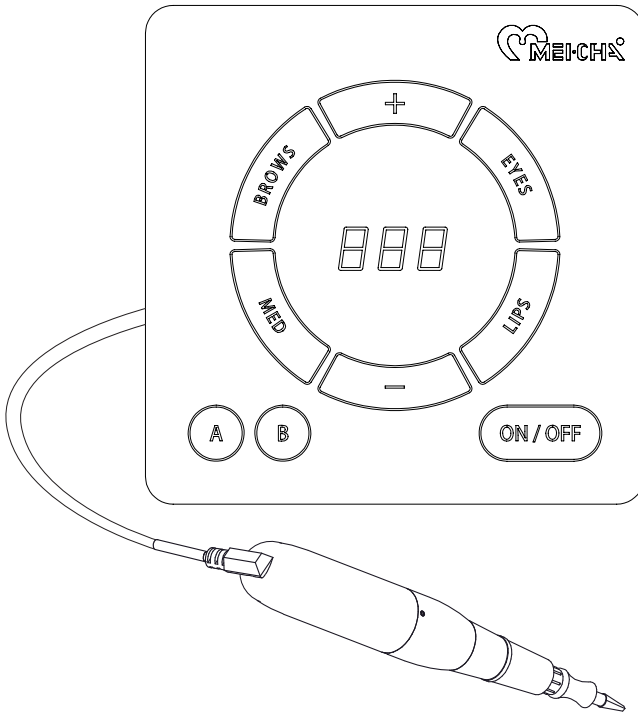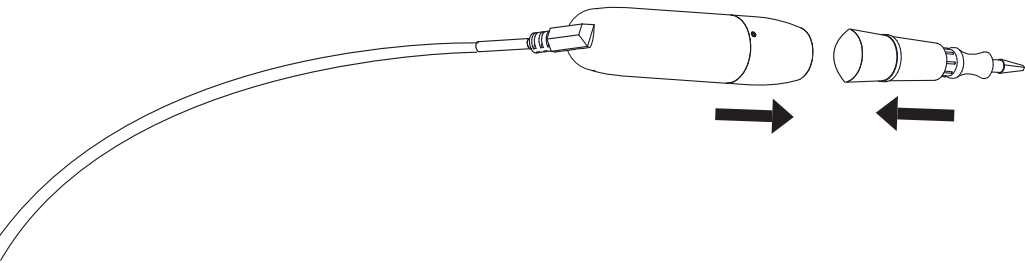


OPERATION: TOUCH PANEL

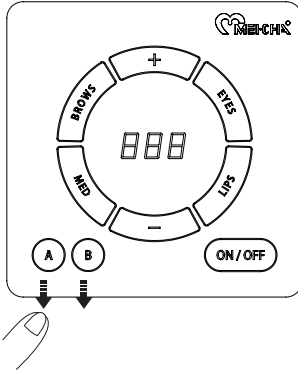


1. SELECT FROM EITHER
A OR B LUMI PEN.

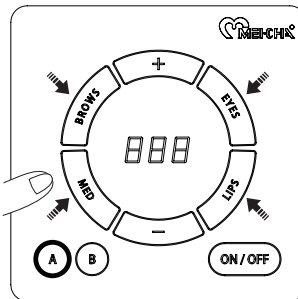


2. SELECT PROGRAM
FROM DISPLAY PANEL.

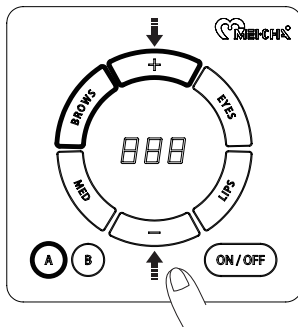


3. TOUCH + TO INCREASE SPEED
AND — TO DECREASE SPEED.

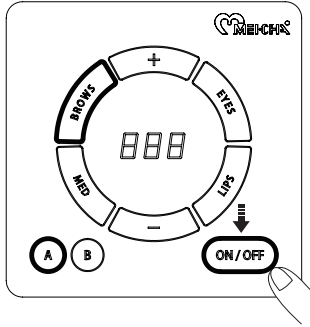

4. TOUCH THE ON/OFF BUTTON TO START.

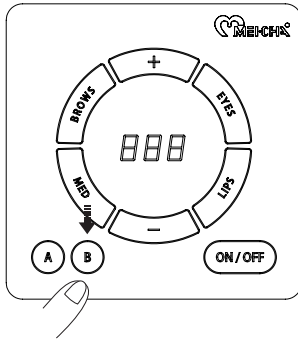


5. SELECT BETWEEN A AND B TO SWITCH PEN.

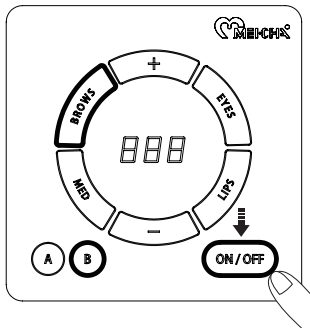


6. REPEAT STEP 3 TO 5 TO OPERATE.


OPERATION: PROGRAM PERSONALIZED SETTINGS

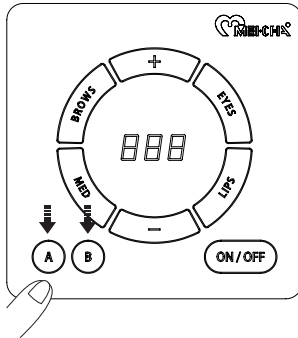


1. SELECT EITHER LUMI PEN A OR B.

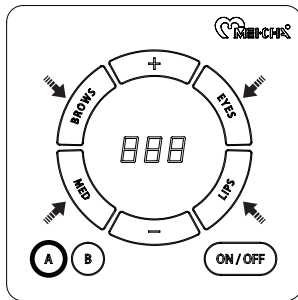


2. SELECT PROGRAM FROM MENU.

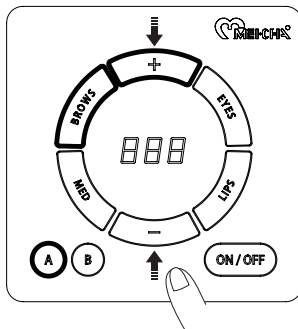

3. ADJUST SPEED.

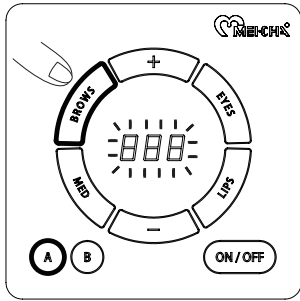

4. PRESS AND HOLD THE PROGRAM BUTTON FOR 3 SECTIONS UNTIL BEEP TO LOCK SETTING.

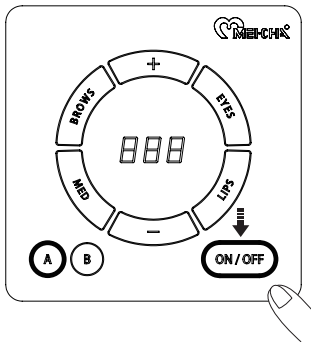


5. CONFIRM SPEED AND PRESS ON/OFF BUTTON TO START.



MAINTENANCE

Remove the power adaptor by holding the plug.

 Please do not pull the cords.



Handle the device with care.

Do not use abrasive material to clean the device.



TROUBLESHOOT

NEEDLE DOES NOT MOVE OR NEEDLE HESITATES

Check all components are assembled correctly.
Replace dull needle with a new one.

INCONSISTENT OR NO POWER:

Verify that machine is turned on.
Make sure all cords are attached properly.
Try with different speed control or adapter.
Make sure the right Lumi Pen A/B is selected.

MACHINE GETS TOO HOT:

Check speed control and allow 20
minute intervals between each procedure.

If your device does not operate after the above steps have been taken, please contact your distributor for warranty options.

Lumi Digital Device is designed for micropigmentation purpose and for trained professional use only. Neither MEI-CHA or its affiliates assume responsibility or liability for any injuries or damages, resulting, directly or indirectly, from the use of this product.

WARRANTY

MEI-CHA warrants the LUMI DEVICE for a period of ONE (1) YEAR and after the original date of purchase, against defects due to faulty manufacturing or material. If you discover a defect and notify MEI-CHA during the warranty period, MEI-CHA will repair or replace the machine free of charge. This warranty will be void if the machine has undergone repeated dropping, exposure to moisture, or shows signs of misuse that will comprise its functionality.

For warranty claims, please contact your MEI-CHA distributor
or email support at ask@mei-cha.com.

MEI·CHA

HELLO@MEI-CHA.COM / + 1 949 788 0882 / LAKE FOREST, CA
@MEICHA_OFFICIAL #MADEWITHMEICHA

MEI-CHA.COM