



# Swan

designed for life



## Heated Dryer

Model: SH26010

Helpline: 0333 220 6050





## IMPORTANT INFORMATION – RETAIN FOR FUTURE USE

**When using any electrical appliance, basic safety precautions should always be followed including the following:**

- Keep away from children and disabled people when using this product.
- Always unplug the power cord when you not in using.
- If the supply cord is damaged it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- For household use only. Do not use outdoors.
- Never put the product in water, in the bath or other water containers.
- Do not use the power cord under the floor mats, slide or carpet to avoid the tripping hazard.
- Do not unplug the device by the power cord, hold the plug, not the cord.
- Do not place objects into air vents and vents as this may result in electric shock, fire and equipment damage.
- Do not use in areas where gasoline, paint or flammable liquids are used or stored.
- Use this product strictly as described in this manual to avoid the cause of fire, electric shock or personal injury.
- Children should be supervised to ensure they do not play with the device.
- Children, elderly people with reduced mobility, people with physical, sensory or mental disabilities and lack of experience and knowledge should use the product under the supervision or guidance of a person responsible for their safety.
- Do not use to dry down jackets and quilts!
- After being on for 5 minutes, the heating region temperature remains constant at 45-55°C. (be affected by the environment)



## IMPORTANT INFORMATION – RETAIN FOR FUTURE USE

- Max load-bearing 5kg per wing, 10kg per layer.
- If the power cord is damaged, it must be replaced by the professionals from the maintenance department or similar department from manufacturer to avoid the danger.



## TECHNICAL DATA

Description: Heated Dryer

Model: SH26010

Input Voltage: 220~240 V

Frequency: 50/60Hz

Power consumption: 300 Watts

IP Degree: IP X1





## HOW TO USE

### Freestanding:

1. Slide the leg poles into the feet and tighten the screws provided on both sides.



2. Open the support feet when using the dryer.



3. Release the locking catch and push the shelves flat.



4. Plug in and switch on.





## HOW TO USE

### Power ON/OFF switch

1. Press the switch to [I], the power indicator will light up and the heater will start heating.
  2. Press the switch to [O] and the power indicator light will go off and the heater will cool down.
- 
1. Please read the installation instructions carefully before using the heater.
  2. Make sure the feet are installed and secured.
  3. Press the power switch to [OFF] position.  
(i.e. power indicator light is off).
  4. Plug the power cord into an electrical outlet.
  5. After connecting to suitable power supply, press the power ON/OFF switch, the power indicator lights up and then the warmer starts the heating work.



## CLEANING AND MAINTENANCE

- Before cleaning, unplug the heater and allow it to cool down.
- Do not put the heater, power cord and plug into water. Always keep the cord dry.
- Clean the heater using a damp towel and then dry it with a soft cotton cloth. DO NOT use abrasive materials or rough cloths as this will scratch the surface.
- DO NOT use alcohol or solvents on plastic components as they will cause cracking and discolouration.



## WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.

Helpline: **0333 220 6050**

Find advice online: [www.swan-brand.co.uk/support](http://www.swan-brand.co.uk/support)

Affix your receipt here  
for safe keeping





## DISPOSAL OF UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items.

Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





[www.swan-brand.co.uk/support](http://www.swan-brand.co.uk/support)

Follow us online



Copyright © 2022

Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD