

Swan

designed for life

V1.0
10-22

The World's First Alexa Compatible Kettle

*"Alexa,
turn on
the Swan."*

works with alexa



1.5 LITRE DIGITAL KETTLE

Instruction Manual

For customer support, please visit: www.swan-brand.co.uk/alexa

boil the kettle."

"Alexa, I fancy a drink"

"Alexa, put the kettle on at 8am"

Congratulations on your purchase
(and great choice)

"Alexa, I want a coffee"

"Alexa, turn on the Swan."

"Alexa, turn on the kettle"

works with alexa

Making your favourite hot drinks just got easier

Alexa, make a green tea."

"Alexa, boil water at 2pm."

"Alexa, boil kettle."

"Alexa, make me a drink."



Technical Specifications	04
Product Overview	04
Important Safeguards	05-06
Before First Time Use	07
Filling and Switching on the Appliance	08
Manual Operation	09
Pairing your Devices	10-13
Using your Alexa Compatible Kettle	14
Create a Routine	15
Duplicate a Routine	16
View a Routine	16
Keep Warm Function	16
Renaming your Kettle	17
Cleaning & Maintenance	17
Guarantee Information	18
Store your QR Code	19



Model	SK14650BLKN
Voltage	220-240V AC, 50/60Hz
Power	1500-1800W
Cord Length	75cm
Capacity	1.5 Litre (max.)
Indicator	Power indicator when kettle is switched on
Safety Class	Safety Class I



CAUTION!

Do not immerse in water

TX Frequency:	Wi-Fi: 2412-2472 MHz/2422-2462 MHz
Bluetooth/Bluetooth LE:	2402-2480 MHz
Output Power:	Wi-Fi: 18.85 dBm (802.11b)
Bluetooth LE:	7.83 dBm

Product Overview

1. Open button
2. Lid
3. Inner housing
4. Handle
5. Outer casing
6. Temperature display
7. Wi-Fi connection indicator
8. Boiling/keep warm indicator
9. Temperature setting
10. On/off button
11. Base





When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully and retain for future reference.
- Do not touch hot surfaces. Use the handle.
- To protect against fire, electric shock and injury to persons do not immerse kettle, plug or cord in water or any other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Always allow to cool before cleaning the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To connect, plug the cord into the wall outlet. To disconnect, switch off the kettle then remove the plug from the wall outlet.
- Do not use this appliance for anything other than its intended use. For household use only.
- Scalding may occur if the lid is removed during the brewing cycles. Do not remove the lid while the water is boiling.
- This appliance can be used by children aged from 8 years and above, and persons with reduced physical,



sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

- Children shall not play with the appliance.
- If the kettle is overfilled, boiling water may be ejected.
- The kettle is only to be used with the base provided.
- The heating element surface is subject to residual heat after use.
- The product is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- **WARNING!** Avoid spillage on the connector.
- **WARNING!** Potential injury from misuse.



Before First Time Use:

- 1.** Remove all packing materials, do not connect the kettle to the power supply just yet.
- 2.** Thoroughly clean the inside of the kettle with a damp non-abrasive sponge, dry with a soft cloth.
- 3.** Use a slightly damp cloth to wipe the main body outer case and spout, dry with a soft cloth.
- 4.** When the kettle is thoroughly dry, it is then ready for the next step.
- 5.** Fill the kettle to the MAX water level and boil one to two times to clean the kettle. Discard the cleaning water and do not drink it.



Fill Water:

1. Press the lid release button to open it.
2. Fill with water carefully. Never fill with more than 1.5L water (over the MAX water level line) to prevent the water from overflowing while boiling. Do not fill less than the 0.5L MIN water level.
3. When filled with water, close the lid properly.

Do not use to heat up soup or other liquids or jarred, bottled or tinned food.

Switch on the appliance:

Put the base on a flat and heat resistant surface, take the power cord out and lock it in to the hole on the base. Then connect the power plug into a power supply socket.

Position the kettle on the power base, when power is connected, the appliance makes a beep sound.

When placed on the power base, the appliance will automatically enter standby mode. Touch the *on/off* button and the appliance will start boiling water to 100°C or the previously set temperature.

When the kettle is boiling or the keep warm function is activated, if you need to cancel the operation you can do so by pressing the *on/off* button. The appliance will then enter standby mode.



Set button:

When the appliance is in standby mode, touch the *set* button to select the temperature, touch again to change the setting:

100°C (Fully Boiled) >

90°C (Coffee) >

85°C (Tea) >

80°C (Green Tea) >

60°C (Honey) >

40°C (Warm Water)

100°C function:

After selecting, the *boil* indicator will flash and the appliance will begin operation.

After the water boils, the appliance will beep twice, end operation and enter standby mode.

90°C, 85°C, 80°C, 60°C, 40°C function:

After selecting the temperature, the *boil* indicator light and the *keep warm* indicator light will flash at the same time, the appliance then begins operation. Once the water has reached the selected temperature, the kettle will beep twice and automatically keep the water warm for 2 hours*.

When the appliance is in standby mode, it will automatically shut down after 10 minutes of inactivity.

For more hints and tips, visit: www.swan-brand.co.uk/alexa

*If preferred, you can deactivate the keep warm function in the Alexa app. See page 14 for more information.

To fully benefit from your new Swan Alexa compatible kettle, you will of course need:




- Amazon account
- Alexa device
- Wi-Fi connection
- Alexa app downloaded to your mobile device



Before continuing, please ensure that the kettle has been set up and prepared correctly, having carefully followed the safety instructions and usage guidance detailed in this booklet.

There are 2 ways in which you can pair your Alexa devices.

Pairing using the QR code

1. Connect the kettle to power.
2. Press and hold the set button (on the kettle) for 3 seconds. The kettle will flash and beep 3 times. The Wi-Fi symbol will then also start to flash, indicating that the kettle is ready to pair.
3. Open the Alexa app and select the devices tab.
4. Select the + icon in the top right hand corner to add a new device. Select *Add Device* on the pop up menu.
5. On the next screen, scroll down to find *Kettle* and select this option.
6. Next, select the brand *Swan*.
7. The app will then ask for permissions to access your mobile device. Please read this section carefully and click *Next* to proceed.
8. On the next screen, select *Scan Barcode* and using the camera, scan the QR code located on the

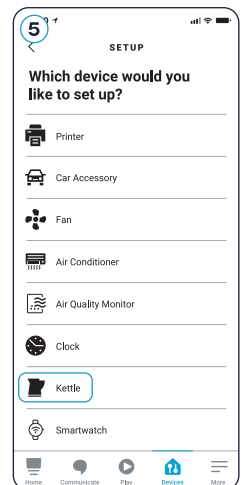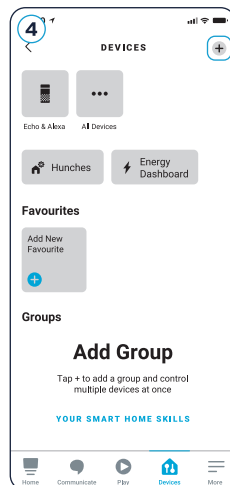
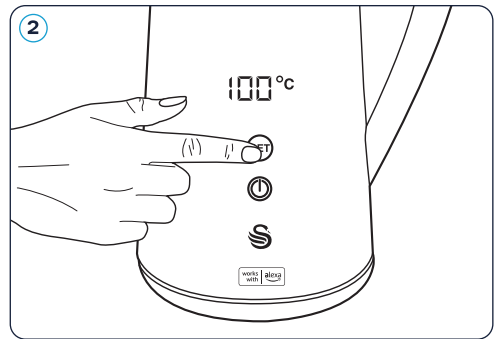


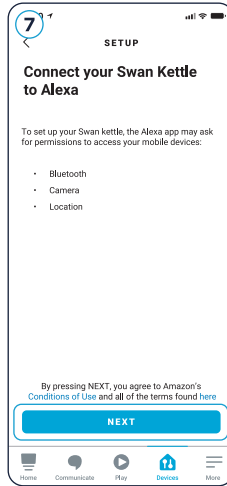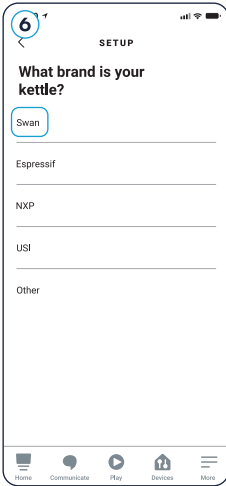

product as shown (this sticker can be easily removed once your Alexa compatible kettle is all set up and ready to use).

9. The app will then search for and connect to the kettle. This can take around a minute.
10. Once connected, you'll then be asked to select a Wi-Fi network. To secure a Wi-Fi connection, select the name of the relevant Wi-Fi network and input the password. Please make sure the Wi-Fi is 2.4G and there are no obscure symbols in the Wi-Fi name and Wi-Fi password.
11. The kettle has now been added to your Alexa account. Select Next to continue setup.
12. On the next screen, you can add devices to a group such as "kitchen", to control multiple devices at once. However, you can also skip this step for now.
13. Your Swan Alexa compatible kettle is now set up and ready to use!








See page 13 for information on finding the main control screen.

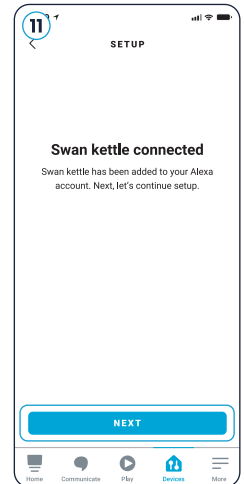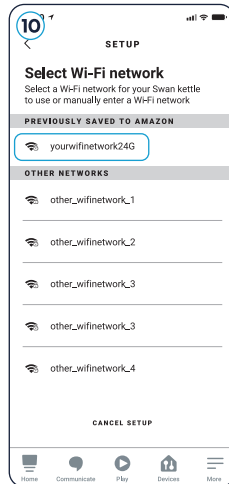







Manual Pairing

1. Connect the kettle to power.
2. Press and hold the set button (on the kettle) for 3 seconds. The kettle will flash and beep 3 times. The Wi-Fi symbol will then also start to flash, indicating that the kettle is ready to pair.
3. Open the Alexa app and select the devices tab.
4. Select the + icon in the top right hand corner to add a new device. Select *Add Device* on the pop up menu.
5. On the next screen, scroll down to find *Kettle* and select this option.
6. The app will then ask for permissions to access your mobile device. Please read this section carefully and click *Allow* to proceed.
7. Then click *Next* to connect the Swan Kettle.

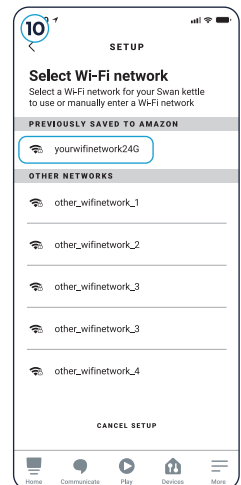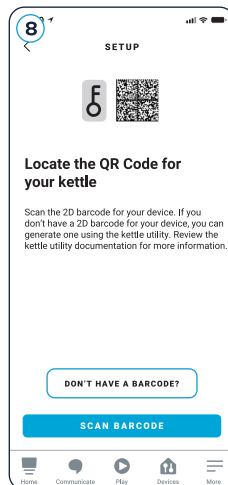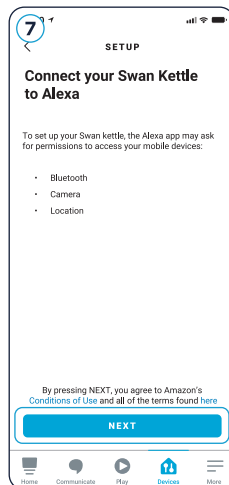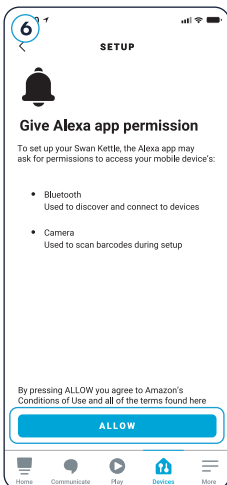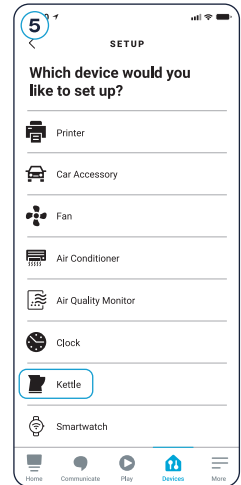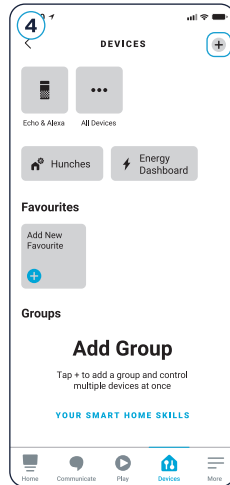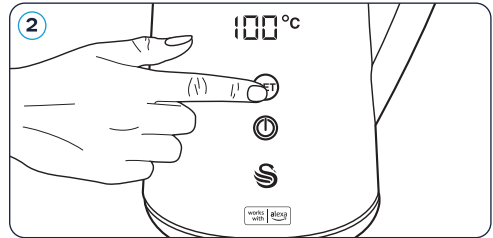



- On the next screen, select *Don't have a barcode?*, then select *Next* to continue setup.
- The app will then search for and connect to the kettle. This can take around a minute.
- Once connected, you'll then be asked to select a Wi-Fi network. To secure a Wi-Fi connection, select the name of the relevant Wi-Fi network and input the password. Please make sure the Wi-Fi is 2.4G and there are no obscure symbols in the Wi-Fi name and Wi-Fi password.
- The kettle has now been added to your Alexa account. Select *Next* to continue setup.
- On the next screen, you can add devices to a group such as *"kitchen"*, to control multiple devices at once. However, you can also skip this step for now.
- Your Swan Alexa kettle is now set up and ready to use!

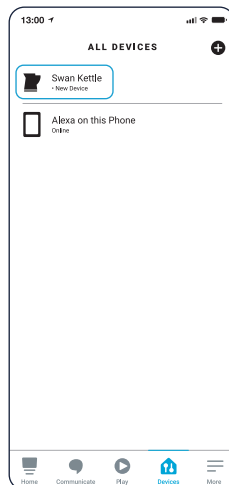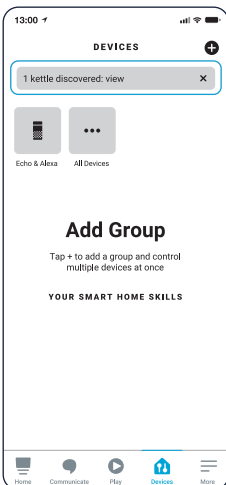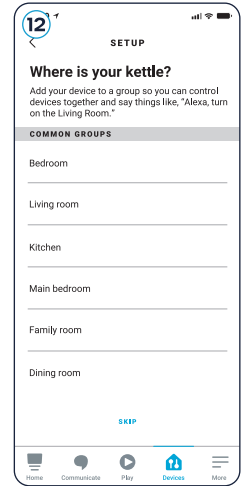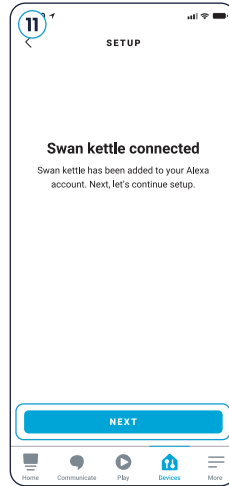

Once your devices are fully connected, go to the devices tab on the Alexa app and select *View* on the top bar where it says *"1 kettle discovered"*, then select *Swan Kettle* to go through to the main control screen.

See page 14 to find out how to edit and control your new kettle.

Video setup guides and further information can be found at:
www.swan-brand.co.uk/alexa



Congratulations! Your mobile device is now paired with your Alexa compatible kettle. Now for the fun part.

In the Swan kettle area of your Alexa app, you'll find lots of clever options that'll allow you to control your new appliance. Here is an overview to help get you started:

- A** Switch your Alexa compatible kettle on and off using this button.
- B** The water temperature of your kettle is shown here.
- C** The number of boils until the next recommended descale is shown here.
- D** The general kettle status, including water levels and activity is shown here.
- E** Select your preferred heat setting under *Preset*. Choose from *40 degrees, 60 degrees, 80 degrees, 85 degrees, 90 degrees or 100 degrees*.

For more information regarding the temperature settings, please see page 9.

- F** After 500 boils at any temperature, the kettle will notify you that descaling is required. Once descaling is complete, reset the descale countdown (back to 500) using this toggle.

It is very important that the kettle is regularly descaled to prolong the longevity of the appliance and maintain efficiency.


Learn more about descaling on page 17.

- G** Activate or deactivate the *Keep Warm* function using this toggle.

For more information regarding the *Keep Warm* function, please see page 16.

- H** Start creating a routine using this button.

For more information regarding creating routines, please see the next section.



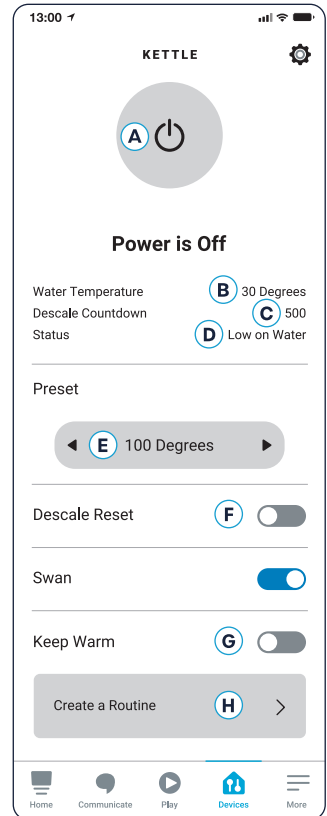




1. Select *Create a routine* from the main screen as described in the previous section.
2. Add your choice of voice command to the next screen by typing a phrase into the text box. For example *“turn on the Swan”*. You can add more than one phrase.
3. Once done, tap *Next* in the top right hand corner.
4. You'll then be taken to the *Edit Routine* screen. Here, you can enable the routine by toggling on and off, change the name of the routine and add specific times.
5. Adding a specific time will activate the kettle automatically at that chosen time. For example, create a *“Breakfast”* routine and choose *07:00* for a freshly boiled kettle every morning. You can set a time using *View/Edit* under the option *WHEN:*

Add and edit times by clicking *Schedule*, you can also sync your routine with alarms, other household sounds, Smart Home devices and Echo buttons.

6. Ensure that the kettle shows *Power: On* for your routine to work!

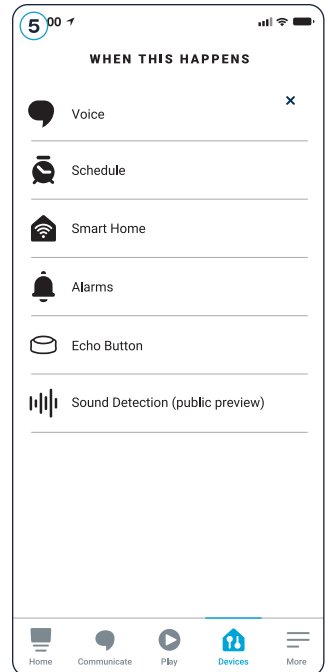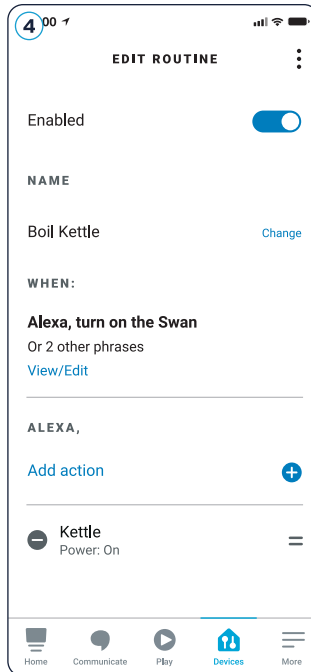
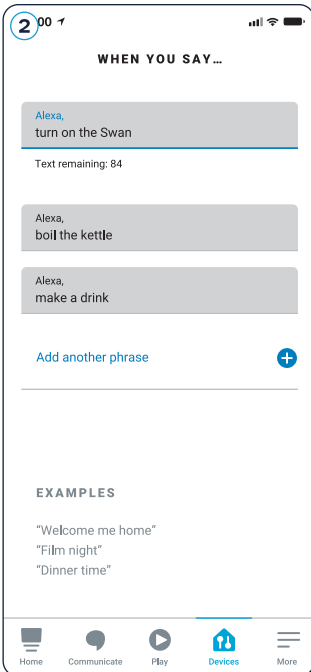


Duplicating a routine is a really easy way of creating slightly different versions of your favourite routines. For example, you might want your morning routine, just set to a slightly different time depending on the day and what you have planned.

On the *Edit Routine* screen, click the 3 dots in the top right corner, you can duplicate and edit the new routine from here.

View Your Routines

1. On the Alexa app home screen, press the menu icon.
2. Select *Routines*.
3. From here you can view your current routines.
4. Clicking *Activity* and then *View all activity* will show a record of all recent activity.

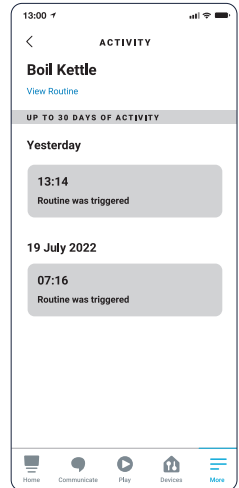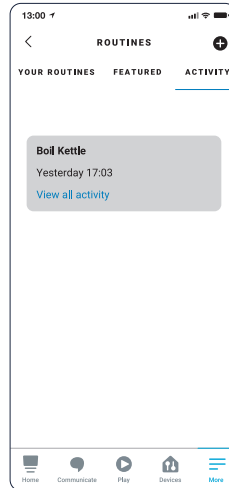

Keep Warm Function

When the keep warm function is activated, switching on the kettle whilst pre-set to 40 degrees, 60 degrees, 80 degrees, 85 degrees or 90 degrees will heat the water to the selected temperature, beep twice, then keep the water warm for 2 hours before entering standby mode. This function will not work with boiling water set to 100 degrees.



It's not essential but if you want to, you can rename your kettle.

1. On the Alexa app, go to your Swan kettle device.
2. Select *Settings*.
3. Under *Swan Kettle* select *Edit Name*.
4. Finally, simply type in the name you'd like to use for your kettle and click back <

Cleaning and Maintenance

ALWAYS ENSURE THE PRODUCT IS UNPLUGGED FROM THE MAINS SUPPLY AND COMPLETELY COOL BEFORE CLEANING.

DAMAGE TO THIS PRODUCT CAUSED BY EXCESSIVE LIMESCALE BUILD UP IS NOT COVERED BY YOUR WARRANTY!

- If you live in a hard water area, it will be necessary to descale the kettle from time to time. Most supermarkets sell descaling tablets, powders or liquids.
- These are inexpensive, easy to use and perfect for ensuring your kettle provides many years of faithful service.
- An excessive build up of limescale will damage your kettle and increase the boiling time/electricity consumption!
- Use a soft damp cloth to wipe the kettle body.
- **DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS OR SCRUBS TO CLEAN ANY PART OF THE KETTLE.**
- **DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER.**

After each descaling, don't forget to reset the descale countdown back to 500 as outlined on page 14.



This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.

Helpline: 0333 220 6050

Find advice online: www.swan-brand.co.uk/alex



Swan

designed for life



We love
what we do



We're proud
of our quality



@swanbranduk

www.swan-brand.co.uk