



# Swan

designed for life

 **DIRT  
MASTER**

## 3 Litre Smart Clean Carpet Washer

Model: SC17310N



Help line  
**0333 220 6050**

v1.0





## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

The device is designed to be used for removing light levels of dirt on carpets and upholstered furniture and for freshening up carpets and upholstered furniture. It is not a substitute for a conventional vacuum cleaner. Before using the device, the carpet or upholstered furniture which is to be treated must be thoroughly cleaned with a vacuum cleaner. The device is also suitable for use on tiles, stone floors and PVC.

On no account should the device be used to suck up the following:

- Glowing ash, cigarette ends, matches, etc.
- Inflammable or explosive substances
- Very fine dust (e.g. concrete dust), toner or sand
- Pointed, hard objects such as pieces of broken glass

The device is designed for personal use only and is not intended for commercial applications.

The device should only be used as described in these instructions. Any other use is deemed to be improper.

The warranty does not cover faults caused by incorrect handling, damage, lime scale build-up or repair attempts. This also applies to the normal wear and tear of the individual components.

- This device may be used by children aged 8 and over and by people with reduced physical, sensory or mental abilities or a lack of experience and/or knowledge if they are supervised or have received instruction on how to use the device safely and have understood the dangers resulting from failure to comply with the relevant safety precautions.





## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Children must not play with the device.
- Cleaning and user maintenance may not be carried out by children.
- Children younger than 8 years of age and animals must be kept away from the device and the connecting cable!
- Improper use can lead to injuries and electric shock.
- The device must always be disconnected from the mains power when it is left unattended and before assembly, dismantling, before you pour water into the water tanks or empty them, and before cleaning.
- If the device, the connecting cable or the mains plug of the device is damaged, it must be replaced by the manufacturer or customer service department or a similarly qualified person (e.g. specialist workshop) in order to avoid any hazards.
- Make sure that the connected mains cable does not present a trip hazard.
- Use the device only in closed rooms.
- Only connect the device to a properly installed plug socket. The plug socket must also be readily accessible after connection so that the connection to the mains can quickly be isolated. The mains voltage must match the technical data of the device. Only use suitable extension cables whose technical data is the same as that of the device.
- Never immerse the device, mains cable or mains plug in water or other liquids and ensure that they cannot fall into water or become wet.
- Should the device fall into water, switch off the power supply immediately. Do not attempt to pull the device out of the





## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

water while it is still connected to the mains power!

- Never touch the device, mains cable or mains plug with wet hands when these components are connected to the mains power.
- In the interest of your own safety, you should therefore inspect the device for damage each time before you use it. Only use it if the device, mains cable and mains plug have no signs of damage.
- Always pull the mains plug and never the mains cable.
- Store the device only in dry indoor rooms.
- Do not operate the device in a very damp environment.
- Make sure that the device does not roll over the mains cable (danger of the cable breaking).
- Do not use the device in rooms containing easily ignitable dust or poisonous and explosive fumes.
- Switch off the device and pull the mains plug out of the plug socket if an error occurs during operation or before a thunderstorm.
- Do not operate the device in the vicinity of combustible material.
- Do not insert anything into the openings of the device and make sure that these do not become clogged so that the circulation of air is not impeded.
- Use the device only when it is completely assembled and the mains cable is completely unwound. The fresh water and dirty water containers must be inserted.
- Make sure that the device does not tip over. The water from the water containers could spill out.
- Do not use any sharp or pointed objects to remove foreign bodies from the device. These could damage the device.





## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- After use, place the device down on a cloth as residual water may escape from the nozzles after it has been switched off.
- Maintain a sufficient distance from heat sources and naked flames in order not to damage the device.
- Do not drop the device or subject it to heavy impacts.
- Use only original spare parts from the manufacturer.
- Only ever pour the cleaning agent supplied with the device or standard carpet cleaning products for carpet cleaners into the fresh water container.
- Never fill the water containers beyond the maximum fill level.
- Always test the cleaning at a small spot first to check the colourfastness.

## DOMESTIC INDOOR USE ONLY

 
 


## SPECIFICATION OVERVIEW

Clean tank capacity: 3 litres  
Dirty water capacity: 3.1 litres  
Motor power: 550 Watts  
Voltage: 220-240V AC 50/60Hz  
Cord length: 7 metres  
Vacuum power: 6.1KPA  
Sound level: 76dB



## PRODUCT OVERVIEW

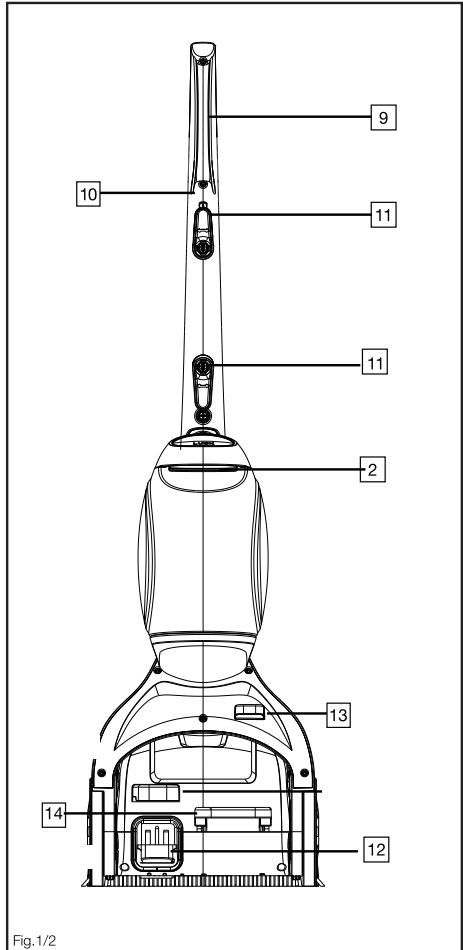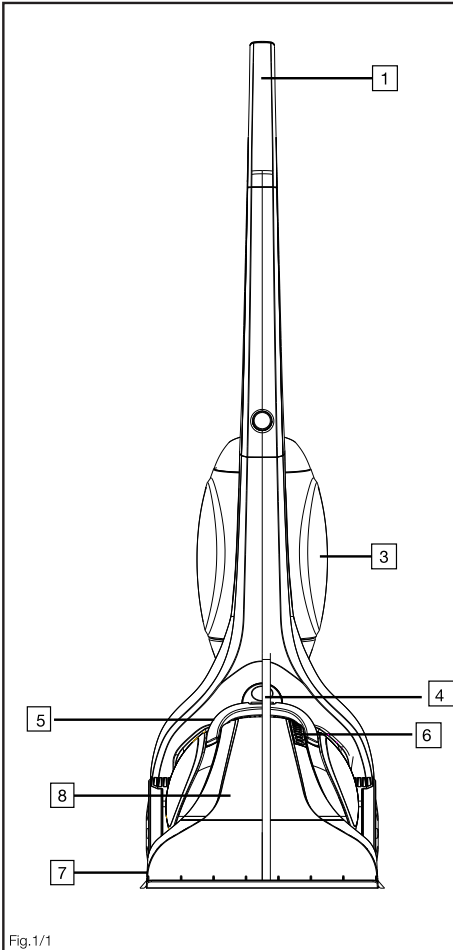

1. Handle
2. Clean water tank release button
3. Clean water tank
4. Dirty water tank latch
5. Dirty water tank handle
6. Exhaust filter
7. Brush bar
8. Dirty water tank

9. Solution release trigger
10. Power cord tidy
11. Power cord holder
12. Power cord
13. Power switch
14. Handle release pedal





## MAIN PARTS

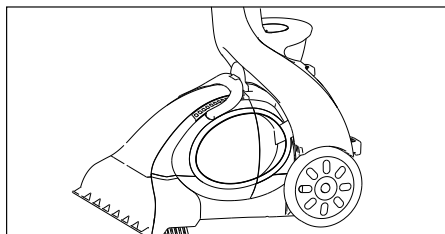 


Fig.3/1 - Base Unit

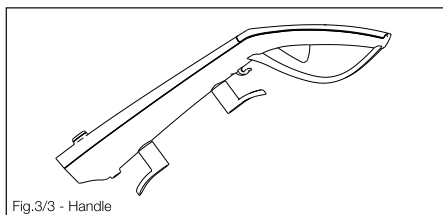 


Fig.3/3 - Handle

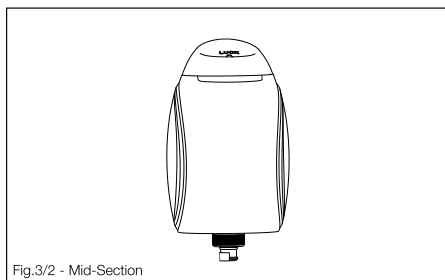 


Fig.3/2 - Mid-Section

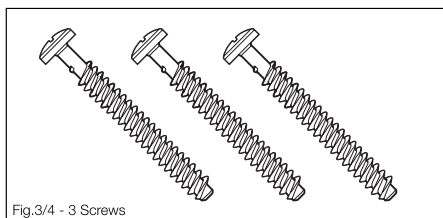 


Fig.3/4 - 3 Screws

These are the main parts included in the box. For the following assembly you will need a cross head screw driver.



## TROUBLESHOOTING

 
Problem	Cause/Solution
The device does not work.	<ul style="list-style-type: none"> <li>• Is the plug inserted in the socket correctly?</li> <li>• Is the socket defective? Try another plug socket.</li> <li>• Check the fuse of the mains connection.</li> <li>• Has the overheating protection been activated? Let the device cool down for approx. 60 minutes and then switch it on again using the On/Off switch.</li> </ul>
The stain is not removed.	<ul style="list-style-type: none"> <li>• The stain is too stubborn or too old. Treat the stain specifically with a carpet cleaning product.</li> </ul>






**S** **ASSEMBLY**


3. Insert and tighten the screws as indicated

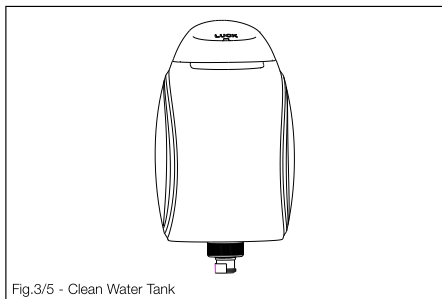

 
1. Line up mid-section with base unit and slot into place as shown

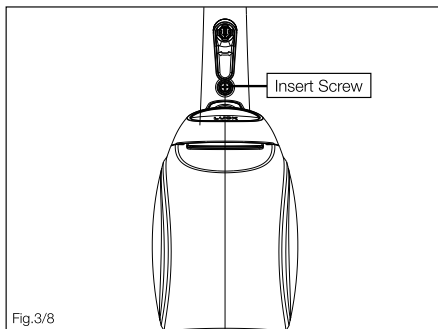


 
4. Twist the cord holder until it is facing upwards

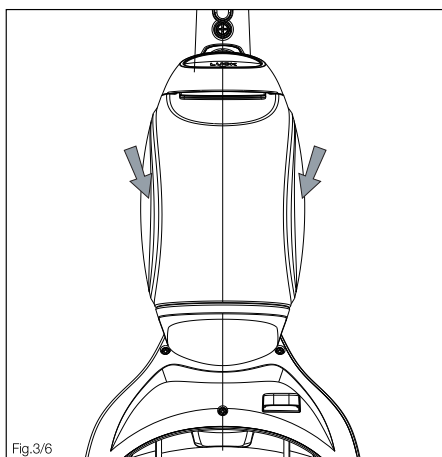

 2. Insert handle into mid-section ensuring that the solution trigger is at the back of the machine and the screw hole in the handle is lined up with the screw hole in the mid section.

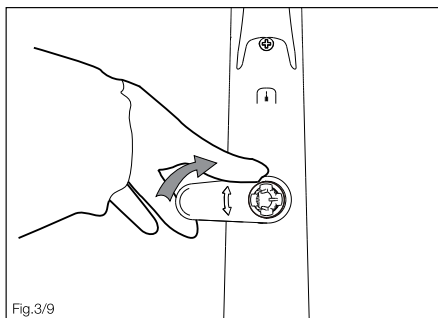

  5. Finally insert the clean water tank. The machine is now fully assembled.

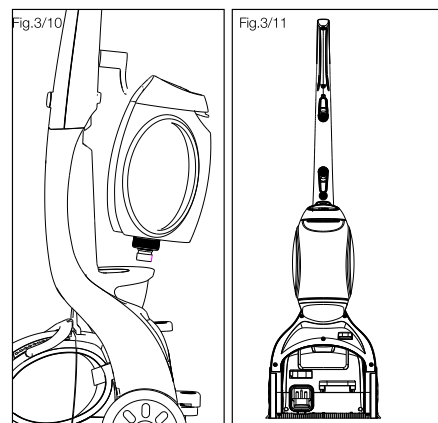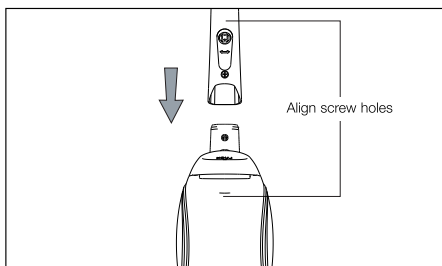





## HOW TO USE

### Preparing the Carpet

1. Vacuum the carpet or upholstered furniture which is to be cleaned thoroughly with a vacuum cleaner. If possible, use a brush attachment to do this.
2. If possible, remove all furniture from the carpet. In the case of large items of furniture which cannot be moved to one side, place plastic film below or around the feet and only remove it once the carpet has completely dried after it has been cleaned. The feet could be damaged by the moisture from the carpet.
3. Check the colourfastness of the carpet or upholstered furniture. Soak a piece of white fabric with the cleaning solution supplied (see the "Preparing the Device / Filling the Fresh Water Container" section) and rub it carefully on an inconspicuous spot on the carpet. If the white fabric does not become discoloured, the carpet or upholstered furniture can be cleaned with the device. In the case of carpets or upholstered furniture with several colours, test the fastness of each colour.

### Preparing the Device / Filling the Fresh Water Container

**CAUTION:** Only ever pour the cleaning agent supplied with the device or standard carpet cleaning products for carpet cleaners into the fresh water container. Do not use any cleaning products that produce a lot of foam as excessive foaming impedes the functioning of the device.



Fig.5/1

1. Hold the handle of the clean water tank and press "Clean Water Tank Release". Tilt the clean water tank away from the carpet washer and remove.

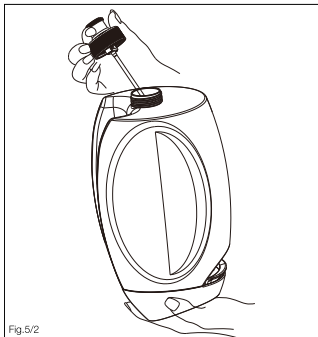 


Fig.5/2

2. Unscrew the measuring cap from the under side of the clean water tank (don't try to remove the orange part. That is a handle, not a lid). **Add the water first, then the cleaning solution. 50ml of solution to 500ml of water (10:1). Give the tank a slight shake to mix the water and solution before refitting the tank.**

Do not exceed the MAX level on the tank.






## HOW TO USE

 3. Don't use water above 40 degrees Centigrade. Replace cap.




4. Place bottom of clean water tank into carpet washer and push back until it locks into place.

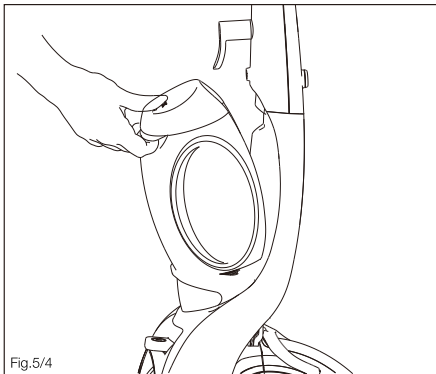

### Usage


Plug cord into electrical outlet. Turn on the machine by using on/off switch located on the side of the machine.

 1. Step onto the handle release pedal to put the machine into cleaning position (fig 6/1). While depressing the solution spray trigger, pull carpet washer in a backward motion. Release the trigger and push the unit forward in the same path to agitate and remove the dirty water and solution from the carpet. Repeat on more heavily soiled areas if necessary.

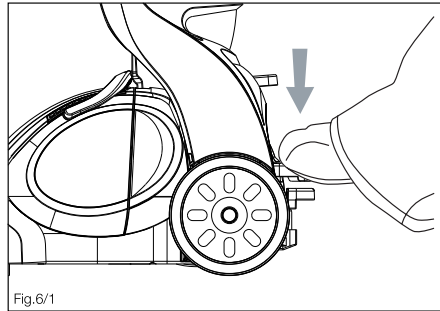


**IMPORTANT:** for best results use a slow, steady forward and backward motion. Always work from back to front across the room to avoid stepping on wet carpet.

 2. When dirty water tank is full, lift the latch and remove from base unit using the handle.

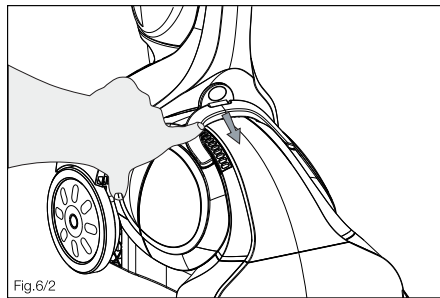

 3. Twist dirty water tank outlet cap to the left and remove, empty, rinse and replace.

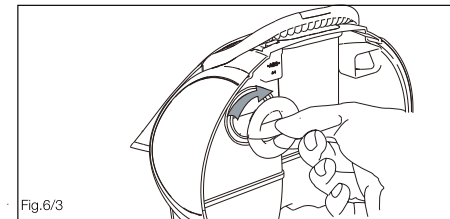



## HOW TO USE

4. When finished cleaning, remove the dirty water tank and rinse with warm water and allow it to dry before storage. Also remove filter (as shown) rinse with warm water and allow it to dry before storing.

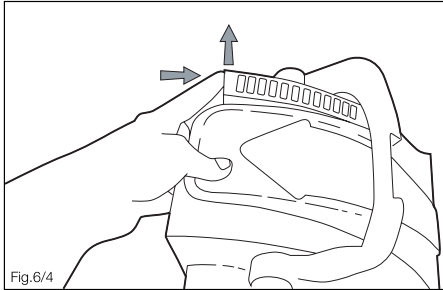 


Fig.6/4

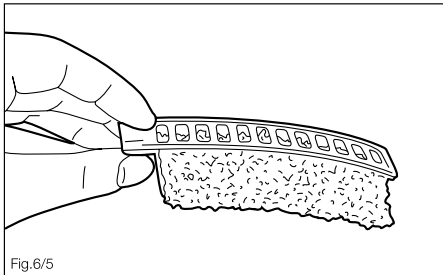 


Fig.6/5

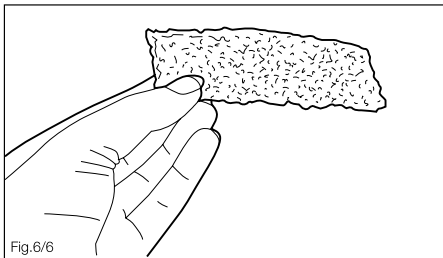 


Fig.6/6

**IMPORTANT:** Do not use any chemicals when cleaning.

**NOTE:** Do not store cleaner with solution in clean water tank or dirty water in dirty water tank. Mineral deposits and mildew can form and will affect the performance of the carpet washer.

### Trouble shooting

If you experience any problems in the operation of the device refer to the table on page 7. You can also call our help line number on the cover of this manual.

 





## SPARES

Please refer to the diagrams below and quote appropriate part number when ordering from our web site:


[www.swan-brand.co.uk](http://www.swan-brand.co.uk)

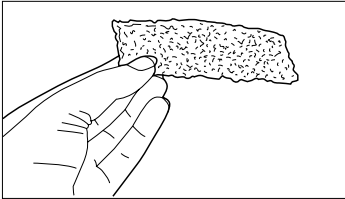


SC17310N-01 : Filter

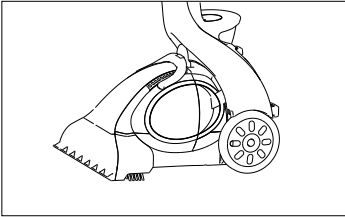 

SC17310N-02 : Dirty water tank

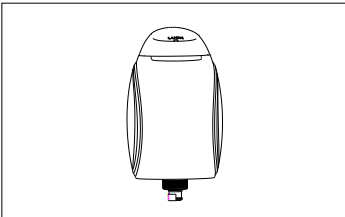 

SC17310N-03 : Clean water tank

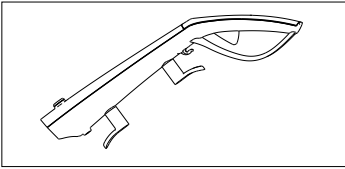 

SC17310N-04 : Handle





## CLEANING SOLUTION

We recommend Swan Dirtmaster Carpet Detergent, which has been specially formulated for use in our carpet washers. It can be purchased from Swan on line at:

[www.swan-brand.co.uk](http://www.swan-brand.co.uk)





## WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



## BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

THIS PRODUCT IS DOUBLE INSULATED. WARNING: DO NOT CONNECT ANY WIRE TO THE EARTH TERMINAL



## DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



 **NOTES**





[www.swan-brand.co.uk](http://www.swan-brand.co.uk)



Scan this QR code  
to hear about  
our story



We love  
what we do



we're proud  
of our quality



Find us on Facebook

\* on selected products

Copyright © Swan Products Ltd.  
PO Box 3117, Stoke-on-Trent ST4 9GD

