



**Swan**  
 designed for life



Swan



360 GLIDE

# Cordless Iron

Model: SI16410N

Help line

**0333 220 6050**

v1.0





## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

**When using any electrical appliance, basic safety precautions should always be followed including the following:**

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.

2

**Swan**



## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always



## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
  - Ensure that the unit is switched off after use.
  - The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
  - In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
  - Your appliance must never be switched on through an external timer or any kind of separate remote control system
  - This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.




**CAUTION: SURFACES BECOME HOT DURING USE.  
DO NOT IMMERSE IN WATER**





## PARTS

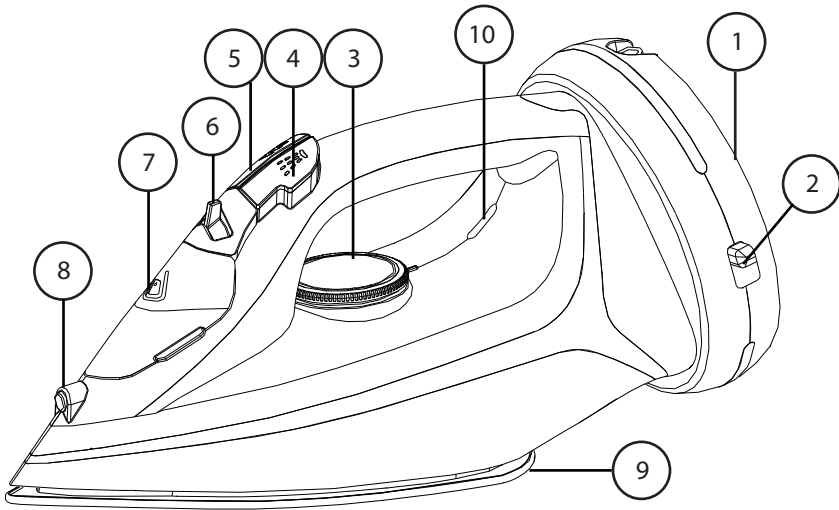

- 1. Base
- 2. Base lock
- 3. Thermostat

- 4. Spray button
- 5. Steam shot button
- 6. Steam control

- 7. Filler cap
- 8. Spray nozzle
- 9. Sole plate
- 10. Indicator light



## TEMPERATURE GUIDE

Symbol	Fabric	Temperature	Variable steam	Steam shot	Spray
	Synthetic fibres/silk	*	X	X	✓
	Wool	**	✓	X	✓
	Cotton Linen	***	✓	✓	✓
	<b>Do not iron</b>				





## HOW TO USE

### Before first use

Remove any stickers, protective foil or storage cover from the sole plate or base (1).

Put the iron on its base and ensure the base lock button (2) is in the LOCKED position. Heat up the iron to maximum temperature. Put the base lock button in the UNLOCKED position and iron over a piece of damp linen, or other high temperature cloth (eg denim or tea towel) for several minutes for the purpose of removing any residue on the sole plate.

Note: It is normal for a strange odour to come from the unit during the first use. This is due to light oils used to preserve components during manufacture. The odour will disappear after first use.

### Operation

Open the water tank filler (7), then add clean water into the water tank (use the beaker not the tap). **For best results and longer product life, use bottled or purified water – especially if you live in a hard water area.** Make sure not to exceed Max level on the tank. NOTE: IF YOU OVER FILL THE TANK THE WATER WILL LEAK BACK OUT AGAIN WHEN YOU PUT THE IRON UPRIGHT.

Press down cover of water tank and you will hear a click if it is in the correct position.

Connect plug to outlet and turn temperature dial to your desired setting, which is determined by the type of fabric you intend to iron. The indicator light (10) will illuminate.

Make sure steam control (6) is on dry (crossed out steam symbol) position then place the iron vertically

Once sole plate temperature has reached the preset temperature, indicator light will turn off, then set steam dial to your desired steam output or dry position and begin ironing. WARNING: Do not touch the sole plate at any time during ironing. It will be very hot.

Press spray button a couple of times to moisten the laundry if necessary, before spraying make sure that there is enough water in water tank. A few presses might be required to pump the water through on first use

Steam shot function is best used at max temperature, as it helps remove stubborn creases.

The iron has an anti-drip function: if you are ironing dense garments for a long time, the sole plate temperature can drop. To prevent water coming from the sole plate, the iron will automatically reduce the steam output.

“Steam shot” can also be applied when holding the iron in a vertical position, so this is useful for removing creases from hung clothes, curtains, etc.

6

Swan





## IRONING TIPS

Always check first whether a label with ironing instructions is attached to the article.

The iron heats up quicker than it cools down, therefore, you should start ironing the articles requiring the lowest temperature such as those made of synthetic fibres.

If the fabric consists of various kinds of fibres, you must always select the lowest ironing temperature to iron the composition of those fibres.

Silk and other fabrics that are likely to become shiny should be ironed on the inner side.

To prevent staining do not spray water straight on silk or other delicate fabrics.

Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied. Always keep the iron moving at any given moment.

Pure woollen fabrics (100% wool) may be ironed with the iron set a steam position. Preferably set steam button to the maximum position and use a dry cloth as a mat.

Note: when ironing woollen fabrics, shining of the fabric may occur. So it is suggested that you should turn the article inside out and iron the reverse side.



## IRONING TIPS FOR CORDLESS IRONS

Using a cordless iron requires a slightly different technique than using a corded iron.

- Remember: Once the iron is removed from the base, it is disconnected from the electricity supply. The iron uses residual heat in the sole plate to create steam and smooth creases.
- Place the iron back on its base promptly after each ironing run.
- Once back on its base, the indicator light will illuminate and go out again once it has reached temperature. The iron will usually reheat in a few seconds.
- The length of time the iron stays at best temperature depends on the material being ironed, the temperature setting selected and how often the steam shot button is used.
- If you are ironing large or heavy fabrics on high temperature with frequent use of the steam shot, then it may be better to use the iron in corded mode (with the base locked to the hand unit).



## CLEANING & MAINTENANCE

### AFTER IRONING

Disconnect power supply and empty the water left in water tank. Reconnect the power supply and disconnect after indicator light goes off, this dries the sole plate.

Let the iron completely cool down, then wipe flakes and any other deposits on the sole plate with a damp cloth or a non-abrasive (liquid) cleaner. Clean the upper part of iron with a damp cloth. Always store the emptied iron horizontally on a stable surface with a cloth protecting the sole plate.

### SELF CLEANING

The iron has a self clean function. This is useful from time to time to clean out the internal steam ways etc. To use the self clean function, heat up to max and hold the iron away from any fabric etc. Push the steam switch to the SELF CLEAN position for up to 10 seconds.

### DE-SCALING

It will be necessary to de-scale the iron regularly. The frequency of de-scaling will depend on where you live. This is easy to do using a lemon juice solution. One part lemon juice to ten parts water.

Fill the iron with the solution, switch on and allow to come to temperature. Press and hold the self clean button until most of the solution has worked through the iron. Empty remaining solution from tank then repeat the above procedure with clean water.

There are also many proprietary de-scaling products available from supermarkets.

If you live in a particularly hard water area, using bottled or distilled water will greatly reduce the need for de-scaling and increase the life of your iron.

**Your warranty does not cover damage caused by excessive lime scale build up**



Swan







## WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide, including regular de-scaling
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



## BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or [earth symbol] and is coloured GREEN or GREEN/YELLOW.

**WARNING: THIS APPLIANCE MUST BE EARTHED**




## DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. Please visit [www.weeeiireland.ie](http://www.weeeiireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



## SWAN BRAND HERITAGE

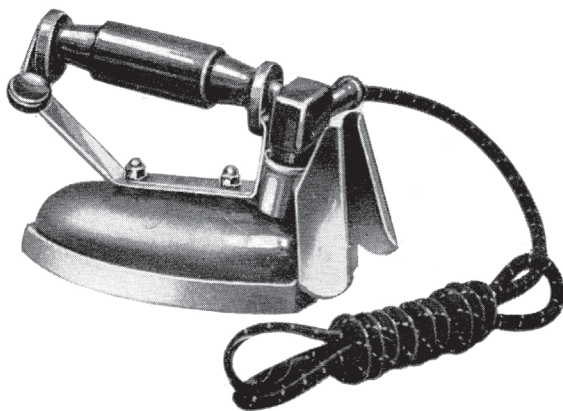

## Did you know...

In 1933 most homes were heating their irons over the gas ring or still putting hot coal in them. This Swan iron was basically a n element w ith a handle, which plugged straight into a light bulb socket. And a t a mere 1 4 s hillings (70p), it meant many households could own a prestigious Swan Product.





## TECHNICAL DATA

Description: Cordless Steam Iron

Model: SI16410N

Input Voltage: 220-240V

Frequency: 50/60Hz

Power consumption: 2600 Watts





[www.swan-brand.co.uk](http://www.swan-brand.co.uk)



Scan this QR code  
to hear about  
our story



We love  
what we do



we're proud  
of our quality



Find us on Facebook

\* on selected products

Copyright © Swan Products Ltd.  
PO Box 3117, Stoke-on-Trent ST4 9GD

