

# **IMPORTANT SAFEGUARDS**

- Make sure to read all the safety precautions below and look at the illustrations before you start using the appliance.
- electric shock when the iron is used. . Use the appliance for its intended use only described in this manual he appliance is intended for household use only.
- In order to protect against the risk of electric shock, do not immer ron power base into water or any other liquids.
- Connect the appliance only to an alternating current of the voltage surface or ironing board. specified on the rating plate and only to an earthed socket. To avoid a circuit overload, do not operate another high wattage appliance in the
- . Turn the appliance to OFF before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pu Use caution when using the appliance. Never use the iron facing towards people because the steam ca

- s been dropped or damaged. To avoid a hazard such as the risk of ectric shock, do not disassemble the appliance, it must be taken to ualified serviceman or manufacturer or its service agent for examination and repair. Incorrect re-assembly can cause a risk of
- for any appliance being used by or near children. Do not leave the iron unattended while connected to the supply mains. 23. During use, if no water in the reservoir, it will produce noise<70dBA . During use, always place its stand on a stable, level and horizontal
- 2. Always place the iron on its stand, and do not allow the hot solep
- 3. Burns can occur from touching hot metal parts, hot water or stean
- 5. / The surfaces are liable to get hot during use.

. Do not operate the appliance with a damaged cord or if the appliance

cause burns.

- 16. Never twist the supply hose during use.

- 20. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking. 22. The appliance must be rest or stocked on a stable, level and horizontal . Place the iron out of reach of children; close supervision is necessary
  - 24. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities o
  - children without supervision.
- 17. The appliance must be used and rested on a stable, level and
- 18. The iron should be placed on its stand only.

# 12-/ 13-/ -14

## 19. When placing the iron on its stand, ensure that the surface on which

- Water tank 21. The iron must not be left unattended while it is connected to the supply
  - 5. Heating indicator light
- appliance. cleaning and user maintenance shall not be made by
- age when it is energised or cooling down.

9. Power cord

6. Steam release button 7. Temperature control knob 14. Power switch

understand the hazards involved, children shall not play with th

25. Keep the iron and its cord out of reach of children less than 8 years of

8. Power cord/Supply hose

12. Pump working indicator ligh

13. Steam control knob

11.Iron rest

Temperature Setting	SYNTHETIC •	WOOL/SILK ● ●	COTTON	MAX <b>()</b>	<ol> <li>Follow up the ironing instructions on the garment label. If there is not any instruction but you know what kind of the fabric it is, please refer to the fabric setting chart in to instruction manual.</li> <li>The fabric setting chart is only a reference for material of base fabrics but not decomposed.</li> </ol>
Fabric	Synthetics, Silk, Nylon, Arcrylic, Acetate	Wool, Silk Polyester	Cotton Linen	Cotton Linen	<ul> <li>applied like finishes, glosses etc. Textile of which some kind of finish has been appli (gloss, crinkle, relief etc.) should better be ironed at a lower temperature.</li> <li>3. First sort laundry according to ironing temperature setting guide: woolen type, cot type, etc.</li> <li>4. The iron heats up more quickly than it cools down. Therefore, start ironing articles</li> </ul>
Ironing Instruction	Dry Ironing	Dry iron on the wrong side of the fabric.	Steam Ironing	Steam Ironing	<ul> <li>which needs to be ironed at the lowest temperature, such as those made of synth fabrics.</li> <li>5. If the fabric consists of various kinds of fabrics, always select the temperature req the most delicate fabrics. For example, an article consists of 60% polyester and 4 cotton, according to the fabric setting chart it should be ironed in polyester setting without steam.</li> <li>6. If you do not know what kind of fabric the article is made of, iron a piece of the mat which is not visible when you wear to find out the appropriate temperature for you</li> </ul>
eam Selection		SP MAX	₩ WAX	₩ Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q	articles. 7. Pure woolen fabrics (100% wool) should be ironed with the iron setting to steam i position. It is advisable to set the temperature control knob to "Max" position and u

# turning the article inside out and ironing the reverse side. 9. After using steam ironing on cotton fabrics, do not iron articles required by lower temperature (such as nylon etc.) immediately. It is advisable to adjust the temperature control knob to the lower setting; wait for about 2-8 minutes till the heating indicato turn on, and then you can start ironing. IMPORTANT HINTS: Temperature control knob

Do not fill water tank with vinegar, perfume, starch, chemically descaled water or

Pı	repare the appliance for use:	1	
1.	Check if the rating indicated in the rating plate corresponding to the main voltage in your home.		
2.	Press unlock button to lay handle down. (Fig.1)		
3.	Remove the protective foil or sticker or card on		
	4b l l - 4-		

After power on, water tank decorative indicator light will light up for easy viewing

3. Power switch on control panel can control circuit for complete unit. (Fig.

- Functions of Water tank decorative indicator light
  - switch on control panel. Water tank decorative indicator light lights up to indicate that

Note: When changing your Temperature setting from higher setting to lower, it is proposed that not to start ironing immediately since it may cause burns to your fa Please wait until heating indicator light turns on, and then turn off. It can start iron

- dry ironing. During use, it is normal that heating indicator light will cycle from on to c



- 1. Connect the appliance to a suitable socket outlet. Lay down handle and press pow I. Lift the handle up and it will be locked in place when a "click" sound is heard (Once power is on, water tank decorative indicator light will turn off while handle
  - e the filter out from the water entrance. (Fig.7) the water tank to the "MAX" filling line with clean tap water. [Fig.8] Press unlock button to lay the handle down. (Water tank decorative indicator light w
- art mentioned above. Heating indicator light at iron unit lights up to indicate the unit is ing heated up. When the heating indicator light turns off, the desired temperature s been reached. It is ready for steam ironing. During use, heating indicator light cycle on to off, (For every first time use, please pre-heat for 3 minutes) are every first time use, it is proposed to clean iron unit as following methods: Take on up from the base unit, press steam release button underneath the handle to Note: When the water level reaches a low level or empty, pump will make a sound to remind you it needs refilling. Then stop using the appliance immediately and refill water
  - allow steam ON for **30** seconds, and then OFF for 30 seconds, this cycle should be repeated for 2 times. When heat indicator light turns off, it is ready for use. During steam ironing, please adjust steam rate according to your requirement as indicated in the steam selection.

1. Fill water tank with clean water as above filling instruction. For better performance,

8. Set temperature control knob to steam ironing position according to fabric setting

please immerse the filter in water for several minutes before installing it into the water

2. Connect the appliance into a suitable socket outlet. Lay down handle and press down the power switch on the control panel. Water tank decorative indicator light lights up to indicate that the unit has been connected to the power supply

a. For every first time use, it is normal that a slight vibration sound may be heard from electrical pump inside the base unit for a few seconds when steam ironing started. It is because there is air inside the filter, it will stop when the air inside the filter has been pumped out. Press and HOLD the trigger for up to 30 seconds. If necessary hold the iron hand unit below the base. This clears any air locks more quickly
b. When the temperature control knob is set at " ● [SYNTHETIC]" position, no steam is produced as it only suits dry ironing. When set at " ● [WOOL/SILK]" or " ● ● [COTTON]", "MAX", steam will automatically vary according to soleplate temperature.

Vertical steam ironing

**Note:** Never block the steam hose.

### ORDER FILTERS ONLINE AT: WWW.SWAN-BRAND.CO

Follow the steam ironing process, and then hold the iron in vertical position about  $5 \mathrm{cm} \ \mathrm{tr}$ 

15cm away from the hanging fabrics. Press AND HOL:D the steam release button. This "create vertical steam. This feature is especially used for removing creases from

The iron should be placed on the iron rest, an

There is an overheat protection device installed in pump. When water in water tank has been used up. Pump will be hot. If the temperature of pump exceeds it's Max limit, overheat protection will automatically activate to protect pump from being burnt out this moment, turn off power switch at first, unplug the appliance from main socket, and then check if water tank has sufficient water. If not, please refill water tank and wait 30

 
Note: When the water level reaches a low level or becomes empty, the pump will make

und to remind you to refill it, Then stop using the appliance immediately and refill wat

Never dispose of your product with other household waste.
Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

- and any other deposits on the soleplate with a damp cloth or non-abrasive 2. Is the carry handle down. It has to be down or the unit won't power up!
- Never clean the appliance by running it under the tap. Never immerse any part of the





It doesn't mean your product is faulty. Call service! It's quicker than to

of cases!

0871 200 0003

1. Is thermostat set to •• or •••? Lower settings won't produce steam

3. You need to press and HOLD the steam switch on the handle for up to 30 seconds, particularly on first use. This to allow the pump to expell any

it back to the shop and they can get you up and running in more than 999

2. Have you turned the steam control knob up far enough?









Copyright © 2013 Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD

www.swan-brand.co.uk