

Swan
designed for life



www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

Professional Stand Mixer

Copyright © 2012
Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD

For model: SP20140N


v1.0

Important Safeguards

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Unplug the unit when not in use or before cleaning
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- The manufacture does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- **Do not touch the moving parts and do not insert any kind of object (knives, forks, spoons etc.) while the product is operating. A spatula may be used only when the product is not in operation, avoiding the risk of serious injury.**

Parts & Assembly

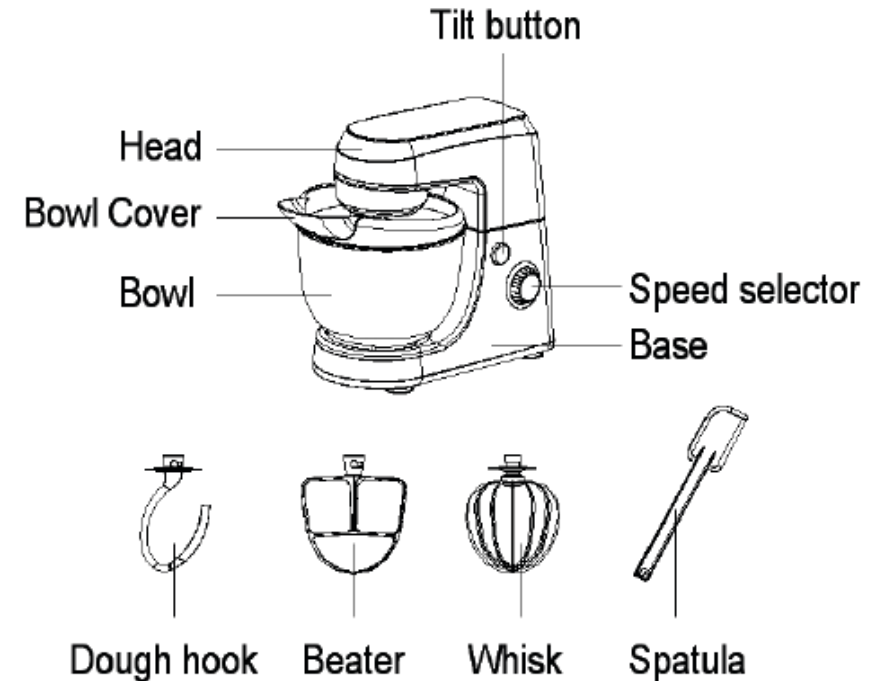

Parts ordering:

- SP20140N-1: Whisk
- SP20140N-2: Dough hook
- SP20140N-3: Beater
- SP20140N-4: Splash guard (bowl cover)
- SP20140N-5: Bowl
- SP20140N-6: Spatula

Specification

Model No. SP20140N
220-240V~50Hz
350W

How to Use

Before first use remove all packaging. Wash the beater, whisk, dough hook and bowl in warm soapy water. Rinse and dry thoroughly.

Before assembling the mixer, be sure the power cord is unplugged from the power outlet and the speed selector is in the 0 position.

1. Press the tilt button, the head of mixer will automatically release and lock into tilt position. **NOTE: for safety reasons, the motor will not run when the mixer is in the tilt position.**
2. Select the desired attachments depending on the mixing task to be performed: beater for mixing and beating egg, and dough hook for kneading, the whisk for beating and frothing egg white.
3. Insert the Beater/Dough hook/Whisk directly, until it locks into position.

Note: Ensure the beater or dough hook or whisk is fully inserted into the socket, otherwise your mixing results may be affected.

4. Place bowl in position. First place the bowl on the base, then turn the bowl in clockwise direction until it lock into position (see fig.1).
5. To lower the head and place beater/dough hook/whisk into the bowl by holding the head with the one hand and ease the head down. A click sound will be heard when the head has reached the correct position.
6. We recommend you put bowl cover in place (see fig.2). This reduces any splashing and makes it easier to add ingredients during the mixing process.



Fig.1



Fig.2

Swan
designed for life

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

Hints and Tips

Start with a low speed then *gradually* increase for best results.

During kneading, some flour may adhere to the inside of the bowl. You can stop the machine, remove the bowl cover, and scrape the flour on the inside wall of bowl with the spatula to obtain well kneading results.

When mixing is complete, turn the speed selector to 0 position, unplug the cord from power outlet. Hold down the tilt button, the head of the mixer will automatically lift and lock into the tilt position.

Tip: Before pressing down the tilt button, make sure the beater or whisk or dough hook are in such a position that they will not interfere with the bowl when mixer is in the tilt position. You may need to "pulse" the speed controls that the mixing heads rest to the left or right - rather than straight forward.

If necessary you can scrape the excess food particles from the beaters or dough hooks by using the plastic spatula.

Pull out the beater/dough hook/whisk - a little force may be required. Don't worry, they are quite strong.

Refrigerated ingredients, such as butter and eggs, then should be at room temperature before mixing begins. Set these ingredients out ahead of time.

To eliminate the possibility of shells, break eggs into a separate container first, then add to the mixture.

Do not over-beat. Be careful that you only mix/blend mixtures until recommended in your recipe. Fold into dry ingredients only until just combined. Always use the low speed for dry ingredients.

Climatic conditions. Seasonal temperature changes, temperature of ingredients and their texture variation from area to area all play a part in the required mixing time and the results achieved.

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

Swan
designed for life

Cleaning and Maintenance

Unplug the appliance and allow the motor to cool down before cleaning.

Caution: The mixer cannot be immersed in water or other liquid.

Wipe over the outside surface of the head and base with a dampened cloth and dry with a soft dry cloth.

Wipe any excess food particles from the power cord.

Immerse the bowl, beater, spatula, dough hook and whisk in warm soapy water for complete cleaning. Then rinse under running water and wipe dry. These can also be placed in the dishwasher.

We don't recommend putting the splash guard (bowl cover) in the dishwasher as the high temperatures can dull the plastic over time.

WEEE Directive

Disposal of Unit



Disposal instructions for Swan items in accordance with the WEEE directive. Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recyclemore.co.uk, or www.reyclenow.co.uk for access to information about the recycling of electrical items. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

Two Year Warranty

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

The product must be returned to the retailer with proof of purchase.
The product must be installed and used in accordance with the instructions contained in this instruction guide. It must be used only for domestic purposes. It does not cover wear and tear, damage, misuse or consumable parts. Swan Products Ltd has limited liability for incidental or consequential loss or damage. This guarantee is valid in the UK and Eire Only.

Swan
designed for life

Helpline Number: 01733 404703
WWW.SWAN-BRAND.CO.UK

BS Plug Wiring

The wires in the mains lead are coloured in accordance with the following code:

| | |
|-------|---------|
| BLUE | NEUTRAL |
| BROWN | LIVE |

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO THE EARTH TERMINAL

Declaration of EC Conformity

We Swan Products Ltd Declare that this product conforms to all the following product legislation. In accordance with the following directive(s):

2004/108/EEC. The Electromagnetic Compatibility Directive
2006/95/EC. The LVD directive (Low Voltage Directive)
2011-65-EU. The RoHS. Directive. (Restriction of Hazardous substances Directive)
80/590/EEC and 89/109/EEC Food Contact

Kev Stewart
Product Manager

