

Kitchen Accessories

Sensor Bin

SWKA4500 (all colours)

Help line **01733 404703**

Swan *Retro*
designed for life

v1.0



IMPORTANT INFORMATION

GETTING THE BEST FROM YOUR SENSOR BIN

Thank you for choosing this Swan sensor bin. Please read these instructions carefully, they will tell you how to get the best out of your product. Swan sensor bins are made from high grade, materials that will look great and give many years of faithful service

1. Open the cover of the battery case at the bottom of the Lid and equip it with four batteries "AA" observe correct polarity.
2. Place the bin liner in the center of the bin and fold the top of the bag over the edge of the bin. Then place the retaining ring over the liner to secure it into position.
3. Turn on the power switch at the bottom of the lid. The red indicator light will be on for 2 seconds. And then it flashes once every 4 seconds which shows that the sensor system is working properly.
4. When putting rubbish into it, keep your hand/object about 5-15cm in front of the inductive window, the lid will open automatically within 0.5 seconds, then it will close automatically in about 5-6 seconds after your hand/object is removed from the sensor area. Keeping your hand/object within the sensor area which will keep it open.
5. The indicator light flashes red (every 4 seconds). When the lid opens, the indicator light shows yellow. When the lid closes, the indicator light shows red.
6. The batteries can last about 3- 6 months, assuming the dustbin opens and closes 20 times one day. High-alkaline batteries can last up to 2 years on standby only.
7. Do not discard spent batteries in household waste. Always dispose of at recycling centre.



2 YEAR WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the store. **The following conditions apply:**

- The product must be returned to the retailer with proof of purchase.
- The product must be used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.
- This warranty does not affect your statutory rights

Check the label underneath your product and write the model number here for reference _____



Love Your SwanProduct

Always site your bin on a level surface that can withstand the weight of the bin and its contents

Try not to site your bin in direct sunlight or any places where it might get hot/warm as this could lead to unpleasant odours. Avoid placing the bin in a contained space and ensure that any obstacles don't block the inductive window within a 2 metre distance.

Avoid placing your bin where it might pick up splashes from cooking etc

Regularly clean your bin with a non-abrasive cleaner, using a soft cloth. Dry thoroughly after cleaning.

Do not use wet cloth near the sensor panel

Feel free to use scented bin fresheners

Check out our award winning Retro range at
www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD