

Swan

designed for life

GATSBY  
COLLECTION



## 1.7 Litre Kettle

Model: SK14080 (all colours)

Help line

**0333 220 6050**

v1.0



## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

**When using any electrical appliance, basic safety precautions should always be followed including the following:**

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.



## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or





## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- DO NOT OVER FILL PAST THE MAX LEVEL
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.



## TECHNICAL DATA

Description: Kettle  
Model: SK14080 (all colours)  
Input Voltage: 220-240V  
Frequency: 50/60Hz  
Power consumption: 2500-3000 Watts





## HOW TO USE

**Before first use**, remove all packaging.

It is important to ensure the correct plug adaptor is used when operating in a country not using the UK 13 Amp socket system. If in doubt, consult a qualified electrician.

- Fill the kettle with water via the spout or you can also fill the kettle by opening the lid. Ensure the lid is firmly closed after filling.
- Check that the water level is between the MIN and MAX lines on the water gauge.
- PLEASE DO NOT OVERFILL THE KETTLE PAST THE MAX LEVEL. DOING SO POSES A SCALDING RISK.
- Place the kettle on its base, Connect the plug to the mains supply and press the power switch down
- The kettle will switch itself off once the water has boiled
- If this is the first time you have used the kettle, discard the water from the first boiling.



## CLEANING & MAINTENANCE

DAMAGE TO THIS PRODUCT CAUSED BY EXCESSIVE LIME SCALE BUILD UP IS NOT COVERED BY YOUR WARRANTY

- If you live in a hard water area, it will be necessary to de-scale the kettle from time to time. Most supermarkets sell de-scaling tablets, powders or liquids.
- These are inexpensive, easy to use and perfect for ensuring your kettle provides many years of faithful service.
- An excessive build up of lime scale will damage your kettle and increase the boiling time/electricity consumption!
- For cleaning external surfaces, a soft cloth moistened with a mild detergent solution is all that is required.
- DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER
- ALWAYS ENSURE THE PRODUCT IS UNPLUGGED FROM THE MAINS SUPPLY AND COMPLETELY COOL BEFORE CLEANING.



## WARRANTY

### Important Warranty Information

This product is guaranteed for 2 years from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion

This warranty applies only to:

- (a) Product purchased as new from a Shop Direct Group digital department store.
- (b) Product installed and used in accordance with the instructions contained in this manual.
- (c) Product used for domestic purposes only.
- (d) Product purchased in the UK and Eire.

This warranty does not cover:

- (a) Cosmetic damage.
- (b) Normal wear and tear or consumable parts.
- (c) Incorrect voltage supply or power surges.
- (d) Customer misuse, modifications or adjustments.
- (e) Repairs attempted by anyone other than by an authorised Swan service engineer.
- (f) Products with unreadable or removed serial numbers.
- (g) Products purchased from any other retailer.

Swan has no responsibility for incidental or consequential loss or damage.

What to Do in the event of a problem:

Please refer to the troubleshooting tips section within your user guide for help and guidance. If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting Swan, please provide:

Your customer account number.

Product model number, catalogue number and serial number. Please note; model & serial numbers can be found on the product rating label.

Date of purchase.

Complete description of the problem.

This information will help our team assist you more quickly.

Technical Help Line: 0333 220 6050

Opening Hours: Monday - Friday 8am - 6pm.

Postal contact

SD

L70 1AB

Box MPRC8



## BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

WARNING: THIS APPLIANCE MUST BE EARTHED



## DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



[www.swan-brand.co.uk](http://www.swan-brand.co.uk)



Scan this QR code  
to hear about  
our story



We love  
what we do



we're proud  
of our quality



Find us on Facebook

\* on selected products

Copyright © Swan Products Ltd.  
PO Box 3117, Stoke-on-Trent ST4 9GD

