



## Installation Instructions for Premium Nozzles

After removing the current nozzle and ensuring that the nozzle O-ring (F) is properly seated in its groove, twist the nozzle clockwise (as viewed from the top) so that the flanges in the nozzle lock into place on the top of the pump chamber by hand. Twist until the nozzle flanges can move no further and are completely snug. Nozzles can be changed conveniently without removing the float or using any tools.

**Note:** If it is difficult to twist the nozzle into place, dielectric grease (P) can be applied to the nozzle O-ring.

