

INSTRUCTIONS FOR STAINLESS STEEL WATER FEATURES

Congratulations on your purchase of this stainless steel water feature! Your water feature has been manufactured to our strictest specifications using high-quality materials to maintain the finish and keep your feature in excellent condition. It is important to adhere to the following points:

IMPORTANT

- Always use a dechlorinator (i.e., Fresh Start or other) when filling the feature with water or just topping off the water level.
- You may also use an algae control/limescale control product (i.e., Feature Clear or other).
- The best water level is 5"-6" high from the bottom of the base.
- Do not use any other chemical water treatments or salt (sea) water.
- We would not recommend the use of fish or water plants with your stainless steel feature as the polishes may harm them.
- Do not use chlorine or bleach to clean the feature.

WARNING

- Adult supervision is advised for children that will be near this water feature.
- Make sure that there is enough water in the feature before the pump is plugged in. Pumps must be completely submerged in water.
- Always unplug the pump while cleaning the feature or the pump.
- Should the pump electrical cord or pump itself become damaged, stop using it.
- If you need to replace the pump, please speak to your dealer to ensure use of a pump similar in size to the original.

REMEMBER

- This feature is stainless steel, not stain proof, so it will require regular maintenance, as with all stainless steel products—appliances, cookware, etc.
- Use nonabrasive (soft Chux or flannelette) cloth with distilled water or Windex to wipe over polished surfaces; abrasive polishes and cloths will scratch or mark polished surface.
- For brushed-finish surfaces that need cleaning, use 3M Stainless Steel Cleaner, available from your local hardware store, and a soft Chux or flannelette cloth.

We hope you enjoy all the great benefits of a well-maintained water feature!