



Active Collar

Rechargeable & Weatherproof
Dog Training System

User Manual

506i/506i-2

www.ropricorp.com

RopriPet 506i/506i-2 Active Collar

Rechargeable & Weatherproof Dog Training System

- Rechargeable Transmitter & Receiver Unit
- 3000 Identity Codes to prevent conflicts with other e-collars
- 100 Correction Levels of Vibration and Static Stimulation
- Beeper for locate or Sound Training
- Large backlit LCD Screen
- Power Saving Design Receiver Unit Sleep/Auto Protect Mode
- Weatherproof Receiver Unit
- Train up to 2 Dogs with single transmitter (506i-2)
- Durable and Adjustable Nylon strap
- Fits Small, Medium and Large Dogs
- Range up to 330 Yards

Thank you for choosing the **RopriPet 506i/506i-2 Active Collar** Rechargeable and Weatherproof Training Collar. At **RopriPet** we support training through positive reinforcement. Do not use this collar to instill fear or inflict pain on your dog. The **RopriPet 506i/506i-2 Active Collar** is best used to gain your dog's attention during training. This collar will give you years of trouble free service. However, in the unlikely event that you experience a technical problem with your **Active Collar**, you are covered by our 12-month warranty.

Contents

Identify the Components	4
Operating Elements	5
Setup and Operation	7
Syncing Remote Transmitter and Receiver Collar	8
Testing the Training Collar	8
Troubleshooting	10
Regular Maintenance Tips	11
Frequently Asked Questions	12

Before You Start

READ the owner's manual!

- Charge both the transmitter and receiver for at least six hours individually before use.
- Please read the entire manual before you start in order to take advantage of all the features of your Active Collar Training System and to avoid damage to the unit, or worse, harm to your pet.
- For more tips and instructions, please visit www.ropricorp.com/productsupport

Warning

- Do not use if your dog displays aggressive behavior toward other animals or humans. If you are unsure whether this training system is appropriate for your dog, consult your vet or a certified trainer before use.
- Never leave the **RopriPet Active Collar** on your dog for more than 12 consecutive hours.
- The **RopriPet Active Collar** has been designed to be used as a proactive training tool. Constant contact with your dog's skin may cause irritation, and at worst, a rash.
- Check your pet daily for signs of rash. If you notice a rash or soreness, discontinue use of the Active Collar for 48 hours. If the irritation continues, consult with your vet for advice and/or treatment.

General Notes and Tips

- The best stimulants are the vibration or beep modes. Though it is not harmful, static shock mode is best used only in the most extreme circumstances.
- If your pet reacts by hiding or acting in a fearful manner, change the training session – do something simple such as a ‘sit’ command, followed by praise and a reward.
- The Active Collar is not a replacement for your dog’s regular collar. Do not attach a leash to the collar as the metal prongs may place excessive pressure on your dog causing discomfort.
- When using a separate collar, do not cover or put pressure on the Active Collar.
- Use the Active Collar to eliminate or train one behavior at a time. Dogs can easily become confused. Be consistent. Once you find the stimulant that works best with your dog, keep using it!
- Keep training sessions short and consistent. Daily for 15 to 20 minutes at a time.
- Reward and praise your dog’s good behavior!
- Do not immerse the receiver in water – it is weatherproof, but not waterproof.
- The receiver is fine in light drizzles but must be removed before bathing, swimming or heavy rain.
- The Test Bulb Kit is also handy for tightening the contact points onto the receiver. **Note:** Do not over tighten. Stop when the contact points feel snug.

AND REMEMBER, BE CALM AND ASSERTIVE AND USE POSITIVE REINFORCEMENT TECHNIQUES!

Identify the Components

506i



Remote Transmitter



Receiver



Contact Points



Charger



Nylon Collar



Test Bulb Kit



USB Charger Cable

506i-2 Additional Features



Additional Receiver



Additional Nylon Collar



Additional Contact Points








Operating Elements

Transmitter





1. Antenna
2. LED Light
3. Intensity Level Buttons
4. LED Light Button
5. Channel Button
6. Command Button
7. Mode Button
8. Charging Port

LCD Icons

- 000 1-100 Level
-  Shock Mode
-  Vibration Mode
-  Beep Mode
-  LED Light Mode
-  Low Battery Indicator
-  Channel 1
-  Channel 2


Operating Elements

Receiver

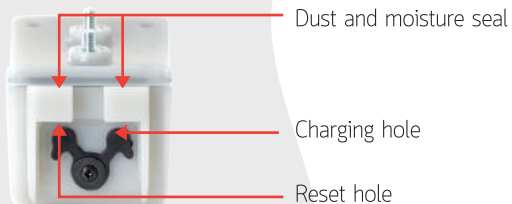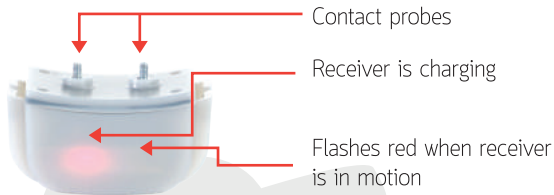





Setup and Operation

Setup: Remote Transmitter

- Connect the charger to the charging jack and plug the charger into a standard outlet.
- The red LED should be lit which indicates charging.
- Once it is fully charged, the LED will turn off automatically.
- The symbol  will show up on the right side of the LCD screen when it needs charging.

Operation: Remote Transmitter

- To turn the remote transmitter On/Off simply hold the **Mode Button** for 5 seconds.
- Access different modes by pressing the **Mode Button**. The LCD images will change between: Shock:  Vibrate:  Beep:  Collar LED: 
- To select different levels of Vibration or Static Shock Correction, press the **Up/Down Buttons** on the right side of the remote transmitter.
- Press the **Channel Button** to select between 1 or 2 Receiver Collars. (Applicable to 506i-2).
- If the transmitter is turned **OFF**, hold the **Mode Button** for 5 seconds to turn the unit **ON**.

Setup: Receiver

- Open the rubber cover and connect the charger connector into the charging hole.
- Plug the charger into a standard outlet.
- The red LED should be flashing which indicates charging is in progress.
- Once it is fully charged, the LED will turn off automatically.

Operation: Receiver

- The LED will blink once every 5 seconds to signal it is active.
- The Receiver Collar enters **Standby Mode** if no activity is detected for 20 second. Any movement detected will automatically wake it up.
- When a recharge is required, the receiver collar will beep for 20 seconds.

Syncing Remote Transmitter and Receiver Collar

Syncing Remote Transmitter and Receiver Collar

1. Turn on the Remote Transmitter by holding the **Mode Button** for 5 seconds.
2. Select the appropriate channel (1 or 2) to sync each Receiver Collar.
3. Using the tip of a pen or a straightened paper clip press the **Reset Button** on the Receiver to enter encoding mode for 5 seconds.
4. When you hear a beep from the Receiver Collar, press the **Command Button** on the Remote Transmitter immediately.
5. Once synced properly, you will hear a beep to confirm successful pairing.
6. See our handy video instructions for the syncing procedure at:
www.ropricorp.com/productsupport

Note: If you fail to hear a second beep confirming sync from the Receiver Collar, you need to re-sync it. Repeat Steps 3-5 above.

Testing

Vibration Test

- Press the **Mode Button** on the Remote Transmitter and select **Vibration Mode**.
- Be sure the level setting is not set to zero.
- Press the **Command Button**, the Receiver will vibrate indicating the Vibration feature works.

Beep Test

- Press the **Mode Button** on the Remote Transmitter and select **Beep Mode**.
- Press the **Command Button**, the Receiver will beep indicating the Beep feature works.

LED Light Test

- Press the **Mode Button** on the Remote Transmitter and select LED Light Mode.
- Press the **Command button**, the LED on the Transmitter will flash indicating the LED Light works.

Static Shock Test

- Take the included Test Bulb Kit and gently press it onto the Receiver Collar's Contact Points. Ensure the Contact Points make contact with the Test Bulb's wires.
- Press the **Mode Button** on the Remote Transmitter and select **Shock Mode**.
- Be sure the level setting is not set to zero.
- Press the **Command Button** and the test bulb will light up indicating the shock feature works.



Fit the receiver collar to your dog

Important: The proper fit and placement of your Receiver Collar is important for effective training. The Contact Points must have direct contact with your pet's skin on the underside of his neck.

To ensure a proper fit, please follow these steps:

- Make sure that the Receiver Collar is turned off.
- Have your pet standing or sitting comfortably.
- Place the Receiver Collar on your dog's neck close to the ears. Center the Contact Points underneath your dog's neck, touching the skin. Note: It is sometimes necessary to trim the hair around the Contact Points to make sure that contact is consistent.
- **CAUTION: Do not shave your pet's neck as this may increase the risk of skin irritation.**
- The Receiver Collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck.
- Allow your pet to wear the collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the Receiver Collar.



Troubleshooting

My RopriPet Active Collar Training System does not seem to be working?

- Charge the Transmitter and Receiver Collar for approximately 6 hours individually first.
- Make sure the Transmitter is turned ON by holding the **Mode Button** for 5 seconds.
- Check the levels of Vibration or Static Shock stimulation. Intensity levels need to be set higher than "0" in order to work.
- Make sure both the Receiver Collar and Transmitter are both fully charged. We have found that sometimes customers have not pushed the charging pin fully home when charging.
- Make sure the Contact Points are placed snugly against your pet's skin.
- You may need to reset the receiver. Using the tip of a pen or a straightened paper clip press the **Reset Button** on the Receiver and hold it for 3 to 5 seconds. The lights on the Receiver will turn off. Now follow the procedure as out lined in this Owner's Manual to re-sync the Transmitter and Receiver(s).
- If all of above does not work, you can re-sync the remote Transmitter and Receiver Collar. (Refer "Syncing Remote Transmitter and Receiver Collar" of this Owner's Manual)
- From time to time we have found where a customer may have synchronized the system on Channel 1, then mistakenly changed the transmitter to Channel 2 and attempted to operate the system. Please make sure this is not the case.

My RopriPet Active Collar Remote Transmitter does not work

- Check if Transmitter is low on battery, the symbol will show up on the right side of LCD screen.
- Remote Transmitter will automatically go into **Standby Mode** if no instruction is detected within 10 seconds. Press the **Mode Button** to re-activate the Remote Transmitter.

My RopriPet Active Collar Receiver starts to beep for 20 seconds when I turn it on

- The Receiver Collar will beep for 20 seconds on low battery status. Charge it for approximately 6 hours and the beeping sound will go away when it's fully charged.

If you continue to experience problems, please contact us at
CustomerService@ropricorp.com

Regular Maintenance Tips

- Check Contact Points for tightness weekly
- Clean Contact Points with alcohol weekly
- Check your dog's neck for irritation weekly
- Charge both the Transmitter and Receiver collar and least once a month especially when it's not in use to prevent damage to the rechargeable batteries.

FAQ

There's a rattling noise coming from the receiver, is it broken?

Not at all, this is the mechanism that wakes the collar from 'sleep mode' and is perfectly normal.

Once my pet is trained, does he have to continue wearing the Receiver Collar?

You might have to reinforce training with the Active Collar from time to time.

Can I upgrade the RopriPet 506i Active Collar System to the 506i-2 for two dogs?

Yes, you can simply contact us directly or through our store on Amazon.

How long can I continuously deliver Vibration or Static Shock to my pet?

The maximum amount of time you can deliver Vibration or Static Shock Stimulation to your dog continuously is 10 seconds. After 10 seconds, the Remote Transmitter will time-out and the Vibration or Static Shock must be released and pressed again.

We do not advise overuse of the **static shock mode!**

Is the RopriPet Active Collar waterproof?

No, the RopriPet Active Collar is weatherproof but cannot be submersed in water.

What do I do if my dog's neck becomes red and irritated?

Discontinue use of the product immediately for 48 hours. If the condition persists beyond 48 hours, please consult your vet. You may resume the use of the product and training once the skin is healed.

Can I attach a leash to the Receiver Collar?

No, this can result in pulling the Contact Points too tightly against your dog's neck. Use a separate collar placed above the Receiver Collar.

When should I recharge the Transmitter and Receiver Unit?

Remote Transmitter: The Battery symbol will appear on the right side of LCD screen.

Receiver Unit: A beeping sound for 20 seconds when you turn on the Receiver Unit.

How long can I leave Receiver Collar on my dog?

The Collar is not designed to be worn continuously. We recommend the Collar not be worn for more than a few hours during a 24-hour period.

How long should my training session for my pet be?

Training sessions should be kept short and positive. Each recommended session should last around 10-15 minutes.

Will I get exactly 330-yard range from my RopriPet Active Collar?

Not always. The range you get will vary according to terrain, weather, vegetation, as well as transmission from other radio devices.

For More Information and Training Tips:

- Check our website at www.ropricorp.com/ProductSupport
- Contact us anytime at CustomerService@ropricorp.com
- Love social media? Follow us on:



Frequency: 433.825MHz
Transmitter: 3.7V 500ma
Receiver: 3.7V 500ma

506i Owner's Manual V2.2 May 2017