

Pairing the Remote Transmitter and Receiver Collar

Familiarize yourself with the following steps before commencing with the pairing procedure

If your Receiver Collar does not beep when the Tone Button (yellow) of the Remote Transmitter is pressed, or if you feel the Receiver Collar is not responding to the Remote Transmitter, follow these steps to pair:

- Place the Remote Transmitter into Pairing Mode by pressing the **1/2** Button for 3-5 seconds until the Digital Display shows **P**.
- With the Receiver Collar off your pet, press and hold the Power Button to turn the Receiver Collar **Off**. The red LED will stop glowing.
- Now press and hold the Power Button on the Receiver Collar until the Green LED begins to flash. Release the Power Button and the Green LED will flash every second on the Receiver Collar. This continues for 16 seconds, during which time pairing procedure should be completed.
- While the GREEN LED on the Receiver Collar is still flashing, simultaneously press and hold the up and down (**+/-**) Buttons on the Remote Transmitter until the Green LED flashes rapidly for 5 times on the Receiver Collar, indicating it has learned the Transmitter ID.
- Press and hold the **1/2** Button again to complete and exit Pairing.
- Press any of the Static Stimulation/Vibration/Tone Buttons on the Remote Transmitter. The Receiver Collar should respond accordingly, verifying that it is paired with the Remote Transmitter.



Two Dog System (606i-2)

Note: If you purchased the Active Collar Pro 606i and wish to add a second Receiver Collar, extra Receiver Collars are available from RopriPet (Visit ropricorp.com).

To Add the Second Receiver

On the Remote Transmitter:

- Press **1/2** Button and change to the other Channel for Dog 2.
- Turn on the Receiver Collar for Dog 2, press any Static Stimulation/Vibration/Tone Buttons to verify function.
- If Dog 2 Receiver Collar does not respond. Pairing may be needed. See steps in the To Pair the Remote Transmitter and Receiver Collar section above.