

5 Technical Specification

Power Supply	12-24VDC 500mA Max. (26-15mA)
Relay Output	5A Max. CATIII 120VAC
SIM	1.8/3.6V
GSM Frequency	900/1800MHz
Antenna	50Ω SMA

6 SMS Command Set Summary

Command	Action			Comments
MASTER	<i>number</i>	.		
ADD	<i>number</i>	.		
REM	<i>number</i>	.		
LIST				
CLEARALL				also clears MASTER
CALL	LIST	ANY		
TXTRIS	DIS	EN		
CONN	NONE	CL	OP	
STAT				
INTXT	DIS	EN		
INLVL	OP	CL		
TXNUM	<master>	<i>number</i>	.	set by MASTER
RLYMODE	NO	TOG		
RLYTIME	<seconds>			default 3s
RLYTIME	<minutes>m			relay time in minutes
CSQ				get RSSI
PRGSIM				clear SIM
DIAL	<i>number</i>	<i>interval (days)</i>	<i>time (s)</i>	PAYG Keep Alive
DIAL	OFF			(switch off DIAL)
OPEN				activate relay
OPEN	<seconds>			open for <seconds> seconds
OPEN	<minutes>m.			open for <minutes> minutes
CLOSE				reset relay
QUERY/QNUM	<i>number</i>	.		find number in memory



GSM Relay Board

Alpha 1.02

Application Firmware 1.12



Open-on-Call Access Control with Text Alert



Developed and Manufactured by
Advent Controls Ltd, Liverpool, UK
Made in UK

www.adventcontrols.co.uk

EMC/EMI Compliance Statement: CE Mark Declaration of Conformance

Manufacturer's Disclaimer Statement: The information in this document is subject to change without notice and does not represent a commitment on the part of the vendor. No warranty or representation, either expressed or implied, is made with respect to the quality, accuracy or fitness for any particular purpose of this document. The manufacturer reserves the right to make changes to the content of this document and/or the products associated with it at any time without obligation to notify any person or organisation of such changes. In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages. This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for any purpose without expressed written consent of its authors. Product names appearing in this document are mentioned for identification purposes only. All trademarks, product names or brand names appearing in this document are registered property of their respective owners.


Contents

1.	Introduction	3
2.	Operation	3
	2.1 Registration	3
	2.2 Command Message Format	3
	2.3 Master Number Setup	4
	2.4 Adding a User Number	5
	2.5 Removing a User Number	5
	2.6 Viewing the Valid Number List	5
	2.7 Finding a Number in the Memory	5
	2.8 Clearing All Numbers	6
	2.9 Enabling Any Number	6
	2.10 Result Acknowledgement Message	6
	2.11 Connecting a Call	7
	2.12 Input/Output Status Message	7
	2.13 Input Change State Message Enable	7
	2.14 Input Change State Level	7
	2.15 OPEN/CLOSE Commands	7
	2.16 Response SMS Text Number	8
	2.17 SIM Keep Alive Call	8
3.	Setup	
	3.1 Relay Activation Mode	8
	3.2 Relay Activation Time	8
	3.3 Signal Strength Indicator	9
	3.4 Purging Messages from SIM	9
4.	Installation	
	4.1 Power Connection	10
	4.2 Input Connection	10
	4.3 Output Connection	11
	4.4 Antenna Connection	11
	4.5 Mounting	11
5.	Specification	12
6.	Command Set Summary	12

4.3 Output Connection

The relay output has Normally Open (NO) and Normally Closed (NC) relative to COMmon (COM) connections. These can be actuated in a momentary operation or can be toggled (see **3 Setup**).

The connections are 'voltage free' with no connection to +VE or GND. The relay connections have a minimum creepage distance of 2.5mm and are CATII rated to 150V.

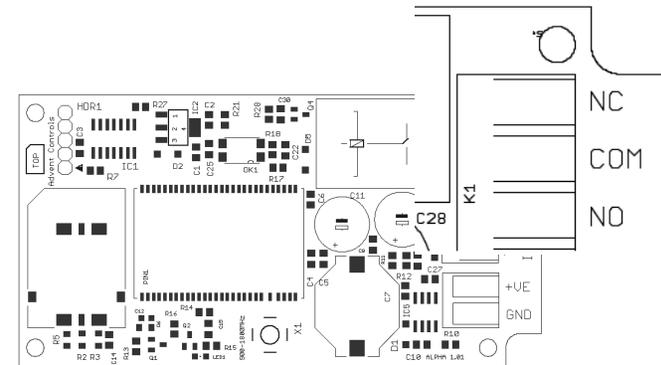

4.4 Antenna Connection

The standard antenna can be used where a strong signal exists. In areas with a poor signal an external antenna is recommended connected via RG174 coaxial cable. The system uses standard SMA connectors.


4.5 Mounting

The PCB has been designed to fit into a Hammond 1591B enclosure. When mounting the unit into such an enclosure the enclosure must be modified to allow for the antenna/coaxial cable to be connected.

When mounting in a metal cabinet, an external antenna must be used, connected using 50ohm impedance coaxial cable. If required, please contact support@adventcontrols.co.uk for assistance.

2.3 Master Number Setup

All functions are controlled via one master GSM mobile phone. The system must first be associated with this phone's number before it can be used. To do this the supplied 2.54mm jumper connector must be fitted to pins 3 & 4 on HDR1 as shown in red in Figure 1. A new Alpha PCB will be supplied with the jumper already fitted in this position. **Do not connect the jumper to any other pins or damage may result.**

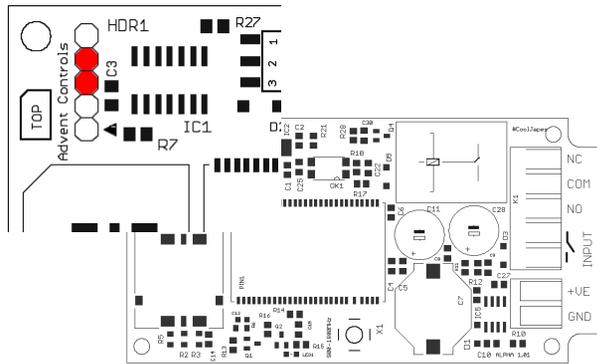

The master phone number must then send an SMS text message to the Alpha system phone number as follows:

MASTER *number*.

For example, if the master telephone number is 07000 000 000 the message should read:

MASTER 07000000000.

Also valid are the following:

Master 0700000000 and master 0700000000

The following messages are invalid:

master 07000 000 000. (spaces in the number)
master07000000000 (no space after 'master')

To test that the master number has been successfully set it is recommended that the system telephone number is now called. This will activate the output relay. Ensure some time has passed to allow your network operator to send the SMS text message. This can take several minutes when the network is busy. If the master number setup has failed the system **MUST** be powered down and restarted with the jumper in place before a second attempt is made.

RLYMODE NO relay Normally Open (NO)

3.2 Relay Activation Time

The RLYTIME command is used to adjust the time the relay is active following a call when RLYMODE is set to NO. By default the relay time is set to 3s. The time can be set from 1s to 999 seconds or 1 to 999 minutes using this command.

To change the activation time the master number sends a SMS text message as follows:

RLYTIME *seconds*.

e.g. **ryltime 1.** 1 second activation time
ryltime 250s 250 second activation time
Rlytime 1m. 1 minute activation time
RLYTIME 960m. 16 hour (16 x 60mins) activation time

3.3 Signal Strength Indicator

When setting up the system it is important to know the strength of signal for reliable operation. To receive a message showing the Received Signal Strength Indicator (RSSI) the CSQ command is sent to the system as follows:

CSQ

When the system SIM card has sufficient credit a SMS text message is sent to the master/TXTNUM number displaying the current RSSI.

e.g. >RSSI 21

The RSSI can be converted to an approximate Signal to Noise Ratio (SNR) in decibels using the following formula:

$$\text{RSSI (dBm)} = -113 + 2 \times (\text{CSQ value})$$

It is recommended that the minimum signal level for the installation is 20 (-73dBm) to ensure reliable operation. The system will operate below -100dBm but may become unresponsive at times.

To achieve an improved RSSI the standard antenna can be upgraded to a model with higher gain and/or the antenna should be positioned in an area with less physical obstruction. An extension lead can be attached to the SMA connector on the PCB to locate the antenna away from the control unit housing. It is not recommended to use an extension greater than 3m in length. LED2 will light continuously if the RSSI is indeterminate due to low signal integrity (CSQ value = 99).

3.4 Purging Messages from SIM

The PRGSIM command is used to remove any unwanted messages from the SIM card or to stop the system processing any messages sent when it was switched off. The master number send the following command to purge all messages from the SIM:

PRGSIM

When sent with additional time information the relay is activated for however many seconds or minutes specified.

e.g. **OPEN** activates relay like a call as per RLYTIME/RLYMODE

open 1.	1 second activation time
Open 250s	250 second activation time
OPEN 1m.	1 minute activation time
open 960m.	16 hour (16 x 60mins) activation time

CLOSE deactivates relay under all conditions

2.16 Response SMS Text Number

By default the system send any response text messages to the master number. However, the response number can be changed by using the TXTNUM command. This applies to all SMS text responses. To change the response number the following SMS text message is sent to the system by the master number:

TXTNUM<space>number.

e.g. **txtnum 07000000000.**

2.17 SIM Keep Alive Call

When using a Pay As You Go (PAYG) SIM card, to avoid SIM card deactivation, the system can periodically call a telephone number to keep the SIM active. Ensure the SIM card has sufficient credit to make a call even if the call goes unanswered. To setup the Keep Alive Call function the following SMS text message is sent to the system:

DIAL<space>number,frequency,call-time.

e.g. **DIAL 07000000000,10,25.** (dial 07000000000 every 10 days for 25 seconds)

Frequency—number of days interval

Call-time—total call time including dialling & connection

3 Setup

3.1 Relay Activation Mode

When a valid call is received the relay can be set to activate for a set period of time (set by the RLYTIME command) or to toggle between states on each call. By default the relay mode is set for timed activation. To switch to toggle mode the following message is sent to the system by the master number:

RLYMODE TOG enables toggle mode

To revert to timed mode the following message is sent:

2.4 Adding a User Number

Any telephone number of at least 5 digits where caller ID is available is valid. The system only compares the last 8 digits of any calling number against the numbers stored in memory. Therefore it is not necessary to enter the international dialling code format of the telephone number.

i.e. for 070**00000000** only the characters shown in **BOLD** text are considered

The ADD command is used to add a new telephone number. To add a new number the master phone must send the following SMS text message to the system telephone number:

add<space>number. e.g. **Add 07000000000.**

If TXTRES is enabled the system will respond with the 'Operation Successful' message.

2.5 Removing a User Number

The REM command is used to remove an existing telephone number. To remove an existing telephone number the master phone must send the following SMS text message:

rem<space>number. e.g. **REM 07000000000.**

If TXTRES is enabled the system will respond with the 'Operation Successful' message. If the number is not found the 'Operation Failed' message will be sent by the system.

2.6 Viewing the Valid Number List

The system can send an SMS text message containing a complete list of valid user numbers to either the master telephone or the number set by the TXTNUM command.

To receive the list of numbers the LIST command is used. The master phone must send the following SMS text message to the system:

List

No further characters are required and are ignored if received.

The response format shows the last 8 digits of the stored number followed by a space and the next number and so on...(the mater will appear as a 6 digit number)

e.g. 00000000 11111111 22222222 33333333 etc...

2.7 Finding a Number in the Memory

To find whether a number is stored in the memory the user send the following command to the board:

QUERY<space>number. or

QNUM<space>number

If the number is present the LED will flash 4 times and if not in the memory the LED will light twice for 2 seconds. If TXTRES is enabled an SMS text message will be sent with the result.

2.8 Clearing All Numbers

The CLEARALL command is used to erase all stored user and master numbers. To erase all numbers the following SMS text message is sent by the master number:

CLEARALL

No response is sent by the system to acknowledge the command

2.9 Enabling Any Number

The system can be setup to allow any number to operate the relay output. To enable any call the CALL command is used with the action ANY and is sent by the master phone in the following format:

Call any

To return the system to operate from only valid user numbers the LIST action is sent with the CALL command as follows:

call list

2.10 Result Acknowledgement Message

The system can be setup to send an SMS text message to either the master number or the number setup using the TXTNUM command. This acknowledges the result of the last command processed such as adding a new user number. The SIM card in the system must have sufficient credit for sending SMS text messages.

To enable the service the following text message is sent by the master number:

txtres enable or also valid:

TXTRES en

To disable the service the following message is sent:

TXTRES DISABLE or also valid:

txtres dis

The result message 'Operation Successful' is sent when the service is enabled

2.11 Connecting a Call

By default, when called the system is set to ring indefinitely or until the SIM card network operator transfers the call to voicemail. However the system can be set to connect a call when the input is **CL**osed (high/12V) or **OP**en (low/0V). This is done to allow the caller to know the state of the input even when the system has insufficient credit to send a status SMS text message.

To change the connect mode the CONN command is sent by the master phone with the action **CL** or **OP**. To disable connect on call the **NO**ne action is sent.

e.g. **CONN CL** connect when input high
CONN OP connect when input low
CONN NO do not connect call

2.12 Input/Output Status Message

To determine the current status of the input and output the STAT command is sent to the system telephone number in a SMS text message by the master phone as follows:

STAT

The system will respond with a SMS text message as follows:

RELAY OPEN INPUT LOW relay not activated/input open (GND)
RELAY CLOSED INPUT HIGH relay activated/input closed (+V)

2.13 Input Change State Message Enable

The system is able to send a SMS text message to the master number (or number specified by the TXTNUM command) when the input changes state. To enable this service the following command is sent via a SMS text message by the master telephone number:

INTXT En enables the change state text message
INTXT Dis disables the change state text message

2.14 Input Change State Level

The INLVL sets the active state of the input for sending the change state text message. For example, if the user requires a message to be sent when the input is closed (GND), then the following message is sent by the master number:

INLVL CL ;send status message when input closed (GND)

If the user requires the system to send a status message when the input goes open (+5V) the following message is sent by the master number:

INLVL OP text when open (+5V)

The change state service becomes inactive whilst the input remains in the active state (i.e. GND for INLVL CL/+V for INLVL OP) and remains inactive for 5 seconds after returning to the idle state.

If two messages are received for one event then this indicates that the INLVL settings are incorrect and should be reversed.

2.15 OPEN/CLOSE Commands

The OPEN command is used to activate the relay by sending the board a text message. The CLOSE command deactivates the relay, whether activated by the OPEN command or a call. When the OPEN command is sent without any additional instructions the message is handled as a call and follows the RLYTIME/RLYMODE settings.