

Quick Start User Guide

Output and Call Handling

During a call the output is activated by pressing the * key on the telephone keypad. This will activate the relay output (as per RLYTIME and RLYMODE) and instantly disconnect the call.

By default, any user number, call number or master number can activate the output relay by dialling the intercom SIM card telephone number. The default setting is for the intercom to reject the call as soon as the number is read. To switch back to this default mode the following command is sent to the intercom:

REJECT CALL

If desired the intercom can be set to answer incoming calls if the number is recognised and a conversation can be made between the intercom and the calling telephone. In this mode, to activate the relay the * key is pressed. To enter this mode the following message is sent to the intercom:

CONNECT CALL

If the output must be controlled for a measured period of time the RING mode is selected. In this mode the relay is activated when a recognised number calls the intercom for as long as the caller continues to dial the number. The call is never answered. This is also useful when it is not desirable to reject the call. To enter this mode the RLYMODE command is used as follows:

RLYMODE RING