

MERCEDES G 55 AMG

ELECTRIC RIDE ON TOY CAR



Product Size: 132*66*60 CM


WARNING: Not to be used in traffic.

This product is designed for children age 3+.

Original License Counterfeit Investigated



PARTS LIST

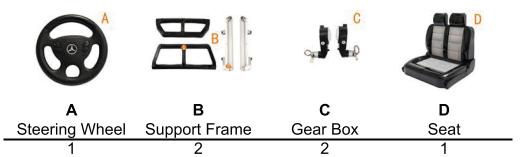








I. WHEELS INSTALLATION

 Please check the different of the wheels





Front wheel

Take off the nuts from the alxe.

Put the motor part of the right gearbox into the right hole of thecar body. Fixed the right gearbox by the screw.

The left gearbox fixed by the same way. Take turn to fix the gasket (need not put the gasket to inside of the rear wheels), wheels, gasket, nut (fixed by the spanner), small wheels cover.



II. SUPPORTS FRAME INSTALLATION

Assembly Instructions:

Turn the vehicle over and fix on the supports frame using the screws provided



Remark: The left and right Supports frame are different

III. Gearbox connect installation

Firmly connect the same color connection.



IV. Steering wheel installation

Prepare parts: Steering wheel Assembly Instructions:

Remove the nut and bolt from the steering wheel. Firmly connect the wires from the steering wheel to the wires from the wires from the dashboard.Push the steering wheel onto the steering column, align the holes and lock in place using the nut and bolt.



V. Battery connect Assembly Instructions:

Take off the plastic of insulation, red connection to red terminal.



WHILE CONNECTING TO THE STORAGER BATTERY TAKE CARE THAT THEY ARE CORRECTLY CONNECTED TO ENSURE THE RIGHT POLARITY







VI. Windshield installation

Align the windshield with the car slot and push until full into place. (according the photo)



VII.Car hood installation

Align the car hood with the car slot and push until full into place



IX. Car seat installation

Remove the two screws and place the seat into position.
 (according the photo)

2 . Reinsert the screws to fix the seat in place.

X.Spare wheel installation

Take off the screw.

Align the spare wheel with the car slot and push until full into place. (according the photo)



VIII. Car color lights cover installation

Align the car hood with the car slot and push until full into place. (according the photo)



Explosive View





CHARGING PRECAUTIONS BEFORE USE

Please read manual carefully before use.

Before operating the vehicle, check if there has been wear or damage to the battery, charger, connectors and any other part of the vehicle. If any damage is found, contact the seller to have the charger repaired or replaced immediately. Do not use a damaged product.

To get started,

- Press the power switch to OFF position to turn the power off.
 Open the seat, connect the battery plugs, with the red and black wires to their respective terminals. Please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal;
- 2. Ensure that the battery is secured to the car with the bracket. Otherwise the battery may loosen and fall out.

■ BATTERY & CHARGING

After first use, charge the battery for 8-10 hours until battery is fully charged. Subsequent charges should be 6-8 hours, but not exceeding 10 hours. TURN OFF THE POWER SWITCH WHEN CHARGING

Batteries should still be charged at least once a month in order to keep the cells active.

- 1. Open the cover of charging socket on the car.
- 2. Plug the charge into the charging socket.
- 3. Plug the other end of the charger into your wall socket.



DO:

- Recharge the battery when you notice a decrease in speed and power is the car.
- Charge at least once a month to keep the battery cells active.
- · Only adults (aged 12+) should be handling the battery/adapter
- Operate the battery and charger specified according to the manual instructions.
- The battery is heavy and contains sulfuric acid (electrolyte). Dropping the battery could result in serious injury. Handle with care.

DO NOT:

- Do not use the car until the battery is drained completely or to a crawling speed.
- Do not reverse battery polarity or connect wires to a short circuit.
- · Do not allow children under the age of 12 to handle the battery.
- Do not open the battery and the charger.

It is normal for the battery/adaptor to feel warm while charging, but if it feels too hot, stop charging immediately and check battery/adaptor.

■ TROUBLESHOOTING COMMON PROBLEMS

Problem 1: The car will not move.

- Charge battery for 6-8 hours. The battery is likely low on charge.
- Making sure the charger and the car has been removed from the car charging point.
- The battery wires are not connected. Please check the connections on the battery terminals are firmly in place.

Problem 2: The car only drives for a short time/distance.

- Charging the battery for 6-8 hours. The battery is likely low on charge.
- Keep the battery active by charging the battery at least once a month to keep the active.
- Replacing the battery. The battery may need to be replaced depending due to natural detoeriation of its charging history and age.

Problem 3: The audio does not work.

 Ensuring the volume is turned up and the MP3 lead is not connected.
 The steering wheel sounds will not work when the MP3 is plugged into the car.

Problem 4: Charger makes a buzzing sound while charging This is normal.

Problem 5: Charger overheating.

It is normal for the battery and charger to warm slightly during charging. If they feel excessively hot then please check for a current overload or battery short circuit.

Problem 6: Unable to charge car.

- Making sure that the battery wires are connected properly. Check that
 the connections on the battery terminals are firmly in place, with the red
 wire in the red terminal and respectively for the black wire.
- Ensure that the charger is properly inserted into place
- During charging, make sure the charger is plugged into the power outlet correctly. The charger may feel slightly warm while charging.

If the battery, car body wiring, charger or motor is still not working correctly. Please contact the agent or manufacturer for further assistance.

To avoid fuse cut off the power:

- 1. Max: 30kgs, overload is forbidden
- 2. Do not drag any item behind this product.
- 3. Do not allow water or other liquids dip the electrical parts.
- 4. Do not change the line system by yourself.

■ BATTERY DISPOSAL

Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.

- · Do not dispose of lead-acid battery in a fire. The battery will explode.
- Do not dispose of lead-acid battery in your regular household trash.
 The incineration land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.
- Contact your local waste management officials for information on how to environmentally recycle & dispose of lead-acid batteries.





DASHBOARD FEATURES & FUNCTIONS



- 1) MP3 interface
- 2) Volume adjustment
- 3) Key Ignition insert the key to start car
- 4) Power display
- 5) Socket
- 6) Low/High speed
- 7) Manual/Remote control
- 8) Forward/Backward switch

A & B) Horn & Music Button



Attach the MP3 lead to your device to play your music through the car speakers.

■ HOW TO USE REMOTE CONTROL



Keep remote control away from children as it is for parental use only.

- 1. Remove battery cover screw, open the battery cover.
- 2. Insert 3 AA 1.5V batteries into remote control, with correct polarity 3. Close cover shut
- Remote control must be handled and operated by adults only.
- · Non-rechargeable batteries are not to be recharged.
- · Different batteries (new & used) batteries are not to be mixed
- · Exhausted batteries are to be replaced from the toy.
- · Remove rechargeable batteries from the toy before charging

Implementation of national standards: EN71, EN62115, CE, ROHS All Mercedes-Benz names, logos and the design of the enclosed products are subject to intellectual property owned by Daimler AG. They are used under license by Jiaxing Dongma Baby Carrier Co. Ltd Licensee: Jiaxing Dongma Baby Carrier Co. Ltd

■ WARNING AND HAZARDS

WARNING: Vehicle must be charged fully before use.

Failure to do so voids warranty.

Warning: Not to be used in traffic

Adult assembly required.

Always wear a helmet and protective clothing when riding. Continuous adult supervision required when using this product.

Charging the battery can only be done by adult at all times. Please keep the manual and packaging for future reference as it contains important information.

The instructions for use should bear a reminder that the toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

■ SAFETY PRECAUTIONS

· While riding, adult supervision is required all the time.

Always wear a helmet when driving.

- · Do not drive near streets, roads or on sidewalks and footpaths. It is not recommended to drive the vehicle on wet surfaces or on slopes greater than 15-degree.
- · It is recommended to drive this vehicle on smooth surface only, not meant for offroad or rough terrain.

Do not drive this vehicle outdoors when it is raining.

- · Make sure that the vehicle stop completely before changing direction from forward to reverse.
- · Clean the vehicle with a dry cloth only.

Please follow the correct weight and age limits allowed to drive this vehicle

- It is prohibited to change the circuit or add other electric parts. Adults must teach their children about safe driving procedures. Turn the power off when not in use.
- · Check the seat to ensure it has been fitted and secured with a bolt before driving.
- · Inspect all wires and connections of the vehicle periodically.
- · Charging the battery should only be done by adults.
- · Charging plug is located underneath the seat.
- · Don't let children touch the wheels or be near them when the car is in motion

Please read manual carefully before use.

These are recommended guidelines to follow for the rider to have a positive ride experience. Failure to abide by the above guidelines may cause harm and injury to the liability of the buyer and cause the issued warranty to the buyer to be void.

Warranty period is 90 days from the date of purchase.

Proof of purchase must be given for goods to be returned, repaired or replaced.









