


Product Install Guide

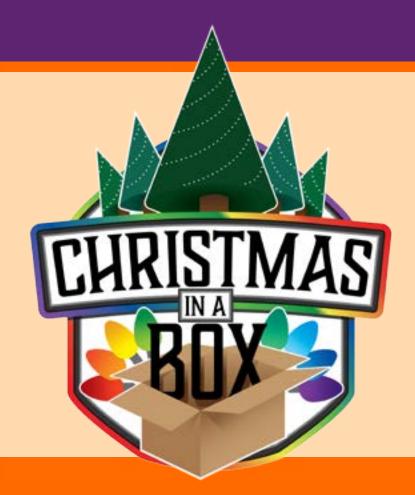

Christmas In A Box



LIGHTING HARDWARE SETUP EQUIPMENT DAMAGE WARNING

During the setup of your lighting hardware, it is critical to ensure that you **DO NOT** cross-wire between silver, green-stickered network ports and black, blue-stickered network ports.

Green-stickered ports **CAN ONLY** wire to other green-stickered ports.

Blue-stickered ports **CAN ONLY** wire to other blue-stickered ports.

Failure to do so **WILL** result in damage to the network ports and void the warranty included with your CORE Show Player product.



Installation Guide

1. Organize your Light Strings

Lay out all the light strings you plan on using in your display. Organize them in up to 16 different groups (bushes, roofline, windows, trees, etc.)

2. Install Your Light Strings

Moving from left-to-right through your display, start installing your groups of light strings in the desired locations.



3. Plug Lights into Controller

Plug the numbered cords coming out of the controller into your groups.

Following your install path, plug #1 would connect to the farthest left group. Plug #2 would connect to the next group moving right.

Continue on in this fashion until all of your groups are connected to the controller.



4. Connect Network Cable(s)

Connect a network cable from the black adapter mounted to the side wall in the small enclosure to either input on the 16-channel controller located in the larger enclosure.





5. Connect Audio

Connect an 1/8" audio plug from the headphone output on the white device inside the smaller controller box to your audio playback device.



6. Plug Controller In

Plug in the power cord from the controller box to a wall outlet or adequately rated extension cord.

Wait 90 seconds for your device to initialize. It will start automatically after the 90 second delay.