



Helida CP-UV2000 Quick Start Guide

<http://www.fleetwooddp.com>

How to manually program a simplex channel

Step 1. Press [A/B] and choose the A Side (upper display) as MAIN.

Step 2. Press [FR/CH] until you enter Frequency Mode.
The radio should be in Frequency (VFO) Mode to program all settings to the channel.

Step 3. Enter the frequency.
Use the keypad to enter the frequency into the radio.

Step 4. Assign the frequency to a channel.
[MENU] 31 MEM-CH [MENU] [Choose Memory Slot] [MENU] [EXIT]
If the Channel number is displayed in RED, it is already assigned. Choose another channel. If the channel number is BLUE, the channel is available.

How to manually program a repeater channel

Step 1. Press [A/B] and choose the A Side (upper display) as MAIN.

Step 2. Press [VFO/MR] until you enter Frequency Mode.
Like the simplex channels, the radio should be in Frequency (VFO) Mode to program all settings to the channel.

Step 3. Enter the repeater TX frequency, the frequency the radio will RX on.
Use the keypad to enter the frequency into the radio.

Step 4. Optional - Enter the transmit CTCSS.
[MENU] 16 T-CTCS [MENU] [Select Code] [MENU] [EXIT]
Use the [Arrow Up/Down] keys to choose the codes from the menu.

Step 5. Set the repeater Input (Radio TX frequency)
Press [MENU] 44 TX-FREQ [MENU] [enter the TX frequency for the radio] [MENU] [EXIT]

Step 6. Assign the frequency to a channel.
[MENU] 31 MEM-CH [MENU] [Choose Memory Slot] [MENU] [EXIT]
If the Channel number is displayed in RED, it is already assigned. Choose another channel. If the channel number is BLUE, the channel is available.