



NOTES:

1. SPUD AND REMOVE ALL GRAVEL PRIOR TO REPAIRS AND RENOVATIONS.
2. REMOVE EXPANSION JOINT COVER, REPAIR VAPOR BARRIER AND INSULATION AS NEEDED.
3. INSTALL PRO-TACK, AND INSTALL EXPANSION JOINT COVER.
4. FLASHING REQUIREMENTS TYPICAL FOR BOTH SIDES OF EXPANSION JOINT.

EXPANSION JOINT WITH PRE-MANUFACTURED COVER

ARM-4

NOT DRAWN TO SCALE