



SKU: CP-EXML600-GATE

External Magnetic Lock

Installation guide

Mount the armature plate on the door/gate using the rubber washer. The rubber washer and steel washer are installed between the armature plate and door, using the sex-nut bolt.

IMPORTANT

Typical installation

Do not install the armature plate too tightly, which ensures he washer remains flexible - in order for the armature plate to properly connect with the magnet



Dimensions



IN2 Access & Control Ltd. Unit 6A Mile Oak, Maesbury Road Industrial Estate, Oswestry, Shropshire, SY10 8GA, UK Web: www.in2access.co.uk | Email: technical@in2access.co.uk | Monday to Friday 08:30 – 17:00





SKU: CP-EXML600-GATE

External Magnetic Lock

Power input 12VDC or 24VDC

Lock Status Sensor

- 1. Normally Open switch: NO
- 2. Normally Closed switch: NC

IMPORTANT

Handle the equipment with care, damaging the surface of the magnet or armature plate may reduce locking efficiency

The magnet is mounted rigidly to the frame, whereas the armature plate must be mounted to the plate using the items provided to allow it to pivot about its centre. This allows it to compensate for wear and misalignment

12V Wiring diagram





B: 24VDC Input:

- Required power 0.5Amp (minimum)
- Connect the positive (+) lead from a 24VDC power source to +
- Connect the ground (-) lead from a 24VDC power source to -

C: Contacts:

- Relay voltage free contacts are rated 1A at 24VDC for safe operation, do not exceed this
- If you require a normally open switch, connect the wires from the system to COM and NO
- If you require a normally closed switch, connect the wires from the system to COM and NC

Wiring the back-EMF protection diode



• Connect the back-EMF Diode in reverse polarity with respect to the magnetic lock polarity

Brown NC

Green NO

• The end with the Silver (grey) ring connects the (+)ve of the magnetic lock

IN2 Access & Control Ltd. Unit 6A Mile Oak, Maesbury Road Industrial Estate, Oswestry, Shropshire, SY10 8GA, UK Web: www.in2access.co.uk | Email: technical@in2access.co.uk | Monday to Friday 08:30 – 17:00