


ALARM CLOCK/DESK PEN SET INSTRUCTIONS

ALARM ON (UP), ALARM OFF (DOWN)

TIME ADJUSTMENT KNOB
ALARM TIME ADJUSTMENT
BATTERY HATCH

TO REPLACE BATTERY PRY OPEN THE BATTERY HATCH
FROM THE BOTTOM USING KEY OR SIMILAR OBJECT.

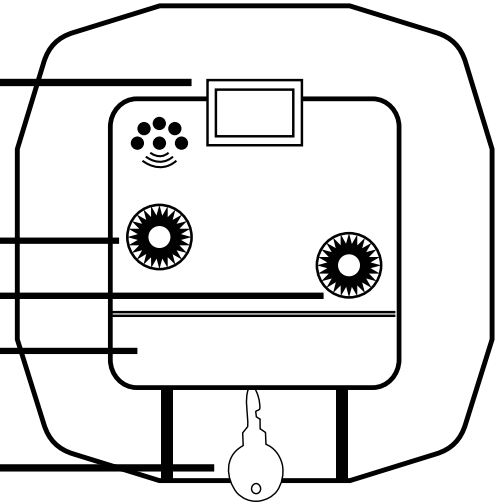

ONE "AA" BATTERY REQUIRED