

Rollocam


ROLLOCAM H-2

Instruction Manual


IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY

SMARTPHONE GUIDE REV 2.9

DEVICE COMPONENTS

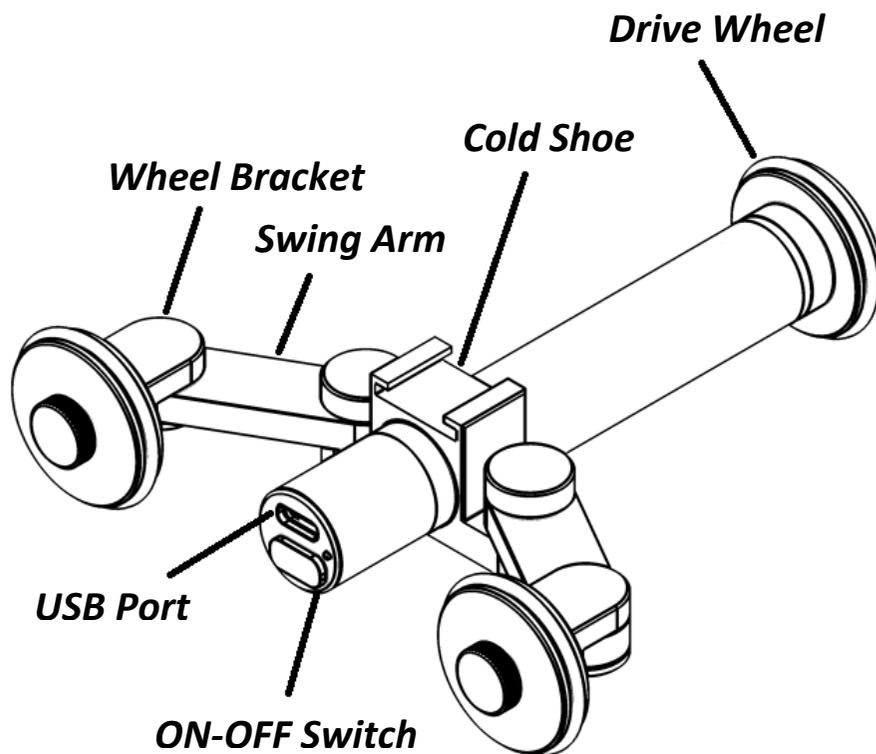


CHARGE BATTERY

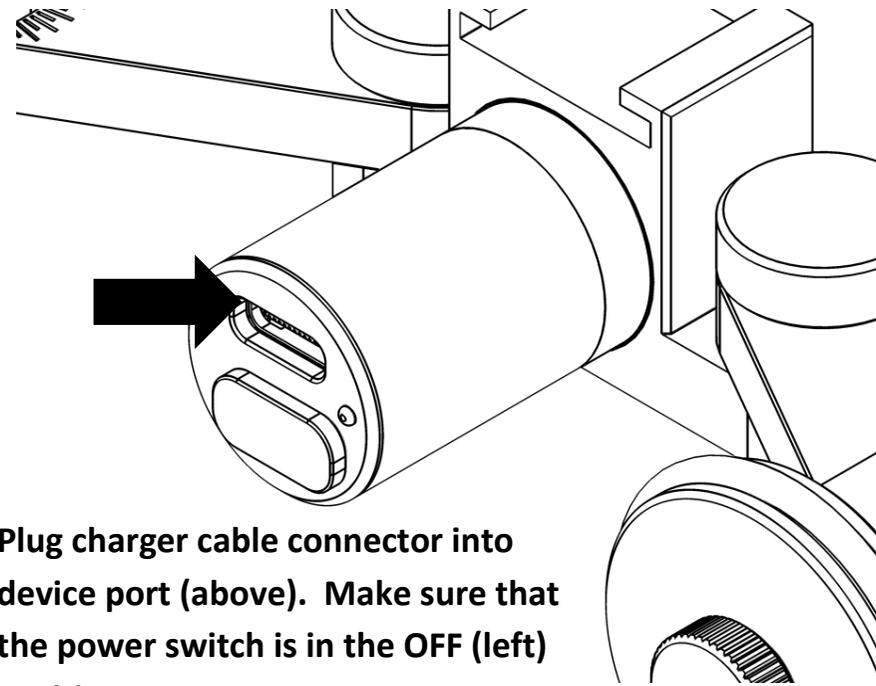


Plug charger cable connector into device port (above). Make sure that the power switch is in the OFF (left) position.

To check the status of battery through the app, you must unplug the charging cable.


SETUP DEVICE

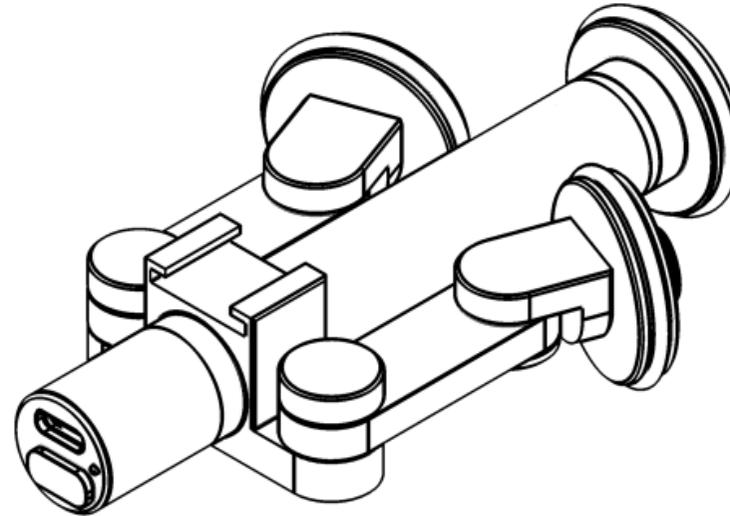

FOLD POSITION

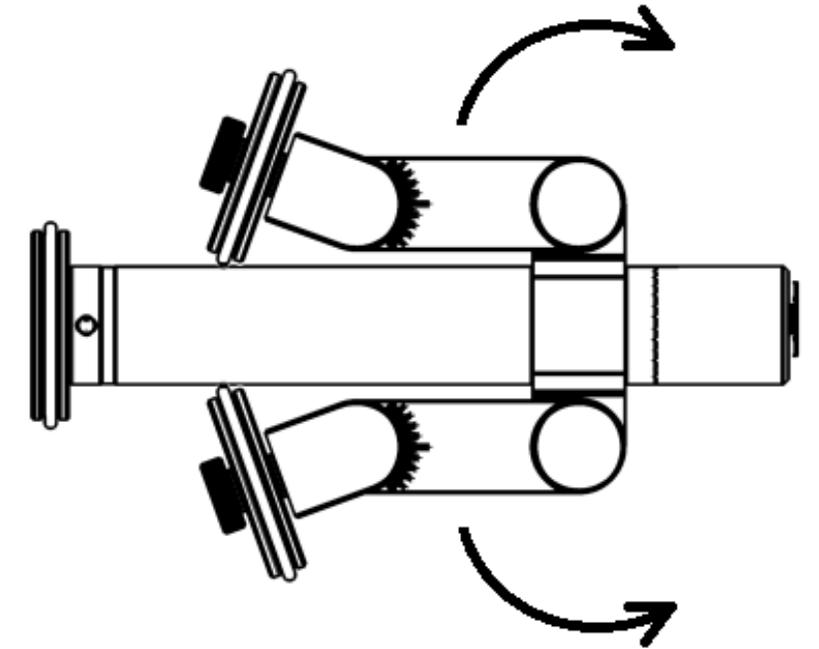


Manually unfold both swing arms outward until they reach stop.

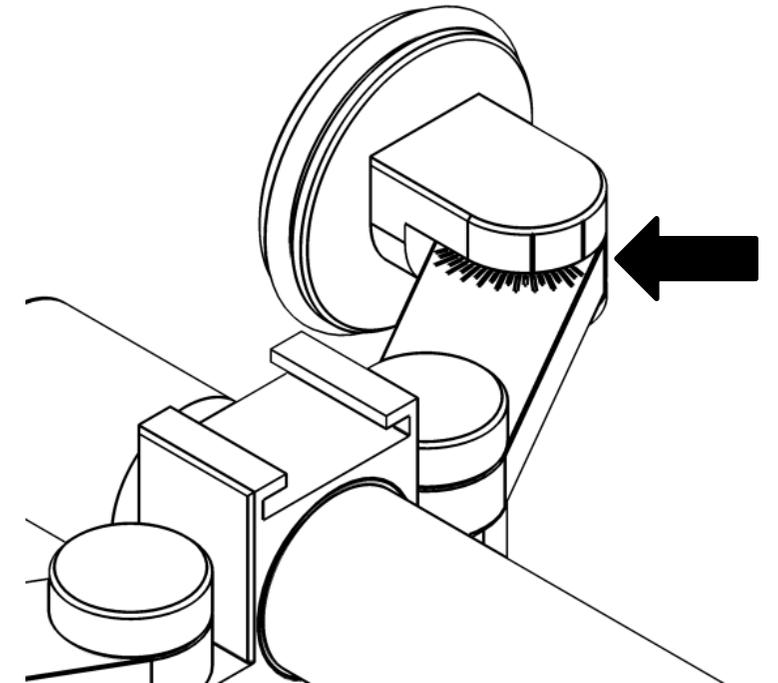


Use the reference lines on the wheel bracket and the swing arms to position the wheels. Some later models have markings on the bottom side of the swing arms.


THE THREE MAIN CONFIGURATIONS ARE:

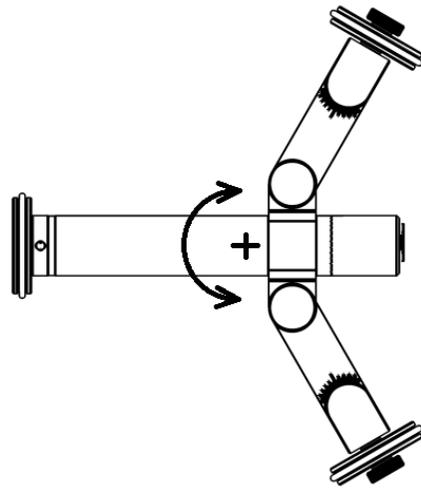

1. ROTATE IN PLACE

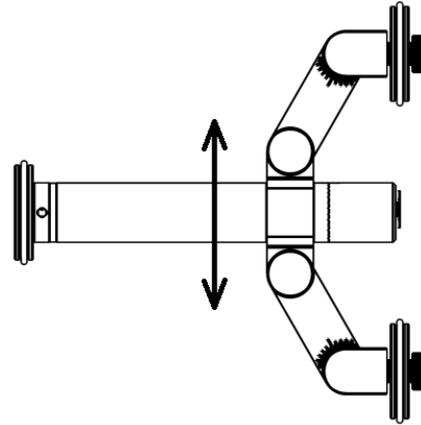


2. SLIDER MOVE

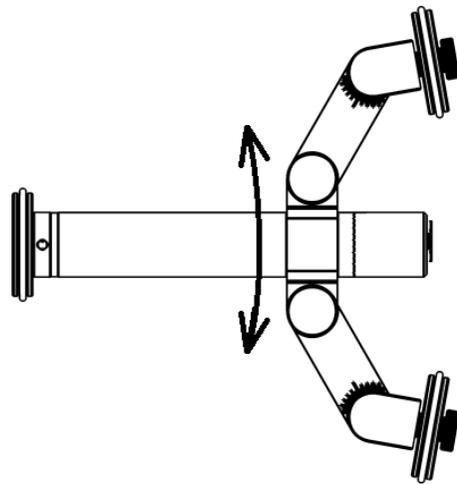


3. CURVE MOVE

INSTALL BALL HEAD

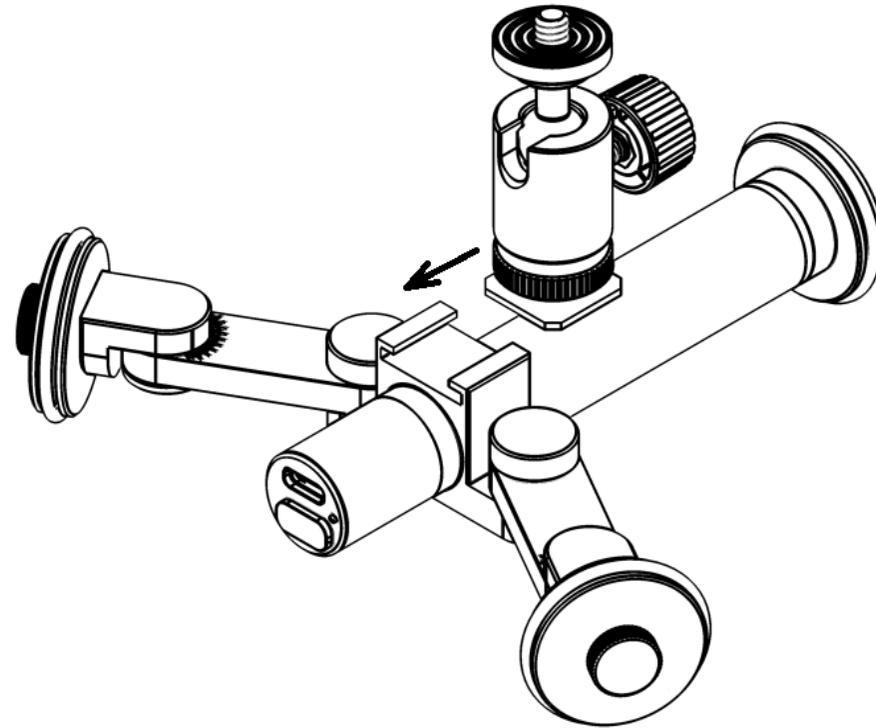


Slide the base of the ball head in the cold shoe.

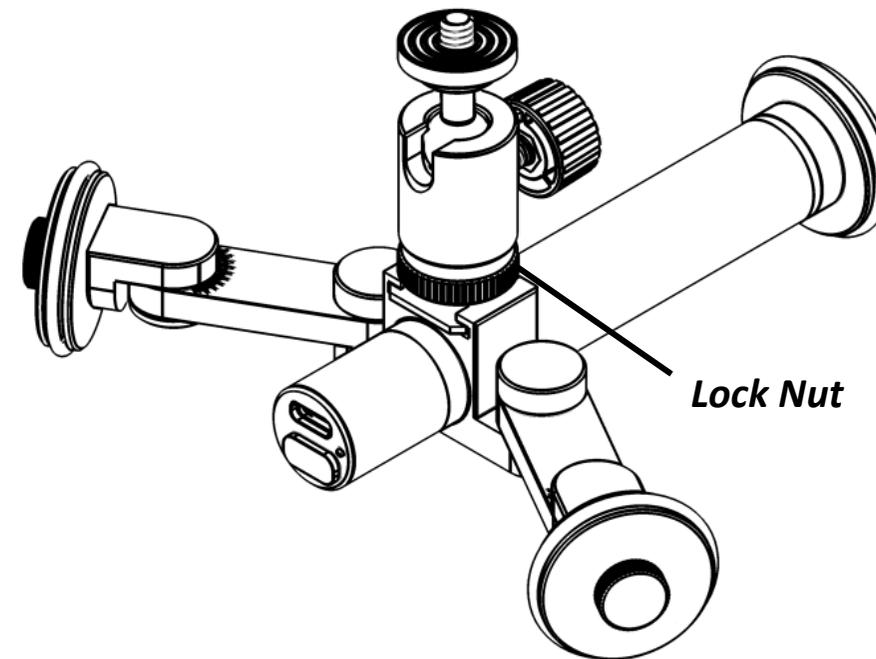


Tighten lock nut to secure the ball head.

ATTACH PHONE

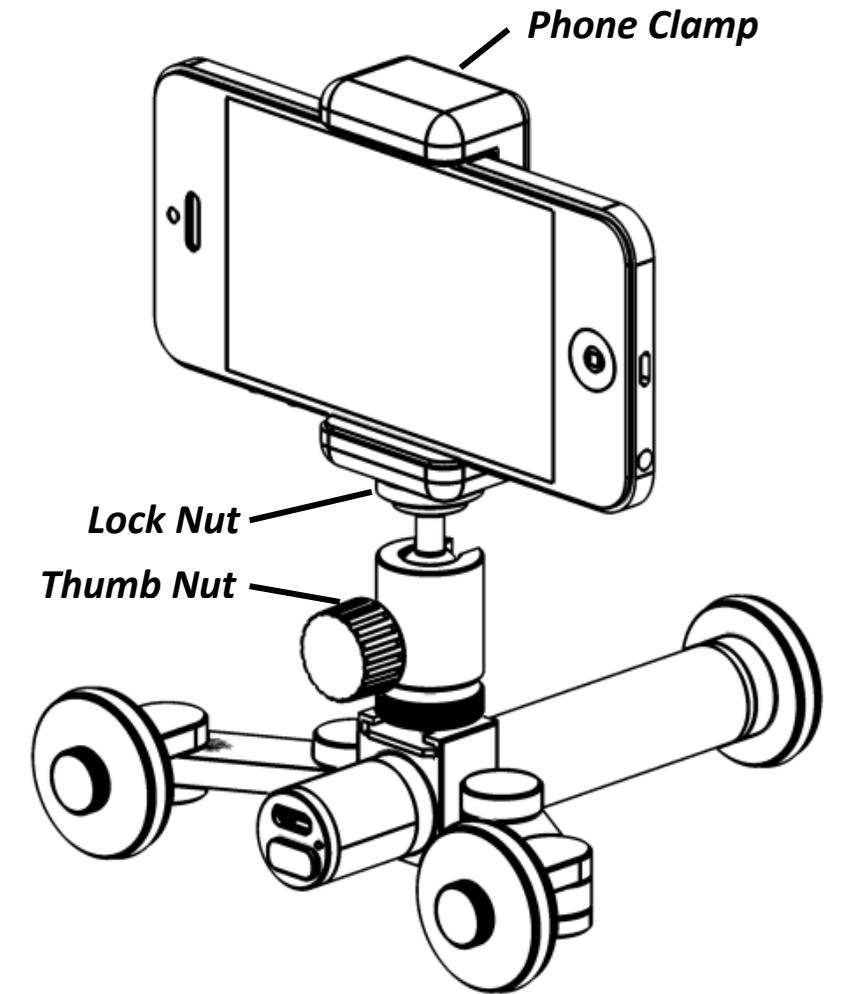

1. Attach the phone onto the phone clamp. Ensure that the phone is in the correct orientation with the start button on the right side.
2. Twist the $\frac{1}{4}$ -20 screw of the ball head into the phone clamp.
3. Tighten the lock nut to secure the phone clamp in place.
4. Loosen the thumbnut to point the phone to a desired position then tighten the thumbnut.

POWER ON-OFF DEVICE

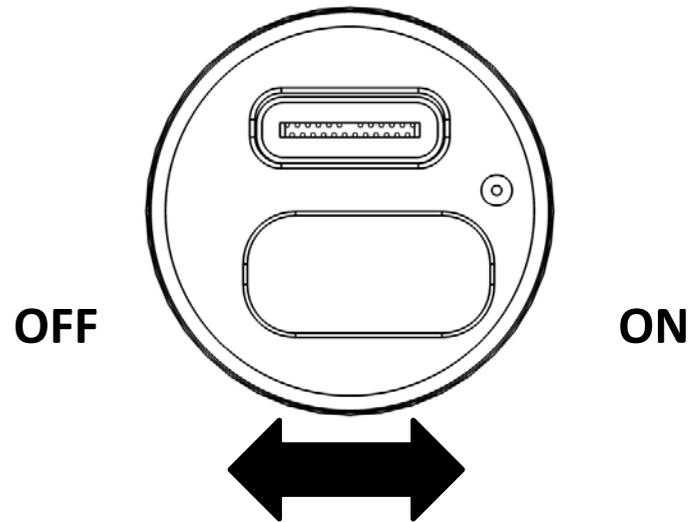


**The device turns itself off after 10 minutes of idle. You must reset the device by turning power OFF and ON again to restart.*

PAIR DEVICE TO APP

1. Download Rollocam app for iPhone with iOS version 9 or higher or Android OS version 6 or higher.
2. Turn on device & then open Rollocam app
3. Turn on Bluetooth of phone
4. Wireless symbol on top right of screen should turn green when device is paired.

**If wireless symbol on the app does not turn green, restart the device and smartphone and repeat the pairing procedure. If the wireless symbol still does not turn green after the restart process, then charge the device for about 30 minutes and repeat the pairing process again.*

PHONE APP QUICK GUIDE

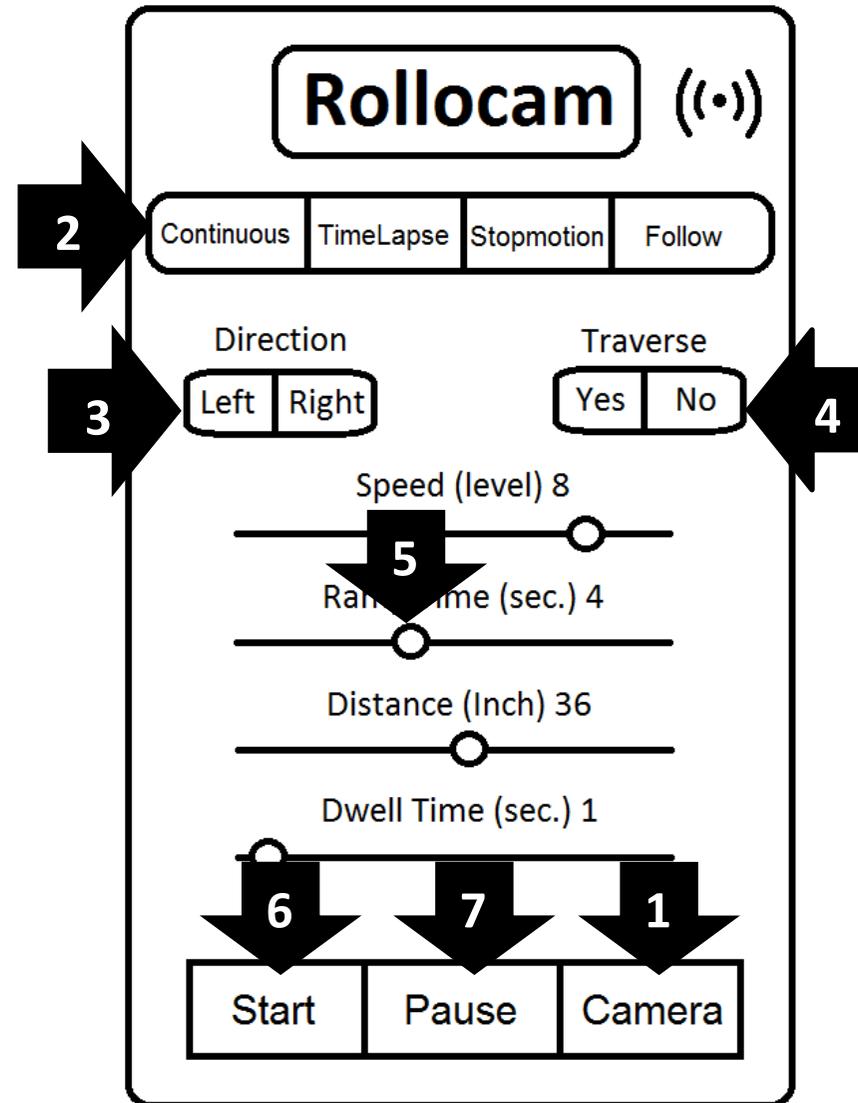

Basic Operation

1. The app default on PHONE mode
2. Select operating MODE
3. Select DIRECTION
4. Select TRAVERSE if want to move back and forth continuously
5. Change parameter values by sliding the corresponding bars
6. Press START to run
7. Press PAUSE to pause during move

8. Press RESUME (shown after PAUSE is pressed) to start move after pause
9. Press STOP (shown after START is pressed) to stop program

**The example menu is in portrait to show all parameters. During operation the menu will be in landscape so you must scroll up and down to view all parameters.*

CONTINUOUS MODE SETTINGS

1. SPEED – level 1 to 10
2. RAMP TIME – (1 to 10 seconds) time to ramp up to full speed from stop or ramp down to stop from full speed
3. DISTANCE – (1 to 254 inches) distance travel (0 or 255 is to travel with no limit).
4. TRAVERSE – roll to the input distance and then continue in the opposite direction indefinitely
5. DWELL TIME – (0 to 60 seconds) stop time between traverse moves

**When START is pressed the phone will automatically start recording the video until PAUSE or STOP is pressed. The saved video is stored in camera roll of the phone.*

TIME LAPSE MODE SETTINGS

Same as CONTINUOUS mode plus:

1. **INDEX DISTANCE** – (0.01 TO 1.0 inch) incremental move distance
2. **INTERVAL** – (1 to 10000 sec.) time between moves
3. **TRIGGER DELAY** – (0 to 255 sec.) instead of triggering the camera shutter immediately after an index move, you can delay the trigger to allow the camera to stabilize

NOTE: If device does not trigger phone camera, make sure the INTERVAL value is longer than camera exposure setting + TRIGGER DELAY value + motor move time. (INTERVAL setting is not the same as camera exposure setting on the camera)


**When START is pressed the phone will automatically start taking pictures until PAUSE or STOP is pressed. The saved pictures are stored in camera roll of the phone.*

STOP MOTION PHOTOGRAPHY


1. **INDEX DISTANCE** – (0.01 TO 1.0 inch) incremental move distance
2. Select **DIRECTION**
3. Press **START** button to index camera

**When START is pressed the phone will automatically takes one picture. The saved picture is stored in camera roll of the phone.*

FOLLOW ME MODE

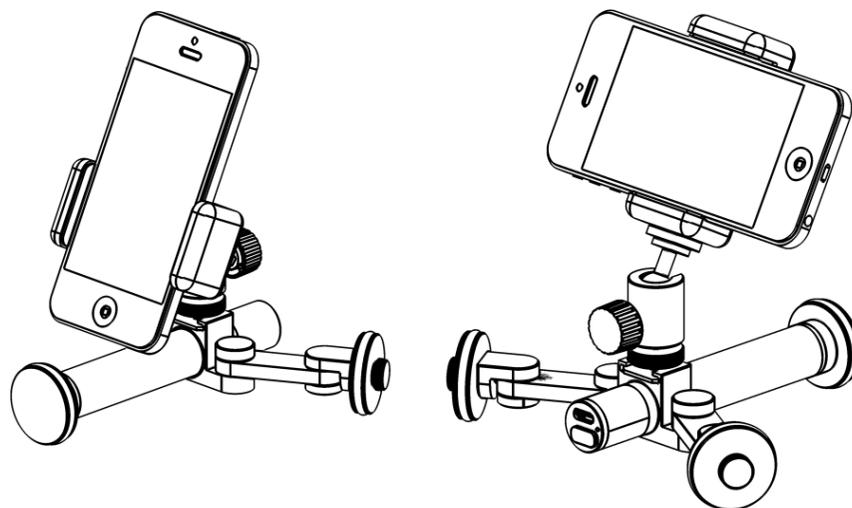

Position the phone either in portrait or landscape as shown above. Adjust the wheels so that the H2 rotates in place. Angle the phone so that your face is framed within the phone preview screen.

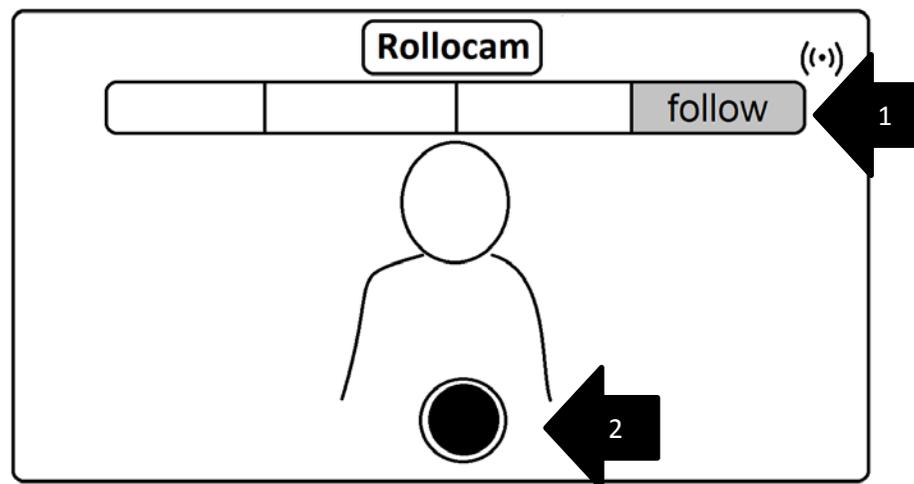

1. Press **FOLLOW** on phone menu
2. Press button to record
3. Press button again to stop recording

NOTE: for best video, use in landscape mode.

WARRANTY & DISCLAIMER

Rollocam products are guaranteed to be free from defects in materials and workmanship when properly used for their intended purpose and in their intended operating environment for six months from the original purchase date. If any product proves to be defective and is covered by the warranty, we will repair or, at our option, replace your Hercules unit without charge. We are not responsible for shipping costs associated with warranty returns. If your Hercules needs service, or if you are not sure and want to see if your Hercules needs to be serviced, please start by contacting our support team at support@rollocam.com. Many issues that seem like they may require a Hercules unit to be repaired or replaced under warranty can actually be solved without sending the unit in. If we need to repair or replace your Hercules under warranty coverage, our support team will provide you with return shipping instructions and work hard to get you a working Hercules as quickly as possible.

NOTE: This warranty is valid if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken motor, or units damaged by excessive heat; (iii) the cost of shipping this product to the Factory Service Center and its return to the owner.

In no event will Rollocam Inc. or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your Rollocam product.