



BUCKSTRUCK CARD READER INSTRUCTION MANUAL

The BUCKSTRUCK Card Reader allows you to **immediately check your Game and Trail Camera videos and images** in the field on most all modern Android devices with OS 4.0+

Step 1:

Insert your SD or MicroSD Card into the Card Reader first. Then plug the card reader into your phone. If the folder to view pictures does not automatically come up, proceed to following steps. If it is working you've completed all the steps necessary!

Step 2:

Please download app "OTG TROUBLESHOOTER" to verify your phone has USB Host Support. It is a free app on Google Play: <http://bit.ly/1Vrrt7A>

"File Manager (file transfer)" app works best to view photos. Connect Buckstruck->"USBDriveA" will pop-up on the app, trail files located in "DCIM" folder. It is a free app on Google Play: <http://bit.ly/1kesVxI>

Step 3:

To **view videos** use app called "MX Player". This is available in the Google play store for free: <http://bit.ly/1dOvYsK>

Step 4:

If you've followed all of the steps above and still are unable to view pictures or videos, restart your phone and then if it still fails please contact us at <http://www.buckstruckoutdoors.com>