

THE ENGRAVED OAK COMPANY

Creating high quality hand crafted gifts with a personal touch.

How to hang your unit

To fit your unit you will need suitable fixings for your wall type. (NOTE THE WALL FIXINGS ARE NOT PROVIDED). The Button Flush Fix Plates are already installed on the back of your unit. Also provided are the Lime Green Button Fix which fit the Button Flush Fix Plate and short screws for marking the wall. Also provided are spacer washers for uneven walls.

(NOTE THAT THE LIME GREEN BUTTON FIX ARE DESIGNED TO TAKE No.10 or 4.5–5mm SCREWS).

Step 1 - Marking the wall

The wall can be marked using the unit with the Lime Green Button Fix and the short screws supplied.

To mark the wall put the short screw into the countersunk side of the Lime Green Button Fix and slide them into the Button Flush Fix Plate on the back of the unit with the pointed end of the screw showing, make sure it clicks into place as per fig.1. Do the same for the other Button Flush Fix Plates.

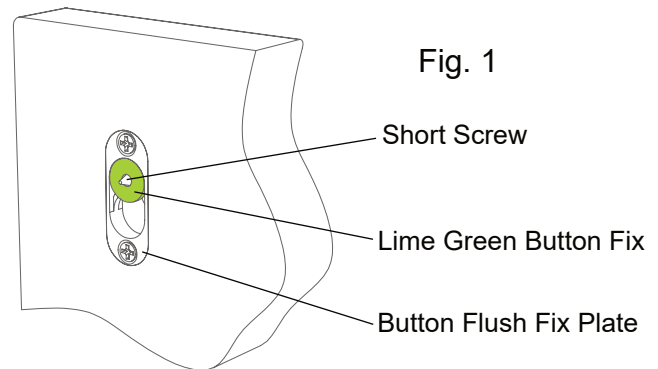


Fig. 1

To mark the wall hold the rack up to the chosen location. Push the rack firmly against the wall so the points of the screws mark the wall. This will give you the fixing points for drilling the wall.

Step 2 - Fitting the green buttons to the wall.

Remove the Lime Green Button Fix from the Button Flush Fix Plates, and remove the short screws. You will need the Lime Green Button Fix but not the short screws. You should keep the short screws if you want to fix the unit in the future.

Using the marks made in step 1, drill and fit suitable raw plugs to take no.10 or 4.5 - 5mm countersunk screws. The raw plug should be suitable to hold the rack and suitable for the wall type. If in any doubt consult a suitable trades person.

The No.10 screw should be fitted into the Lime Green Button Fix and screwed to the wall as per Fig 2.

We have provided spacer washers that can be used in between the Lime Green Button Fix and the wall in the event that the wall is uneven.

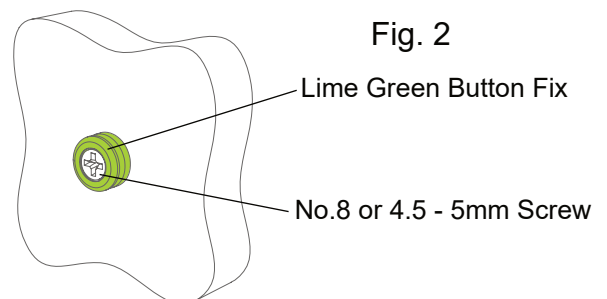


Fig. 2

Step 3 - Fitting the unit to the wall

Lift the unit to the desired location so that the Button Flush Fix Plates locate onto the Lime Green Button Fix, at this point the unit should slide onto the Lime Green Button Fix then push the unit down so that the Lime Green Button Fix lock onto the Button Flush Fix Plates.

Check that the unit will not lift and that it is locked into place.

If you have any further questions or need any specific guidance, please don't hesitate to get in touch with us.