


PB34372


## Jardin Outdoor Clock and Thermometer



Front View

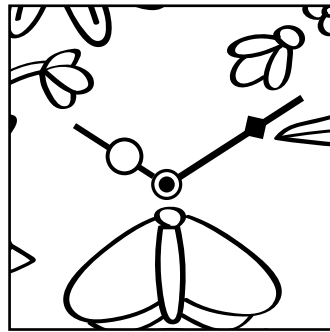


1a. Clock Hands:  
Clock and thermometer  
hands may become  
compressed during shipment.  
Gently bend them into  
correct position, as required.

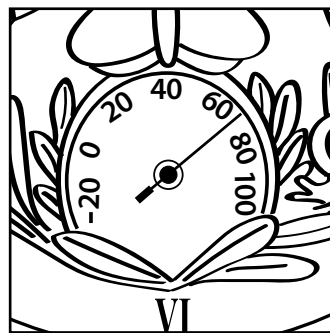


2a. Thermometer Hands

Side View

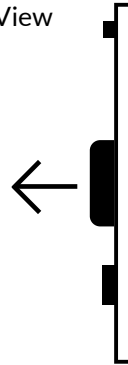


1b. Pull open the black box  
on the back of the clock. It  
may be a tight fit so using a  
flat head screwdriver to pop  
it off could be necessary.

Back


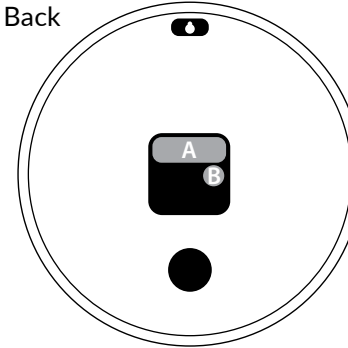


1c. Put an AA battery into  
A area shown above, and  
use wheel B shown above to  
adjust the time.

Back

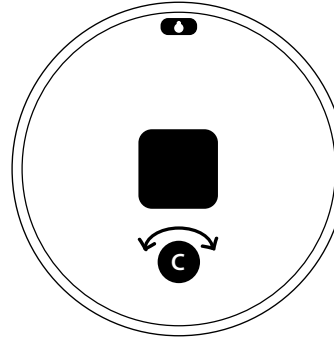

2b. Using the black knob area C,  
tune thermometer to your actual  
outdoor temperature.

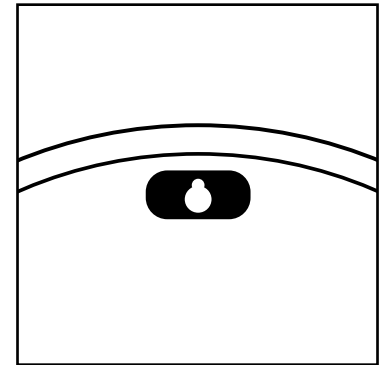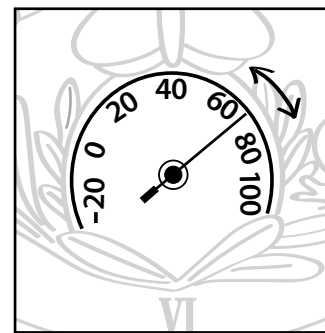

3. After adjusting both clock  
and thermometer, you can  
hang the item using the hole  
at the top center of the back  
of the clock.