



## Vanguard Security Door Installation Instructions

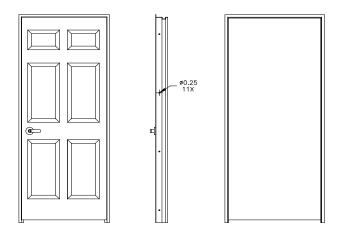

**Tools Needed:** Tape Measure, Level, Drill, 1/8" Drill Bit, Phillips Head Drive, 1 1/8" Hole Saw, Wood Chisel

1. The rough opening height must be a minimum 80.5" and the rough opening width must be a minimum 37.5".

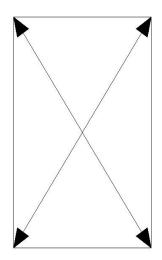

- 2. Using a tape measure, check the rough opening. Measure diagonally across the opening. Diagonal measurements need to be equal within <sup>1</sup>/<sub>4</sub>".
- 3. Move door and frame into location near rough opening. (Keep support under door until door and frame are completely placed in rough opening.)
- 4. Open door while in frame. (Lift door from the bottom as necessary to prevent pins from binding.
- 5. Support the tornado door in open position until frame is completely plumed and secure.
- 6. Make sure that the doorframe is tight against the wall.
- 7. Square and plum the hinge side of the doorframe using solid wood shims.
- 8. Once the door and frame are square and plum, drill 1/8" holes corresponding with (7) 1/4" holes on hinge side of frame.
- 9. Use #14 -3" counter sink head wood screws to secure hinge side of frame.
- 10. Finish shimming the other side of the frame using solid wood shims, drill 1/8" holes corresponding with (4) 1/4" holes on locking side of frame and anchor with #14 -3" counter sink head wood screws. (Total of eleven wood screws in frame.)
- 11. Recheck the hinge side of the frame to make sure that it is still square and plum. (Adjust as needed).
- 12. Remove threshold.
- 13. Remove support from under door.
- 14. Using the six slotted holes in the frame as a guide use a 11/8" hole saw and drill two holes 1 ½" deep into the wood buck. (Use the diagram below for reference.)



- 15. Use a wood chisel to clean/break out the wood in the hole..
- 16. Place trim in place as needed.
- Keys to biometric lock need to be placed in a safe secure place.
- "IMPORTANT, RECORD YOUR SERIAL NUMBER" located on the inside top left corner of your security door and store in a safe place for future reference otherwise your lock warranty in void.