



# User's Manual for Fireproof Biometric Safe

 
 
Read all instructions before using this safe.

## WARNING

- Under Factory Default mode, the safe can be opened by any fingerprint. For security purposes, please register your own fingerprint immediately before you start to use the safe.
- Register at least two different fingerprints and test a few times before closing the safe door.
- Test with a non-registered fingerprint. If the safe opens, the safe is still in Factory Default mode.
- Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and the contents.
- Body of safe consists of two steel plates filled with a fire-retardant material.
- Do NOT store combustible materials in this unit.
- In the event of fire, we recommend caution when opening the safe. If you feel unsure about opening the safe because of the contents stored, contact your local fire department for assistance.
- Test the Emergency Keys and store them in a secure place; NOT inside of the safe.
- Test and make sure the safe works properly before mounting.
- Mount the safe before use, the safe may tip forward if not properly mounted.
- Keep children away from safe; they should not play with or around the safe at any time. Children at play could accidentally get locked inside the safe or accidentally pull on the safe door causing safe to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death.

NOTE: BARSKA is not responsible for any damage or lost contents in the safe due to moisture.

NOTE: BARSKA is not responsible if the safe or its contents gets lost or stolen.

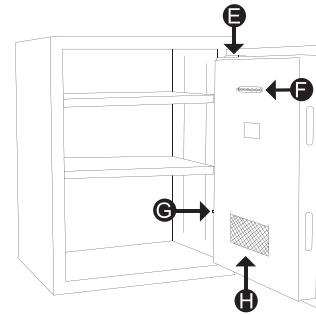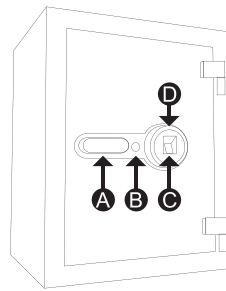

\* Actual Model May Vary

### Parts

- |                                      |                          |
|--------------------------------------|--------------------------|
| A. Handle                            | E. Battery Compartment   |
| B. Emergency Lock Cover & Key Access | F. Key Hook              |
| C. Fingerprint Scanner               | G. Initialization Button |
| D. Indicator Lights                  | H. Net Pocket            |

### Getting Started

 
1. Remove Emergency Keys from accessory package.
2. To expose the Emergency Key access, remove Emergency Lock cover (B).
3. Insert the Emergency Key and turn counter clockwise.
4. Turn the handle (A) clockwise to open the door.

NOTE: Once operation is finished, please pull out the Emergency Key and keep it in a safe place; NOT inside of the safe.

### Install Batteries

1. With the door open, remove the battery cover (E) on side of door by sliding the cover.
2. Insert 4 AA batteries by lining them up in a manner as indicated by the "+" and "-" signs.
3. Put the arrow of the battery cover align to the arrow on the compartment, slide the batteries cover back into place. Restore the battery compartment cover.

NOTE: DO NOT use any other type of non-alkaline battery. DO NOT mix new and old batteries. DO NOT mix alkaline and non-alkaline batteries.

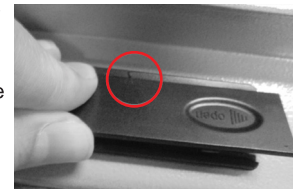

### Fingerprint Registration

This biometric lock can register up to 100 fingerprints.

1. With safe door open, press and release initialization button (located inside the safe). The lock will beep with the blue light flashing. (If you don't take any action after press the

- initialization button, the blue light will disappear after 10 seconds.)
2. For the first time, place desired finger on fingerprint scanner and the lock will beep one time followed by blue light flashing. Release the finger from the scanner.
  3. Use the same finger and repeat another two times to complete the registration. (Make sure that your finger is flatly placed at the center of fingerprint scanner for better identification). When you scan the finger every time, the blue light will flash once.

### Successful Registration

2 beeps will be heard and 2 blue flashes will be seen.

### Unsuccessful Registration

4 quick beeps will be heard along with red flash.

NOTE: before you register the finger, please make sure that the desired finger is clean without the dust. If your hands are too dry, it will also affect the registration results. Please use some hand cream or lotion to moisturize your hands first.

### Test Registered Fingerprint

1. With safe door open, turn knob to lock position extending the bolts out.
2. Touch fingerprint scanner to wake up the safe and place registered fingerprint on the scanner. If the blue light flash 2 times along with 2 beeps, the safe can be unlocked and the registration was successful. If several beeps are heard and red flash is seen, then the registration was unsuccessful. Follow the steps under Fingerprint Registration to register your desired fingerprint.

### Close/ Open Safe Door

#### Open Safe Door with Fingerprint

Touch fingerprint scanner to wake up the safe and place registered fingerprint on the scanner. The blue light will flash 2 times along with 2 beeps. Turn handle clockwise to unlock the safe.

#### Close Safe Door

Close door and turn handle counter-clockwise to lock position.

NOTE: if the door has not been closed within 3 minutes, there will be a beep heard each second to remind you closing the safe door for protecting belongings.

### Lock Out Mode

If 3 wrong fingerprints are scanned consecutively, the fingerprint scanner will shut down for 15 seconds; and if another 3 wrong fingerprints are scanned consecutively, the fingerprint scanner will shut down for 5 mins, and if another 3 wrong fingerprints are scanned consecutively again, the fingerprint scanner will shut down for 15 mins. During this shut down period, the fingerprint scanner will not accept any fingerprint.

## Sound Options

### Sound Off

With safe door open, place your registered finger on the fingerprint scanner. After the fingerprint is confirmed successfully (2 blue light flashes along with 2 beeps), put and hold the same finger for another 5 seconds. The blue light will flash 2 times and then the sound is off.

### Sound On

Using the same operation as above, then you can turn on the sound.

## Reset to Factory Default Mode

Press the initialization button consecutively for at least 5 seconds. Then, the blue light will flash 3 times. Under this operation, all registered fingerprints will be cancelled and the safe will return to the factory default mode.

Under Factory Default mode, the safe can be opened by any fingerprint.

## Low Battery Warning

When the system power is low, the red light will flash to remind you to replace the batteries as soon as possible.

If the power supply is insufficient, please use override key to open the safe & replace the batteries.

## Mounting Instructions

The safe must be mounted to a wall. Be aware of the load bearing. Failure to do so can result in personal injury and/ or damage to property. Use appropriate tools when performing work and always use eye protection.

### Floor Mounting:

In order to mount the safe on the floor, please remove the feet at the bottom first.

- Use proper drill tools depending on the type of floor you are mounting the safe(wood, tile, or concrete)
- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

## Care and Maintenance

- To maximize the security and performance of the safe, keep keypad clean; use a dry cloth to remove any smudges after each use.
- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service
- DO NOT use chemicals or cleaning agents to clean the safe.



## 1 YEAR LIMITED WARRANTY

### SAFES

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email [info@barska.com](mailto:info@barska.com) or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS  
Repair Department  
855 Towne Center Drive  
Pomona, CA 91767

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.
4. A Check/Money Order of cover inspection, shipping and handling. Charges are as follows:
  - Small Fireproof Biometric Safe = \$60.00
  - Standard Fireproof Biometric Safe = \$75.00
  - Large Fireproof Biometric Safe = \$85.00

\*Please allow 6-8 weeks for delivery.

BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period. Purchaser is required to remit above charges to BARSKA for return shipping and handling at time product is returned.

If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA warranties.