

SAFE MANUAL

Basic Operating Instructions

Upon first using the safe, turn the black power switch located on the inside of the door next to the hinge to the on position

LOCKING THE SAFE WITH A CODE

- 1) Enter any 4-digit code into the safe keypad and press the “Lock” button.
- 2) The safe’s display will read “CLOSE” and the safe will lock.
- 3) To open, enter the same code.
- 4) The safe’s display will read “OPEN” and the safe will unlock.
- 5) The safe’s memory will clear and the user may now lock the safe with a different code.

RESET SAFES TO FACTORY SETTINGS

ON THE KEYPAD OF THE SAFE

Press “Clear” twice, PROG will show on the LED

Input 964117, Press “Lock” “RESET” will show on the LED

The safe is now reset to the factory settings including the 0000 for the CEU.

USING THE MANUAL KEY

- 1) Remove the silver plaque from the front of the safe using an allen wrench.
- 2) Insert the key and turn clockwise to open the safe.
- 3) With the safe in the unlocked position and the key still inserted enter 1,2,3,4 on the keypad and press the lock button. The key will rotate back into the locked position. You will need to help the key rotate back to avoid getting stuck.
- 4) In the locked position remove the key and enter 1,2,3,4 to bring the safe to the unlocked position and remove the key.

Setting the date & time is the last step in programming the safes. All other programming must be done before setting the time on the safes

- 1) With the safe door unlocked, press the “Clear” button twice. **PROG** will appear on screen.
- 2) Input **055261** and press “Lock”. The word **DATE** will appear followed by a series of numbers representing the date.
- 3) The date will now appear in yy/mm/dd format. Change the date by entering the new date in the same format and press “Lock”.
- 4) The time will appear in hh/mm/ss format. Change the time by entering the new time in the same format and press “Lock”. The word **GOOD** will appear.
- 5) The new date and time have now been set.

BATTERY USE

The batteries will last between 12-18 months with normal use. Each safe operates on 4 AA alkaline batteries. If the batteries begin to run low, the message **BATT-L** will appear on the screen. At this point, you should change the batteries in the safe.

IT IS THE OWNER OF THE SAFES RESPONSIBILITY TO MAKE SURE THAT THE SAFES ARE PROPERLY INSTALLED AND SECURELY BOLTED TO THE INSTALLATION SURFACE SO AS NOT TO CAUSE HARM OR INJURY TO ANYONE

IT IS THE OWNER OF THE SAFES RESPONSIBILITY TO KEEP TRACK OF THE KEY NUMBER OF THE SAFES. YOU WILL FIND THE KEY NUMBER ON THE CARTON OF THE SAFE