


# International Eurovalut Installation Instructions



1. Place the Security Installation Platform (SIP) in the final location you would like the safe installed.

2. Next drill anchor holes using a hammer drill and 3/8" bit. Depending on installation surface, different anchoring methods may be used.

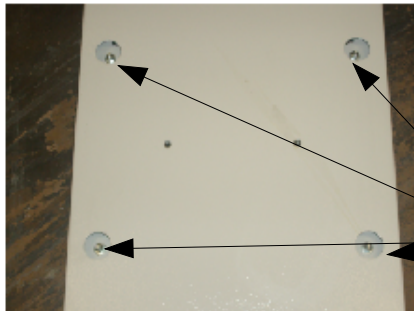

3. Anchor SIP plate to floor with the provided bolts.

Anchor to floor using provided bolts.

4. Place Eurovault on the anchored SIP plate. Safe and SIP plate should line up perfectly with each other. Install safe to the SIP plate with the two provided bolts.



Anchor safe to SIP plate with provided bolts.