

Lock 1 2 3 4 Fingerprint Scanner

Your Electronic Lock is currently set with the default combination of:

1-2-3-4-1-2

### **OPEN:**

**Step 1:** Twist key LEFT (counter-clockwise) to open door

## **INSERT BATTERY:**

**Step 2:** Pinch tabs together and slide out battery compartment

**Step 3:** Insert a 9V battery into battery compartment & slide battery compartment back into place

#### **CHANGE YOUR COMBINATION:**

**Step 4:** Hold down button 1 until green light turns on and lock beeps 2 times

**Step 5:** Enter your current 6 digit combination - lock will beep 2 times

• Factory default is 1-2-3-4-1-2

**Step 6:** Enter your new 6 digit combination - lock will beep 3 times

**Step 7:** Reenter your new 6 digit combination - lock will chime

#### Your new combination is now installed.

\*If lock beeps 5 times, combination was not installed successfully. Restart from Step 4.

**IMPORTANT!** Test your new combination several times with the door open to ensure new combination is properly set before closing and locking safe.

#### **RECORD NEW COMBINATION HERE:**

#### **BIOMETRIC SCANNER:**

 
**Step 8:** Press ONCE (do NOT hold) biometric scanner button - lock will beep 2 times/lock light and finger scanner will illuminate green

**Step 9:** Position finger fully on biometric scanner - hold until lock chimes


### Fingerprint installed successfully.

\*If lock beeps 5 times, lock light flashes red, and fingerprint scanner stays green, fingerprint was not installed successfully. Restart from Step 8.







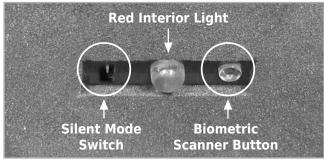

#### **SILENT MODE:**

Use switch next to interior light to turn silent mode on or off.

#### **BATTERY LIFE:**


If you see a continuous red light on, replace battery

#### **OPERATING INFORMATION:**

- Lock will go into standby after 10 seconds of inactivity
- Lock will freeze for 5 minutes after 5 wrong combination attempts

#### **RESET LOCK:**

- Hold down biometric scanner button until lock beeps 5 times
- Lock will reset to factory combination of 1-2-3-4-1-2 and erase all registered fingerprints

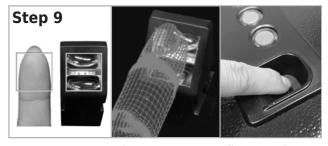

Scanner can register up to 31 fingerprints

# Stealth

# **Handgun Hanger Safe Security Cable Instructions**



**Step 1:** Wrap cable around a secure object and insert lock through the loop on the other end of the cable.



**Step 3:** Twist key to the RIGHT (clockwise) to lock cable in place. Remove key.

Your security cable is now installed.

\*To unhook cable, insert key and twist to the LEFT (counter-clockwise). Remove lock.



# **Power Cable Installation**



To install power cable, simply insert cord into the power cable hole and plug into an outlet.

