

OWNER'S & INSTRUCTION MANUAL

Quick Touch Vault Bed Slide

MODEL: Digital Bed Slide (QTVHSD) Digital + Bio Bed Slider (QTVHSDB)

SURELOCK-SECURITY.COM

ATTENTION



IMPORTANT! READ CAREFULLY, RETAIN FOR FUTURE REFERENCE. MANUAL MUST BE READ BEFORE OPERATING!

NEVER keep backup keys in your safe!

Do not store this document in your safe.

Mount your safe in a secure location.

Store a record of your combination and keys in a safe and secure location away from children.

 Make a record of your serial number on the lock. This is important information for the manufacturer to make duplicate keys, if they're lost.

DO NOT store loaded guns in this unit.

ALWAYS check to make sure the latched is closed. The lid requires a firm press on the top to lock automatically.



Neither seller nor manufacturer shall be liable for unauthorized access, any injury, loss or damage to personal property direct or consequential, arising out of the use of, or the inability to use the safe.

The user shall determine the suitability of the safe before the intended use and user assumes all risk and liability. Our safes are not intended to protect against environmental hazards including fire and water.

Be sure and follow all local and state firearm laws.

DO NOT operate a firearm without proper training and experience.

For any questions, issues, problems, concerns please contact us. Email: service@surelock-security.com



TABLE OF CONTENTS

Attention2
Disclaimers2
Parts & Specs4
Introduction
Battery Installation5
Low Battery Warning5
Opening Safe with the Backup Key6
Programming
Code Resetting6
Registering Fingerprints7
Deleting Fingerprints8
Keypad Sound8
Installation
Safe Installation8
Mounting Instructions9
Care and Maintenance
Troubleshooting
Lifetime Warranty
Safe Information

DANSONS

COPYRIGHT NOTICE

Copyright 2021. All right reserved. No part of this manual may be copied, transmitted, transcribed, stored in a retrieval system, in any form or by any means without expressed written permission of.

DANSONS 3411 North 5th Avenue, Suite 500, Phoenix, AZ, USA 85013 service@surelock-security.com www.surelock-security.com

CUSTOMER CARE USA: (480) 923-9637

PARTS & SPECS



*Features may vary by safe model (QTVHSDB shown)

- 1. Battery Compartment
- 2. Mounting Slots
- 3. Key Hole

ENGLISH

4. Keypad Keys

- 5. Fingerprint Scanner*
- 6. Program Button
- 7. Pistol & Magazine Holder
- 8. Key with Key Number

MODEL	ASSEMBLED (WXDXH)	WEIGHT
QTVHSD/QTVHSDB	11.81x10.07x3.54 IN. 300x256x90 MM.	12.34 LBS / 5.60 KG

BOX CONTENTS

- 1 x Safe & Attached Mounting Plate
- 2 x Backup Keys
- 6 x Mounting Screws
- 1 x Manual

**Batteries Not Included (use new 4 - AAA Batteries)

INTRODUCTION

The Surelock Quicktouch Vault is a biometric fingerprint access, code access, and key access safe. It provides secure storage for valuables such as firearms, ammunition, cash, and other personal items. The safe combines high security with complete quick access control with its solid construction and biometric technology.

Please take time to read and familiarize yourself with the proper operating procedures presented on the following pages.

If you have any questions, problems, or need help configuring the system, please contact us at service@surelock-security.com.

BATTERY INSTALLATION

- 1. Pull down on the tab on the back of the safe to open the battery door.
- Insert 4 AAA fresh alkaline batteries (not included) into the battery compartment. Note: Pay attention to the"+" and"-" signs.
- Install the battery compartment. Once the batteries are inserted correctly you will hear a short beep and see the keys light up once.



LOW BATTERY WARNING

If all keys light up BLUE ten times with ten beeps when you are opening the safe by keypad entry, your battery level is critically low. Replace with four new batteries.

If all key light up RED after you enter the correct PIN code or registered fingerprint, but the drawer does not slide out, your battery is low. Replace with four new batteries.

IMPORTANT: YOUR SAFE WILL AUTOMATICALLY LOCK WHEN YOU FULLY PUSH THE DRAWER. USE NEW AAA ALKALINE BATTERY ONLY.

OPENING SAFE WITH THE BACKUP KEY

Locate the key hole on the bottom of the safe. You can open your safe with a key if there is no power.





NOTE: It's recommended to put store your two keys in two separate locations.

CODE RESETTING

Default Code: 1234

- With the safe open, press and hold down the 'PROGRAM' button, inside the safe and under the fingerprint scanner, for 5 seconds and immediately remove your finger once you hear a beep and all keypad keys light up once.
- Enter your NEW code. (Code must be 3 digits to 8 digits).
- 3. Press the 'PROGRAM' button once and release it. The keypad keys will light up twice with two beeps and now your new code is set.
- Test the code. The door will open if the correct code is entered. You will hear five beeps with lights flash if the wrong code. Repeat above steps if the new code doesn't work.



IMPORTANT

- If 5 incorrect entries are made, the safe will go into alarm mode for 5 minutes with lights flashing and beeping. You can open the safe with the backup key and stop the alarm by removing the batteries.
- 2. Two Pin Code Buttons can not be pressed at the same time.
- 3. Programming a new code will overwrite your previous code.
- 4. If you forget the previous code, simply repeat the above steps to reset a new code.

NOTE: In Step 1, Remove your finger on the Program button immediately once you hear a beep. If you keep holding it down for about 10 seconds, you will hear two beeps and the Pin Code Buttons will light up twice. This will result with all registered fingerprints to be erased.

REGISTERING FINGERPRINTS

- It is highly recommended that users should program a new vault code before registering fingerprints. To increase your success rate of registering a fingerprint, ensure that your hands are clean. Excessive moisture such as lotions or oils will affect your fingerprint and may cause inaccurate sensor readings. If you experience difficulty with a particular finger, try another.
- When registering a fingerprint, adjust your finger slightly between scans for increased accuracy, shown in the illustration below.



To increase your success rate, register several fingerprints. Start by placing a single finger at the center of the scanner and change positions with each scan. This allows the scanner to read where most of the fingerprint detail is located.



If you have any difficulties please contact our Customer Care team for help, advice, and how to videos.

- 1. With the vault open, press and hold the PROGRAM button for five seconds. All keypad keys (1-4) will light up once with one beep and the fingerprint scanner will light up BLUE.
- 2. Register ONE finger on the fingerprint scanner:
 - Place your finger on the center of the fingerprint scanner for the first scan. Wait for a short beep and the scanner will light up BLUE (1-2 seconds after placing finger). Lift your finger off.
 - Place the same finger again over the fingerprint scanner and repeat same process two more times. Adjust your finger slightly between scans for increased accuracy.
 - Once all keypad keys (1-4) light up twice with two short beeps, which confirms that the new fingerprint has been registered successfully.
- 3. Now test the fingerprint: close the door and place your finger on the fingerprint scanner. If you made a mistake and the fingerprint will not work, use the backup keys to open the vault and attempt to register again with a different finger.

IMPORTANT

- If all keys flash green 5 times with 5 beeps, it means registration has failed and you
 must repeat the above steps.
- The safe can hold 20 fingerprints. If the light flashes 5 times with 10 beeps when trying to register your fingerprint, it means the fingerprint storage capacity is full.
- To increase your success rate, please register the same finger multiple times in different positions.

Contact Customer Care if you encounter any problems

DELETING FINGERPRINTS

With the vault open, press and hold the PROGRAM button (for 8-10 seconds) until all the keypad keys (1-4) flash twice with double beeps, then release. All registered fingerprints are now erased.

IMPORTANT: WHEN THE KEYPAD KEYS FLASH ONLY ONCE WITH ONE BEEP, KEEP HOLDING. YOU MUST HOLD THE PROGRAM BUTTON UNTIL THE KEYS FLASH TWICE WITH DOUBLE BEEPS, THEN RELEASE.

KEYPAD SOUND

You can turn off the "BEEP" sound of the keypad by pressing and holding the 1 button for 5 seconds to turn on/off the sound.

SAFE INSTALLATION

CHOOSING A LOCATION FOR YOUR SAFE:

The location of your safe is very important. For optimal safety and security, we recommend installing your safe in a location with a level surface. We also suggest a cool and isolated area, away from combustibles. Due to the fact that heat rises, avoid putting your safe in the upper level of your home. Avoid placement near a furnace or water heater or anywhere that flammable materials are present.

For added protection, we suggest storing the safe in a location that is convenient, but out of sight from others.



MOUNTING INSTRUCTIONS

SIDE MOUNTING WITH PLATE

1. Mount plate to an even vertical surface with the mounting screws. Place the safe onto the bracket.





2. Open the safe and remove the Pistol and Magazine Holder insert.

3. Tighten the inside thumb screws and close your safe.



CARE AND MAINTENANCE

- Test your registered fingerprints every 6 months.
- Keep liquids away from the control panel.
- Place your safe in secure area.
- DO NOT disassemble the product. Contact Customer Care for all repairs.
- Use only NEW AA alkaline batteries.

Fingerprint Scanner

 Wipe the fingerprint scanner clean to maximize the security and performance of your safe. Use a dry cloth to remove any smudges or prints off of the fingerprint scanner after each use.

Component Part	Clean Frequency	Cleaning Method
Outside Metal	As needed	Damp cloth with soap and water. DO NOT use metal polishes, cleaners, or other chemicals.

TROUBLESHOOTING

What should i do if the batteries failed or I forget my code and the fingerprint doesn't work?

Use your backup key to open the safe. While the safe is open you can reset the code and fingerprints.

What should I do if I can not find the keys?

Contact Customer Care to make new keys for you.

How to stop the alarm status?

Use the backup key to open the door and reinstall the batteries or wait five minutes.

If you have any questions, issues, or problems; please contact Dansons Customer Care at (480) 923-9637 and provide them with your safe's serial number. They will be able to assist you with regards to your combination.



LIFETIME WARRANTY

SureLock Security Company ("SureLock", "SureLock Security", or "SureLock Security Co.") cabinets, vaults and safes, manufactured by Dansons, carry a limited warranty from the date of sale by the original owner. The warranty coverage begins on the original date of purchase and proof of date of purchase, or copy of original bill of sale, is required to validate the warranty. Customers will be subject to parts, shipping, and handling fees if unable to provide proof of the purchase or after the warranty has expired. This warranty extends to the initial consumer only and is non-transferable.

Dansons carries a three (3) year warranty against defects and workmanship on all parts. Dansons warrants that all part(s) are free of defects in material and workmanship, for the length of use and ownership of the original purchaser. Warranty does not cover damage from wear and tear, such as scratches, dents, dings, chips or minor cosmetic cracks. High temperatures, excessive humidity, water and salt are some of the substances that can affect metal coatings. For these reasons, the warranty does not cover rust or oxidization. This warranty will not apply nor will Dansons assume responsibility if your appliance has not been installed, operated, cleaned and maintained in strict accordance with this owner's manual. The warranty does not cover damage or breakage due to misuse, improper handling or modifications.

Neither Dansons, or authorized SureLock dealer, accepts responsibility, legal or otherwise, for the incidental or consequential damage to the property or persons resulting from the use of this product. Whether a claim is made against Dansons based on the breach of this warranty or any other type of warranty expressed or implied by law, the manufacturer shall in no event be liable for any special, indirect, consequential or other damages of any nature whatsoever in excess of the original purchase of this product. All warranties by manufacturer are set forth herein and no claim shall be made against manufacturer on any warranty or representation.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations of implied warranties, so the limitations or exclusions set forth in this limited warranty may not apply to you. This limited warranty gives you specific legal rights and you may have other rights, which vary from state to state.

USA: (480) 923-9637

service@surelock-security.com | www.surelock-security.com

SAFE INFORMATION

MODEL:	
SAFE SERIAL NUMBER:	
SAFE COMBINATION NUMBER:	
PURCHASED FROM:	
DATE OF PURCHASE:	

Important

DO NOT RETURN PRODUCT TO STORE

For all questions, comments, or inquiries, please contact Dansons Customer Care department.

USA: (480) 923-9637 service@surelock-security.com



WARNING: THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING DI (2-ETHYLHEXYL) PHTHALATE (DEHP) WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO: WWW.P65WARNINGS.CA.GOV

MADE IN CHINA