

PR7 Quick Start Guide





Charging

Charge your device before first use.

The camera takes approximately 3 hours to reach full charge.

To charge, simply place your PR7 in the charging dock supplied.



Please use the wall plug and charging cable supplied with the PR7. Charging via a computer USB slot or using aftermarket charging cables will increase the charging time.

The LED display on the front of the dock indicates the battery level of the PR7.

The indicator LED on the top of the PR7 will also display **RED** when charging and will turn **BLUE** when fully charged with footage on the camera and **GREEN** when fully charged with no footage on the camera.

Recording

To start recording with your PR7, slide down the Record Shutter Switch on the front of the camera marked “AUDIO VIDEO”. When recording has started the Indication LED 1 will flash **GREEN**. To cease recording, slide the shutter back up to the off position. If you have less than 15% storage capacity, then LED 1 will flash **RED**.

LED Functions

LED	Topic	Colour	Illumination Type/Frequency	Function
LED 1 -Recording Status -Prerecord	Recording	Green	Flash - fast flash	To show that the camera is recording with sufficient resource.
	Recording	Red	Flash - fast flash	Recording with memory under 15% or battery under 15%, either condition record LED flash red
	Pre-record	Blue	Flash - Slow flash	To show that pre-record is on and should only be active when the camera is not recording
LED 2 -Charging -Standby	Charging	Red	Solid	While Charging and battery 99% or below
	Charging	Blue	Solid	Fully Charged, 100% and with video in storage
	Charging	Green	Solid	Fully Charged, 100% and empty storage
	Standby	Green	Solid	To show the camera is in standby on mode when not charging
	Tag Captured	Blue	Flash once when side button is pressed	To show tag was captured successfully.
LED3 Wi-Fi LED	WiFi connection	Blue	Fast flash once every 5 seconds	To show that the camera has activated its WiFi and looking for a SSID.
	WiFi connected	Blue	Fast flash once every second	To show that the camera is connected to an SSID.
	WiFi and Transferring	Blue	Solid	To show the camera is connected to an SSID and transferring its data.
General Condition	All LEDs	All LEDs	All LEDs	No LEDs must illuminate when the PR7 is in standby off mode
New feature LED 1&2 flash 'Wig Wag'	LED 1&2	LED 1 Flash Red LED 2 Flash Green	LED 1 Flash Red LED 2 Flash Green	Memory full

Troubleshooting

To reset the camera please hold both buttons for 5 seconds. If this does not resolve the issue, please contact us at support@pinnacleresponse.com