



# How to attach the [BRIDE seat sensor built-in seat] to the passenger seat,

A When the seat sensor of the genuine seat is connected to the belt buckle

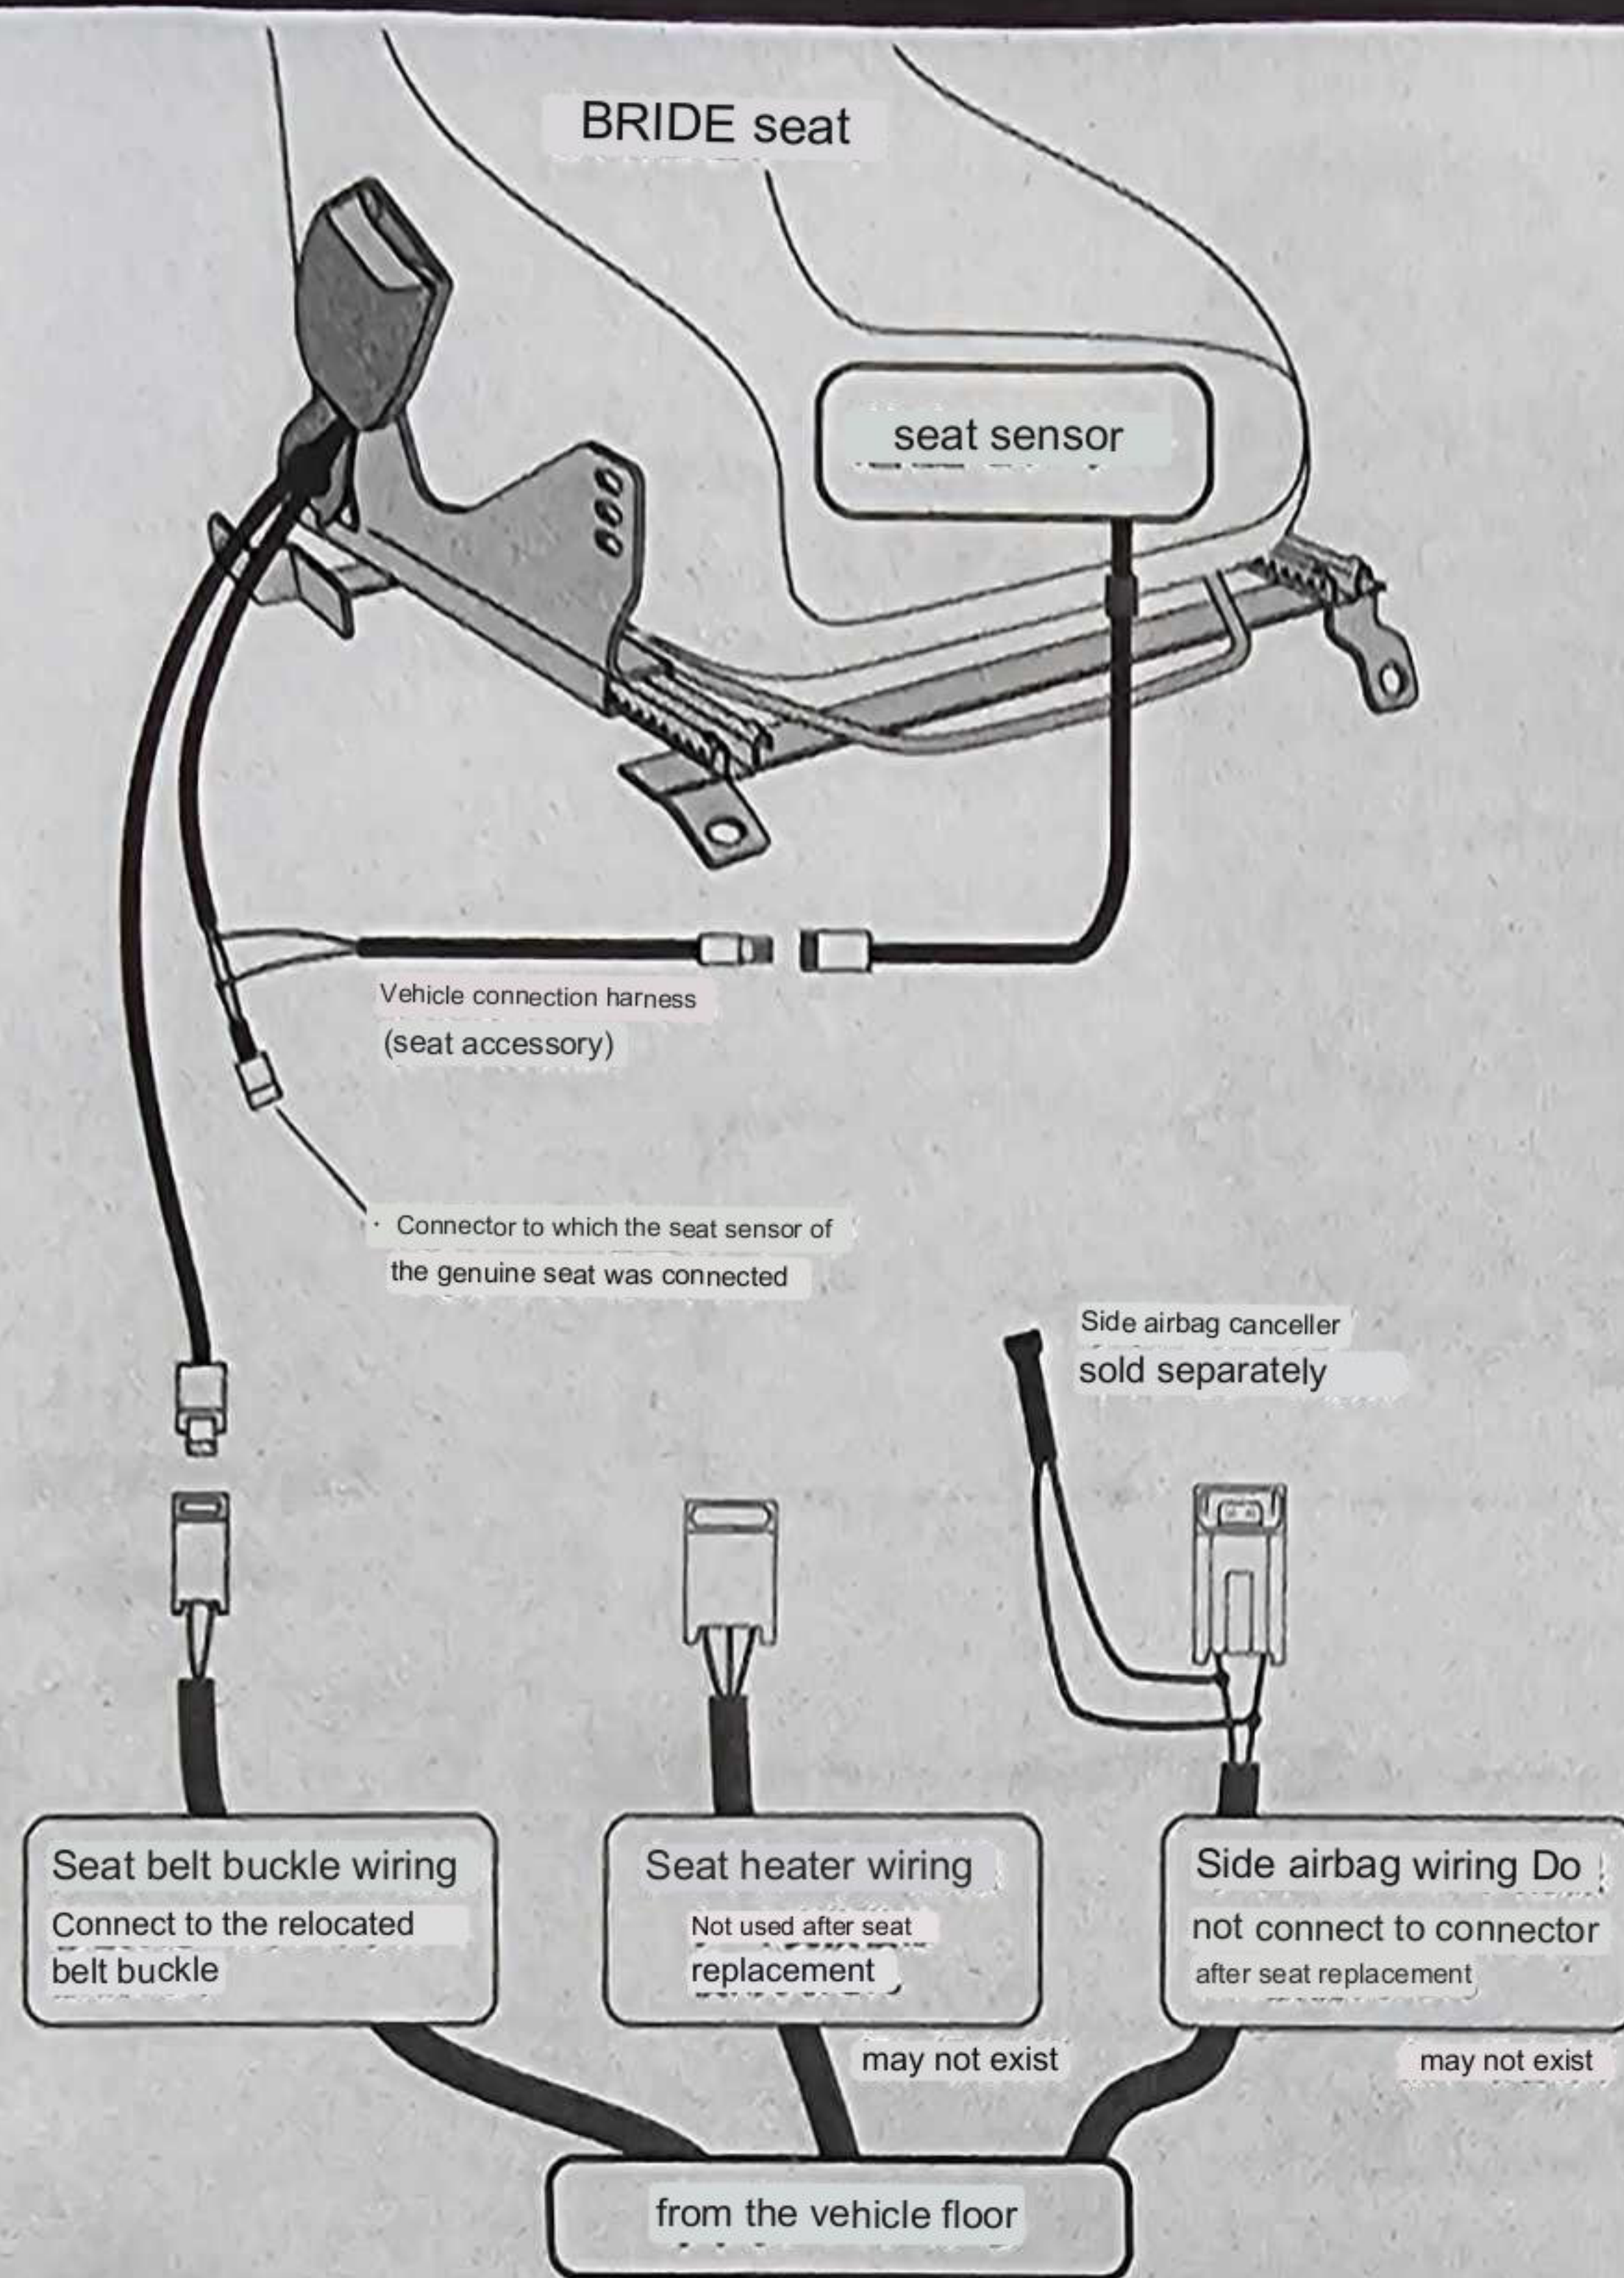

B When the seating sensor of the genuine seat is directly connected to the vehicle side

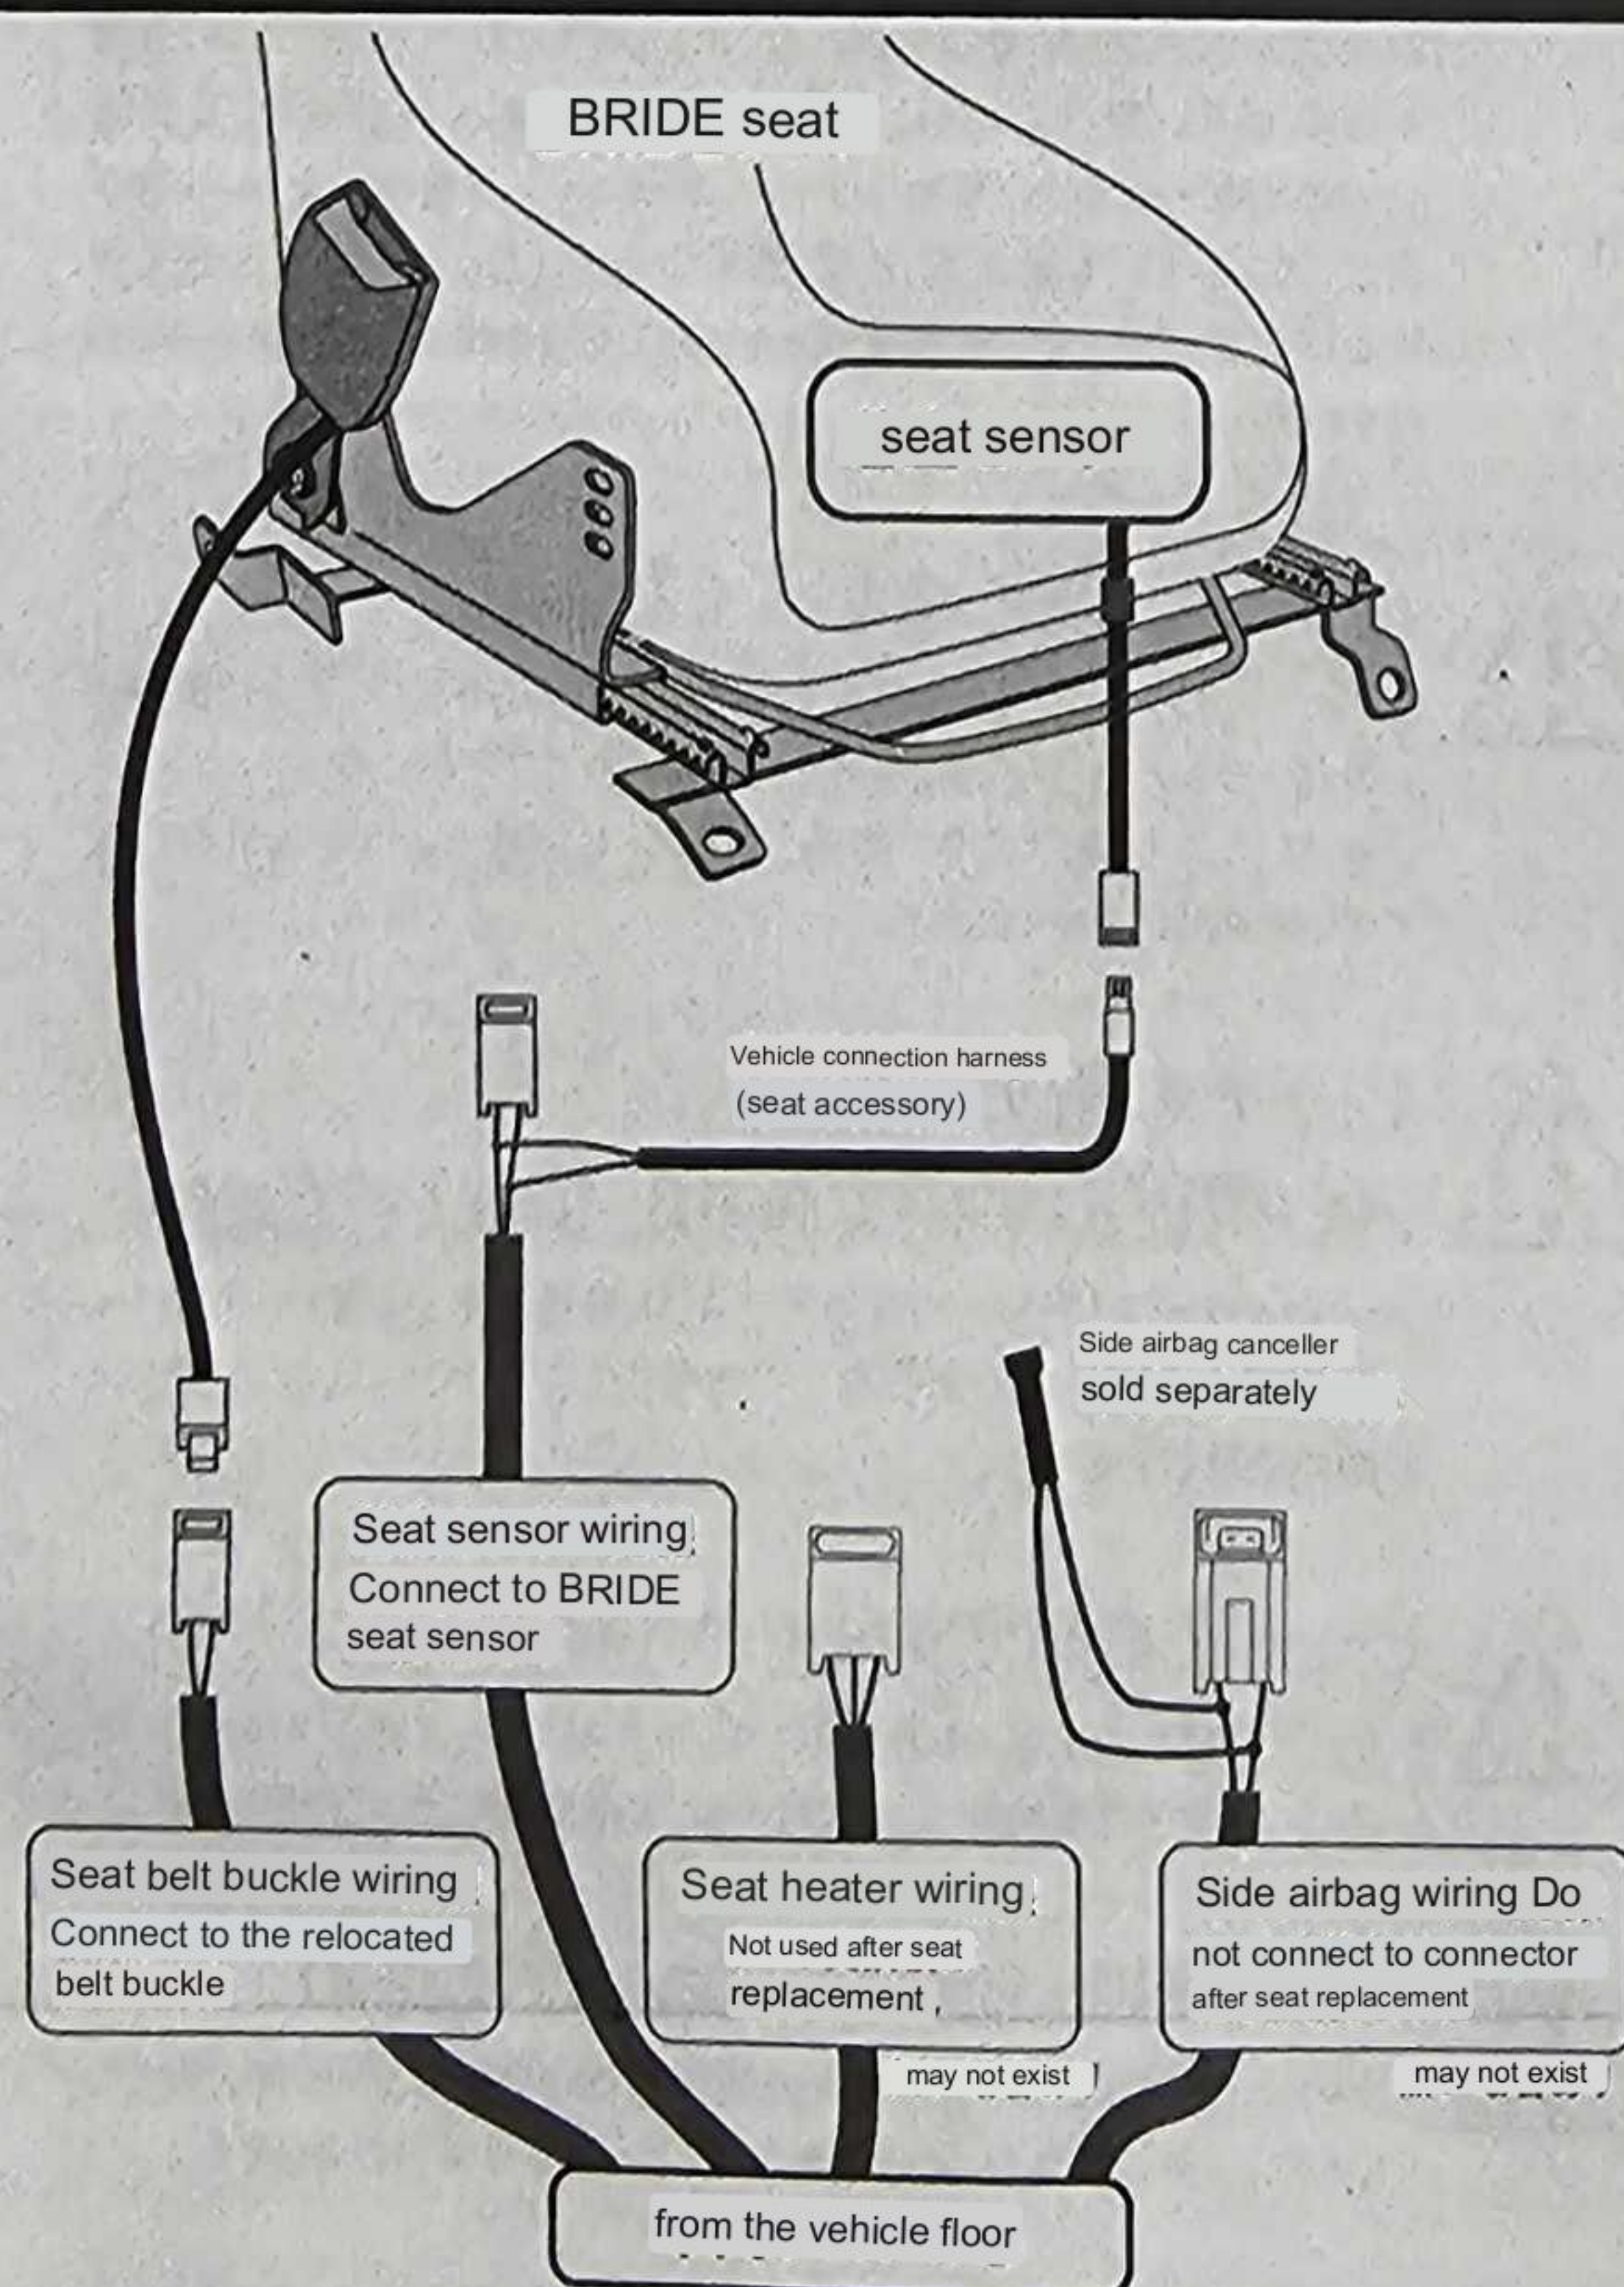

This section explains how to install the seat belt reminder (warning light for forgetting to fasten the seat belt) built into the front passenger seat of the genuine seat so that it will work properly even after replacing it with our product seat. increase. (It is not necessary to connect if the seat on the driver's side does not have a seat sensor or if the seat belt reminder is not installed.)

In the case of new models after September 2020, normal operation of the seat belt reminder is obligatory, so be sure to connect it. In the case of a seat with weight detection/sensor error detection function or a driver's seat with a built-in seat sensor, which is used in some models of imported and domestic cars, the seat sensor built into our product seat is compatible. Please note that it will not meet the vehicle inspection because it cannot be done.



**When changing seats, use the built-in BRIDE seat**

**I don't use the seat sensor.**

In most cases, genuine seats on the driver's side do not have a built-in seat sensor, so do not use the seat sensor of the BRIDE seat. The wiring on the BRIDE sheet is also not used, so bundle it up and fix it so that it does not get tangled or caught in moving parts.

**A**

**When riding**

**Always wear your seatbelt. The sensor**

may not work depending on the passenger's weight and how they sit. Always wear your seat belt when riding. Please note that the sensor may be activated by luggage etc. even if you are not in the passenger seat.

## 1. Check and connect the wiring in the passenger seat

(For the seat replacement procedure, please check the instruction manual that comes with the seat/seat rail.) Check the wiring on the back of the passenger side genuine seat that has been removed from the vehicle. Locate the wire connected to the stock seat occupancy sensor and connect the BRIDE seat occupancy sensor in place of the stock seat occupancy sensor.

There are two types of vehicle wiring. Refer to the diagrams on the left (A and B) for connection.

## 2. Check the operation of the seat sensor

After installing the BRIDE seat according to the instruction manual attached to the seat and seat rail, check the operation of the seat sensor. Turn on the ignition and check the seat belt reminder (warning light for forgetting to wear the seat belt) on the passenger side by a series of actions.

- ① Turns off when you are not sitting in the passenger seat
- ② Turns on when you get on the front passenger seat (belt not worn)
- ③ Turns off when the seat belt is worn
- ④ Turns on when you remove the seat belt
- ⑤ Turns off when you get off the passenger seat