

If you replace the genuine steering with a commercial steering wheel, if the steering direction does not straighten when it goes straight, please check the actual top position and remove the steering wheel. Next, adjust the center of the peach hole (long hole) of the adjust spacer to match the actual top position, and the button bolt Through the spring washer,



Please fix it firmly with a peach hole (long hole). (For the position of the top of the boss, the angle

It can be adjusted within 9.)

After that, please install the steering wheel.

(Note: It can not be used except for the shared boss.)

Parts bag: PE 1-20-53 Minami, Wako City, Saitama Prefecture 351-0104 TEL048-463-1627 FAX048-466-3047

Daikei Sangyo Co., Ltd.